


# 80-760-300-860-000-30-00

Assembly Includes:

CLE7625UHT-08: 7 5/8 in. (19.34 cm) 30,000 ft-lbs (40,700 Nm) Hydraulic Power Tong

BUC8625-06: 8 5/8 in. (21.91 cm) Backup

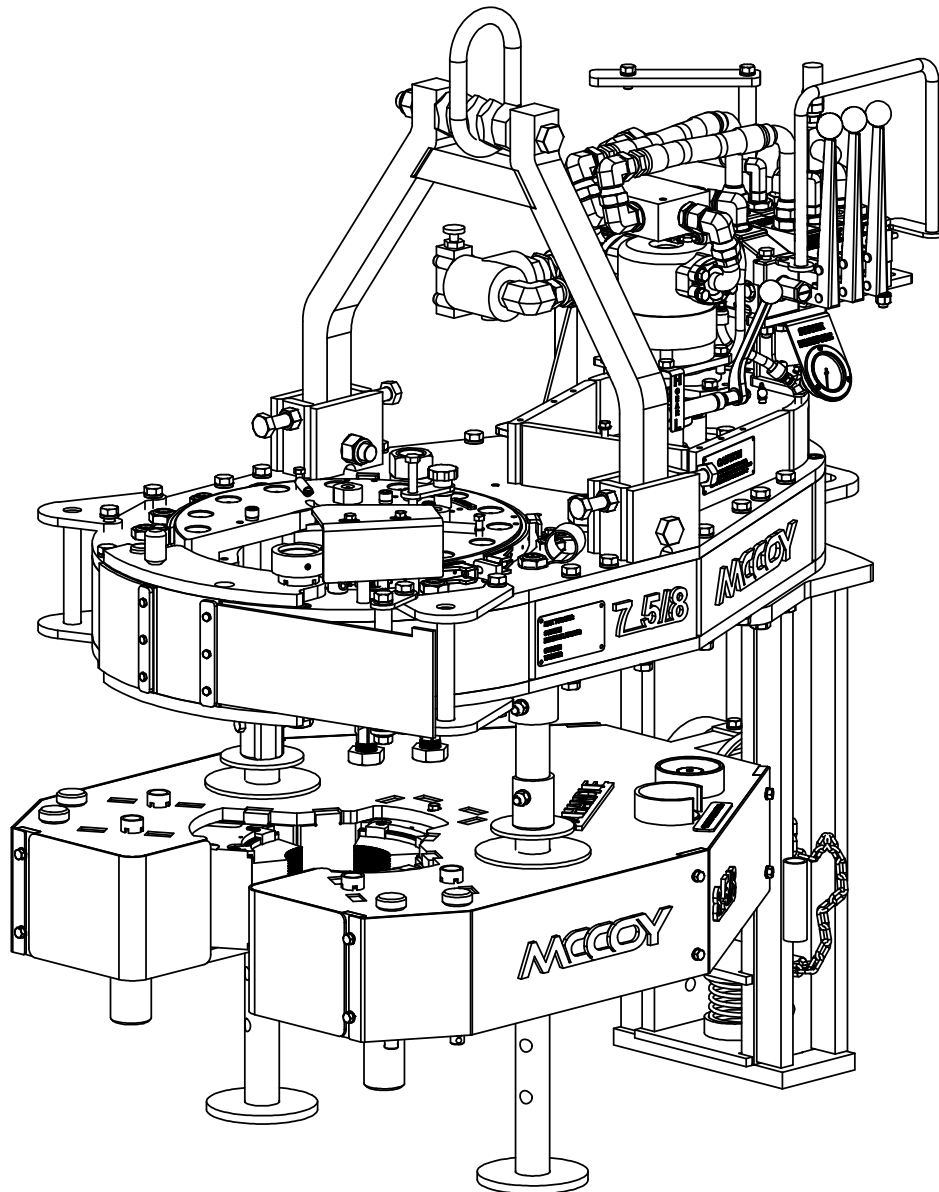

**SPECIFICATIONS | OPERATION | MAINTENANCE | PARTS**





**This page intentionally  
left blank**

# ORIGINAL INSTRUCTIONS

**THIS TECHNICAL DOCUMENT APPLIES TO THE FOLLOWING MODELS:**

**OVERALL MODEL: 80-760-300-860-000-30-00**

TONG MODEL	BACKUP MODEL	DESCRIPTION
CLE7625UHT-08	BUC8625-06	7.625 in. 30,000 ft-lbs tong, 8.625 in. backup, mounting kit, and valve package

**THIS EQUIPMENT IS EQUIPPED WITH A “DOOR SWITCH” ROTATION INTERLOCK SYSTEM. SEE SECTION 4 FOR TESTING PROCEDURES.**

McCoy has made an effort to ensure that all illustrations are accurate, but please note that some illustrations used in this manual may not exactly visually match the equipment provided.

**PATENTED & PATENTS PENDING**



**This page intentionally  
left blank**



Copyright © 2008 - 2023 McCoy Global, including its wholly owned subsidiaries, (“McCoy”), all rights reserved. This document is the property of McCoy and is supplied as reference information for users of our products. This document and the contents within are considered confidential information, not to be disclosed, copied, transmitted, transcribed in any form, or stored on any type of data storage media without the express written consent of McCoy.

McCoy has made every effort to ensure the information contained in this document is accurate and current. This manual is intended to provide equipment operation and safety instructions for your equipment. However, McCoy does not warrant or guarantee that the information is either complete or accurate in every respect and the user of the manual should consult with its McCoy sales representative for any clarifications and updates.

The user of the manual shall protect, indemnify, and hold harmless McCoy and its directors, officers, employees, and agents from and against all liability for personal injury, death, or property damage resulting directly or indirectly from the use of the information contained in this manual.

Observance of all descriptions, information and instructions set out in this manual is the full responsibility of the user. This manual is intended for guidance and informational purposes and must be used in association with adequate training and on-the-job supervision to provide safe and effective equipment use.

It is the responsibility of the user to conform to all regulations and requirements issued by an authority or agency which may affect the operation, safety or equipment integrity, that may overrule the content of this documentation.

The user will acknowledge and obey any general legal or other mandatory regulation in force relating to accident prevention, safety, and equipment integrity.

**This page intentionally  
left blank**

---

<b>Summary Of Revisions (Continued)</b>		
<b>Date</b>	<b>REV</b>	<b>Description Of Revision</b>
MAY 2023	0	Initial release

**SECTION 1: INTRODUCTION**

- 1.0 INTRODUCTION & CONTACT INFORMATION ..... 1.3
- 1.1 SCOPE ..... 1.5
- 1.2 GENERAL HEALTH AND SAFETY ..... 1.7
  - 1.2.1 Hazard Labels ..... 1.7
  - 1.2.2 General Safe Operation Guidelines ..... 1.7
  - 1.2.3 Rigging and Overhead Lifting ..... 1.9
  - 1.2.4 Maintenance Safety ..... 1.9
  - 1.2.5 Replacement Parts ..... 1.9
  - 1.2.6 Environmental Impact ..... 1.9
- 1.3 ACRONYMS AND TERMINOLOGY ..... 1.10
  - 1.3.1 Acronyms and Definitions ..... 1.10
  - 1.3.2 Terms and Definitions ..... 1.11

**SECTION 2: EQUIPMENT & LUBRICATION SPECIFICATIONS**

- 2.0 EQUIPMENT DESCRIPTION ..... 2.3
- 2.1 MAJOR COMPONENT IDENTIFICATION ..... 2.6
- 2.2 EQUIPMENT SPECIFICATIONS ..... 2.8
- 2.3 RECOMMENDED LUBRICANT SPECIFICATIONS ..... 2.9
  - 2.3.1 Hydraulic Fluid ..... 2.9
  - 2.3.2 Grease ..... 2.9

**SECTION 3: INSTALLATION & COMMISSIONING**

- 3.0 RECEIPT, INSPECTION, AND HANDLING OF EQUIPMENT ..... 3.3
- 3.1 SLING / LOAD BEARING DEVICE SAFETY ..... 3.4
  - 3.1.1 Inspection Of Load-Bearing Devices and Structures ..... 3.4
  - 3.1.2 Proper Use Of Load-Bearing Devices ..... 3.6
  - 3.1.3 Storage Of Load-Bearing Devices ..... 3.6
- 3.2 LIFT CYLINDER INSTALLATION AND SAFETY ..... 3.7
  - 3.2.1 Installation Procedure ..... 3.7
  - 3.2.2 Lift Cylinder Hydraulic Connection ..... 3.8
  - 3.2.3 Lift Cylinder Safety ..... 3.8
- 3.3 HYDRAULICS ..... 3.10
  - 3.3.1 Hydraulic Schematic ..... 3.10
  - 3.3.2 Main Hydraulic Connections ..... 3.11
- 3.4 JAW AVAILABILITY & INSTALLATION ..... 3.13
  - 3.4.1 Jaw Availability ..... 3.13
  - 3.4.2 Tong Jaw Die Replacement ..... 3.14
  - 3.4.3 Tong Jaw Installation & Removal ..... 3.14
  - 3.4.4 Backup Die Availability ..... 3.15
  - 3.4.5 Backup Die Removal/Installation ..... 3.16
- 3.5 EQUIPMENT CONFIGURATION & LEVELING ..... 3.17
  - 3.5.1 Suspension & Restraint ..... 3.17
  - 3.5.2 Tong Leveling ..... 3.18
  - 3.5.3 Compression Load Cell Configuration ..... 3.19
  - 3.5.4 Adjusting Backup Clamping Pressure ..... 3.20

**SECTION 4: OPERATION**

- 4.0 TONG OPERATION ..... 4.3
  - 4.0.1 Operator Training ..... 4.3
  - 4.0.2 Operator Safety ..... 4.3
  - 4.0.3 Shifting Gears ..... 4.4
  - 4.0.4 Backing Pin Operation ..... 4.4
  - 4.0.5 Pre-Operational Checks ..... 4.4
  - 4.0.6 Hydraulic Lever Operation ..... 4.5
  - 4.0.7 General Operational Comments ..... 4.6
- 4.1 MAKING AND BREAKING CONNECTIONS ..... 4.7

4.1.1	Making A Connection .....	4.7
4.1.2	Breaking A Connection.....	4.8
<b>SECTION 5: MAINTENANCE</b>		
5.0	GENERAL MAINTENANCE SAFETY PRACTICES .....	5.3
5.1	CLEANING.....	5.4
5.2	PREVENTIVE MAINTENANCE PRACTICES.....	5.4
5.3	HYDRAULIC SYSTEM MAINTENANCE .....	5.4
5.4	HYDRAULIC SYSTEM DE-PRESSURIZATION .....	5.5
5.5	LUBRICATION INSTRUCTIONS .....	5.5
5.5.1	Recommended Lubrication Amounts.....	5.5
5.6	ADJUSTMENTS .....	5.8
5.6.1	Brake Band Adjustment .....	5.8
5.7	ASSEMBLY PRACTICES.....	5.8
5.8	DAILY INSPECTION & MAINTENANCE CHECKLIST.....	5.11
5.9	MONTHLY MAINTENANCE CHECKLIST .....	5.13
5.10	TUBULAR CONNECTION EQUIPMENT DE-COMMISSIONING & SHIPPING.....	5.16
5.11	TUBULAR CONNECTION EQUIPMENT RE-COMMISSIONING PROCEDURE .....	5.20
5.12	SPARE PARTS RECOMMENDATIONS .....	5.21
<b>SECTION 6: TROUBLESHOOTING</b>		
6.0	TONG WILL NOT DEVELOP SUFFICIENT TORQUE .....	6.3
6.1	TONG RUNNING TOO SLOWLY .....	6.4
6.2	FAILURE OF JAWS TO GRIP PIPE .....	6.4
6.3	FAILURE OR DIFFICULTY OF TONG TO SHIFT .....	6.5
6.4	GENERAL COMMENTS .....	6.5
<b>SECTION 7: PARTS &amp; ASSEMBLIES</b>		
<b>SECTION 8: TORQUE/TURNS MANAGEMENT</b>		
8.0	BASIC TORQUE MEASUREMENT .....	8.3
8.1	TROUBLESHOOTING .....	8.4
8.2	PERIODIC INSPECTION AND MAINTENANCE .....	8.5
8.2.1	Inspection.....	8.5
8.2.2	Fluid Recharge.....	8.5
8.2.3	Repair and Calibration .....	8.5

**This page intentionally  
left blank**

Illustration 1.2.1: Equipment Handling Warnings ..... 1.8

Illustration 2.0.1: Power Tong, Backup, and Mounting Kit ..... 2.3

Illustration 2.0.2: Dimensions & Hazard Areas ..... 2.5

Illustration 2.1.1: Major Component Identification 01 ..... 2.6

Illustration 2.1.2: Major Component Identification 02 ..... 2.7

Illustration 3.2.1: Correct Installation of Positioning System ..... 3.9

Illustration 3.3.1: Hydraulic Connections 01 ..... 3.11

Illustration 3.3.2: Hydraulic Connections 02 ..... 3.12

Illustration 3.5.1: Master Link Leveling ..... 3.18

Illustration 3.5.2: Make Up Load Cell Configuration ..... 3.19

Illustration 3.5.3: Break Out Load Cell Configuration ..... 3.19

Illustration 3.5.4: Backup Pressure Adjustment ..... 3.20

Illustration 4.0.1: Hydraulic Lever Operation ..... 4.5

Illustration 5.5.1: Tong Lubrication Diagram ..... 5.6

Illustration 5.5.2: Backup Lubrication Diagram ..... 5.7

Illustration 5.6.1: Brakeband Adjustment Locations ..... 5.8

Illustration 5.10.1: Shipping Instructions - Strapping Equipment To Pallet ..... 5.19

Illustration 7.1: 80-760-300-860-000-30-00 ASSEMBLY, TONG, 7625-30K X 8625 BU, COMPRESSION ..... 7.3

Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K ..... 7.4

Illustration 7.3: 55142 ASSEMBLY, ENCODER ..... 7.14

Illustration 7.4: 14216 ASSEMBLY, PIN ..... 7.15

Illustration 7.5: 76410 ASSEMBLY, GEAR ..... 7.16

Illustration 7.6: 55191-01 ASSEMBLY, BUSHING, ROLLER ..... 7.17

Illustration 7.7: 55123-ASY ASSEMBLY, IDLER, HIGH GEAR ..... 7.18

Illustration 7.8: 55041-A ASSEMBLY, BEARING, RETAINER ..... 7.19

Illustration 7.9: 76128-02A ASSEMBLY, MOUNT, SENSOR ..... 7.20

Illustration 7.10: 76460-02 ASSEMBLY, DOOR ..... 7.21

Illustration 7.11: 76121 ASSEMBLY, RIGID, BAIL ..... 7.22

Illustration 7.12: 45091 ASSEMBLY, SHIFT ..... 7.23

Illustration 7.13: 1968-ASY ASSEMBLY, CAM FOLLOWER ..... 7.24

Illustration 7.14: 76600-01 ASSEMBLY, RETAINER, DOOR ..... 7.25

Illustration 7.15: BUC8625-06 ASSEMBLY, BACKUP, 8625 CLINCHER, COMPRESSION ..... 7.26

Illustration 7.16: BUC8620-01 ASSEMBLY, CENTER, JAW ..... 7.29

Illustration 7.17: BUC8623-01 ASSEMBLY, CYLINDER ..... 7.30

Illustration 7.18: MK7600-05 KIT, MOUNTING ..... 7.31

Illustration 7.19: BUC7670-02 ASSEMBLY, LEG ..... 7.33

Illustration 7.20: BUC7600-01 ASSEMBLY, HANGER ..... 7.34

Illustration 7.21: VP7625UHT-335SAE ASSEMBLY, VALVE PACKAGE, DVG35 ..... 7.35



**This page intentionally  
left blank**





## SECTION 1: INTRODUCTION

---



**This page intentionally  
left blank**

**1.0 INTRODUCTION & CONTACT INFORMATION**

Congratulations, and thank you for purchasing quality tubular connection equipment from McCoy Global. This unit will provide years of outstanding performance. Proper maintenance and care will extend its life and ensure years of excellent performance and reliability. The installation and commissioning, operating, and maintenance instructions in this manual will assist you in giving your equipment the care it requires. Please read the manual before installing and using your equipment. Replacement parts are readily available from McCoy Global. Should you need replacement parts, or should you experience any difficulty not covered in this manual, please contact:

**McCoy Global Canada Corporate Office**

Suite 201, 9910 39th Avenue NW  
Edmonton, Alberta, Canada  
T6E 5H8  
Phone: 780.453.8451

**McCoy Global USA**

4225 HWY 90 East  
Broussard, LA USA  
70518  
Phone: 337.837.8847  
Fax: 337.837.8839

**McCoy Global S.A.R.L**

Warehouse No. FZS1BJ03  
Jebel Ali Free Zone - South Zone  
Dubai, United Arab Emirates  
Phone: +971.4803.6900  
Fax: +971.4803.6909

**McCoy Global USA - Austin**

1300 Arrow Point Drive  
Cedar Park, TX USA  
78613  
Phone: 1.512.610.5200  
Fax: 1.512.610.5201

Email Sales: [sales@mccoyglobal.com](mailto:sales@mccoyglobal.com)  
[www.mccoyglobal.com](http://www.mccoyglobal.com)

Technical manuals are produced and published by McCoy Global Inc.. McCoy Global has made an effort ensure that all information in this document is accurate, but please note that some illustrations used in this manual may not visually match actual purchased equipment. If you believe information in this publication is missing or erroneous, please contact our Technical Publications Department.

Standard Terms and Conditions of Sale (including warranty information):

<https://www.mccoyglobal.com/download/terms-conditions-sales/>



**This page intentionally  
left blank**

**1.1 SCOPE**

This technical manual is the main document supplied by McCoy Global for the equipment identified on Page iii of the preamble. The intent of this document is to provide descriptions of the systems, installation, commissioning and operating instructions, maintenance guidelines, spare parts information, and technical drawings and schematics (where applicable).

The OEM-recommended installation, commissioning, operation, maintenance, and troubleshooting instructions are to be regarded as guidelines, and are not intended to be a comprehensive operating guide for user specific application. Due to the wide variety of operating conditions it remains the responsibility of each equipment owner to use these guidelines together with an experienced manager to develop safe operating procedures that conform to American Petroleum Institute (or equivalent) standards, applicable State/Province or local regulations, and any corporate regulations/operating practices.



**This page intentionally  
left blank**

## 1.2 GENERAL HEALTH AND SAFETY

**AUTHORIZED USE ONLY!****READ THIS MANUAL BEFORE USING EQUIPMENT**

Only authorized, trained, and competent personnel shall operate, maintain, and repair this equipment.

Fully review this manual and comply with all safety and environmental protection instructions before operating equipment.

## 1.2.1 Hazard Labels

McCoy Global uses four levels of hazard / notice labels to describe items of four levels of importance:

**DANGER** is represented by a hazard symbol coupled with a “**DANGER**” signal word, and identifies items of the highest level of risk. Failure to heed information identified by a **DANGER** symbol may result in severe bodily injury or death.

**DANGER**

**THIS IDENTIFIES AN EXTREME HAZARD OF PERSONAL INJURY OR DEATH**

A **WARNING** is represented by a hazard symbol coupled with a bold “**WARNING**” signal word, and identifies items of medium risk. Failure to heed information identified by a **WARNING** symbol may result in significant injury to personnel, catastrophic equipment failure, or harmful environmental contamination.

**WARNING**

**THIS IDENTIFIES A WARNING REGARDING POTENTIAL INJURY OR CATASTROPHIC EQUIPMENT DAMAGE**

A **CAUTION** is represented by a hazard symbol coupled with a bold “**CAUTION**” signal word, and identifies items of low risk. Failure to heed information identified by a **WARNING** symbol may result in injury to personnel or equipment damage.

**CAUTION**

**THIS IDENTIFIES A CAUTION REGARDING SAFE OPERATION OR THE POTENTIAL OF EQUIPMENT DAMAGE**

A **NOTICE** highlights information or items of importance unrelated to personal injury that may aid the user during installation, commissioning, assembly, or operation of your equipment.

**NOTICE**

**THIS HIGHLIGHTS ITEMS OF IMPORTANCE UNRELATED TO PERSONAL INJURY**

## 1.2.2 General Safe Operating Guidelines

Only authorized personnel shall operate equipment delivered by McCoy Global. Equipment shall be in a proper technical condition prior to use, and shall be used only for the purpose for which it is intended. Malfunctions or damages must be rectified before operation to ensure personnel safety and avoid equipment damage.

The user is responsible for ensuring the safety of all personnel while operating any McCoy Global product. McCoy Global is not responsible for injuries or equipment damage that arises from improper use of the equipment.

McCoy Global recommends that a hazard assessment of the work area be performed by a designated safety representative before commencing operations. A designated safety representative is responsible for verifying that all operators have adequate equipment and safety training.

**1.2.2 General Safe Operation Guidelines (Continued):**

The area surrounding the equipment operating area must be clutter-free and free from tripping hazards, or protruding objects that may snag hoses or cables. Operating surface or drill floor must be kept free of slipping hazards like grease, oil, water, etc.

Adequate lighting of the work area is required. All warnings, labels, gauges, and signs must be clearly visible.

Equipment components painted green are safe for continuous handling. Areas painted yellow and any other equipment components that rotate or move are designated as hazardous areas. Contact with those areas must be avoided during operation.



**Illustration 1.2.1: Equipment Handling Warnings**

Always wear all personal protective equipment (PPE) specified by established HSE policies. Follow all safety guidelines.

Do not open the tong door while the tong is rotating or under load. Doing so may generate a shock load that could result in catastrophic equipment failure not covered by the manufacturer's warranty, and may present a hazard to personnel on the drill floor.

## **WARNING**

**DO NOT OPEN TONG DOOR WHEN TONG IS ROTATING OR UNDER LOAD**

See Section 4 for the correct, safe procedure for testing the door switch on a McCoy Global power tong.

Never attempt to clamp to a tubular using incorrectly sized dies. Operators must always use the correct jaw size equipped with the proper dies. Use of incorrectly size dies poses a hazard to personnel and may damage equipment. Please see Section 3 of this manual for a list of compatible jaw die kits and replacement dies.

## **WARNING**

**NEVER ATTEMPT TO CLAMP ONTO TUBULARS WITH INCORRECTLY SIZED DIES**

## **WARNING**

**BY NATURE, STEEL MACHINERY WITH ROTATING AND MOVING PARTS HAS THE POTENTIAL TO GENERATE IGNITION SOURCES, IE. SPARKS. AS OUTLINED IN THIS MANUAL, SCHEDULED MAINTENANCE, LUBRICATION, TIMELY REPLACEMENT OF WORN COMPONENTS AND MOST IMPORTANTLY, ON-SITE RISK ASSESSMENTS WITH STRINGENT STANDARD OPERATING PROCEDURES ARE ALL REQUIRED TO PREVENT THE POTENTIAL OF SPARK GENERATION.**

## **WARNING**

**FAILURE TO FOLLOW THE EQUIPMENT PLACEMENT/RIG-UP PROCEDURES OUTLINED IN THIS MANUAL MAY LEAVE EQUIPMENT UNGROUNDED AND AT RISK FOR BUILDING A STATIC CHARGE. ASSESSMENT FOR PROPER GROUNDING MUST BE PERFORMED PRIOR TO OPERATION IN ORDER TO MITIGATE THE SPARK RISKS ASSOCIATED WITH STATIC DISCHARGE.**



### 1.2.3 Rigging and Overhead Lifting

McCoy Global recommends following an industry-accepted standard such as OSHA, ASME B30.9-2006, or manufacturer's guidelines when performing any rigging and overhead lifting. Use by untrained persons is hazardous. Improper use will result in serious injury or death. Do not exceed rated capacity. Slings will fail if damaged, abused, misused, overused, or improperly maintained. Never stand beneath a suspended load.

**DANGER****NEVER STAND BENEATH A SUSPENDED LOAD**

### 1.2.4 Maintenance Safety

All personnel are responsible for performing maintenance tasks in a manner that ensures worker, equipment, and environmental safety, and may require taking additional steps that are not identified in this section.

Maintenance of equipment shall be performed only by designated qualified maintenance personnel. Do not begin a maintenance task without the proper tools or materials on hand, or the proper drawings and documentation necessary.

Isolate the location of the maintenance under way to prevent unaware personnel from inadvertently exposing themselves to a hazard. Use tape, rope, or signage to clearly indicate "off-limits" area.

Where applicable ensure electrical circuits within the affected equipment are deactivated or de-energized by an authorized, qualified person and locked out if necessary. Do not disconnect a live electrical circuit unless location is known to be non-hazardous.

**DANGER****ALWAYS MEASURE ELECTRICAL CIRCUITS TO CONFIRM DEACTIVATION BEFORE PROCEEDING WITH MAINTENANCE****WARNING****WHEN REPAINTING EQUIPMENT, THE PAINT COAT BEING APPLIED SHOULD NEVER EXCEED 2MM IN THICKNESS. EXCEEDING THIS THICKNESS MAY FACILITATE STATIC CHARGE BUILDUP AND PRESENT A POSSIBLE SPARK RISK ASSOCIATED WITH STATIC DISCHARGE.**

### 1.2.5 Replacement Parts

All consumable and replacement parts must meet or exceed OEM specifications in order to maintain equipment integrity. Do not replace protective equipment such as hydraulic switches, circuit breakers, and fuses without first consulting with McCoy Global. Do not replace electrical or control hardware without consulting with McCoy Global. Using non-OEM replacement parts without the approval of McCoy Global may void equipment warranty.

### 1.2.6 Environmental Impact

McCoy Global equipment uses materials that may be harmful to the environment if improperly disposed of (hydraulic fluid, grease, fuel, electrical components, etc.). Dispose of all materials according to established environmental protection regulations in conjunction with published federal, state, provincial, and civic legislation.

**In all cases observance of the following is the full responsibility of the user:**

- **all descriptions, information and instructions set out in this manual**
- **any regulation or requirement issued by an authority or agency which may influence operation, safety or integrity of the equipment that overrules the content of this document.**
- **any legal or other mandatory regulation in force governing accident prevention or environmental protection.**

1.3 ACRONYMS AND TERMINOLOGY

1.3.1 Acronyms and Definitions

ACRONYM	DEFINITION
ANSI	American National Standards Institute
API	American Petroleum Institute
ASME	American Society of Mechanical Engineers
ATEX	Appareils destinés à être utilisés en <b>AT</b> mosphères <b>EX</b> plosibles
BDC	Bottom dead centre
CBU	<b>CLINCHER</b> <sup>®</sup> -style backup
CE	Conformité Européenne
CCW	Counter-clockwise
COG	Centre of gravity
CW	Clockwise
DS	Driller's side
EU	European Union
HMI	Human-machine interface
HPU	Hydraulic power unit
HSE	Health, Safety, and Environmental (context: protection)
ID	Inside diameter
ISO	International Organization for Standardization
JDK	Jaw die kit
JSA	Job safety assessment
LH	Left-hand
LJBU	LOCKJAW <sup>™</sup> backup
MBU	"McCoy style" backup
N/A	Not applicable or Not available (context-dependant)
NLGI	National Lubricating Grease Institute
ODS	Off-driller's side
OEM	Original equipment manufacturer
OSHA	Occupational Safety and Health Administration
OD	Outside diameter
PLC	Programmable Logic Controller
PPE	Personal Protective Equipment
PSI	Pounds per square inch (pressure)
RH	Right-hand
VAC	Volts, alternating current
VDC	Volts, direct current
WLL	Working Load Limit

## 1.3.2 Terms and Definitions

TERM	DEFINITION
ATEX-certified	Conforms with the EU “ATEX” directive for equipment operated within an explosive atmosphere.
Backup	The component of a tong-backup arrangement that mechanically attaches to the stationary side of a tubular connection and provides resistance to the tong when making up or breaking out a joint.
Box	The female side of a pipe connection
Break Out	Loosening, un-threading, and disconnecting a connection (typically a tubular connection). The term may also apply to a general threaded connection.
CE-marked	CE compliant. Conforms with the essential requirements of the applicable Conformité Européenne directives.
Clamp	To grasp the stationary side of a pipe joint with a backup.
Die	A component of a jaw die kit that provides the mechanical contact between the tong and the tubular.
Joint	Also called a “pipe joint”. A threaded tubular connection.
Load Cell	A hydraulic device that transmits a proportional signal to a torque gauge for the purpose of measuring connection torque.
Make Up	Threading together a connection (typically a tubular connection) and tightening to a specified torque. The term may also apply to a general threaded connection.
Pin	The male side of a pipe connection
Ring Gear	The rotating component, mechanically coupled to a hydraulic motor through a gear train, which provides rotation to the pin-side of a tubular connection through the use of jaw assemblies
Door Switch	A device mechanically connected to the door of a hydraulic power tong that uses hydraulic switching to prevent rotation of the cage plates when the tong door is open.
Sling	A rigid or non-rigid device used to hoist a piece of equipment using a crane.
Tank	Hydraulic fluid reservoir
Tong	The component of a tong-backup arrangement that mechanically attaches to the tubular connection and rotates the tubular to make up or break out a connection
Un-clamp	To release the stationary side of a pipe joint with a backup.
MTT™	Data acquisition and torque/turns management system manufactured by McCoy Global
Headstock	The tong assembly on a horizontal bucking unit
Tailstock	The backup assembly on a horizontal bucking unit



**This page intentionally  
left blank**



## SECTION 2: EQUIPMENT & LUBRICATION SPECIFICATIONS

---




**This page intentionally  
left blank**

## 2.0 EQUIPMENT DESCRIPTION

The McCoy 80-760-300-860-000-30-00 is a hydraulically operated power tong and backup capable of making up and breaking out tubular connections of varying sizes at a wide range of torques (see page 2.8 for equipment specifications).

Features of the McCoy 80-760-300-860-000-30-00 tong and backup include:

- Door Switch System

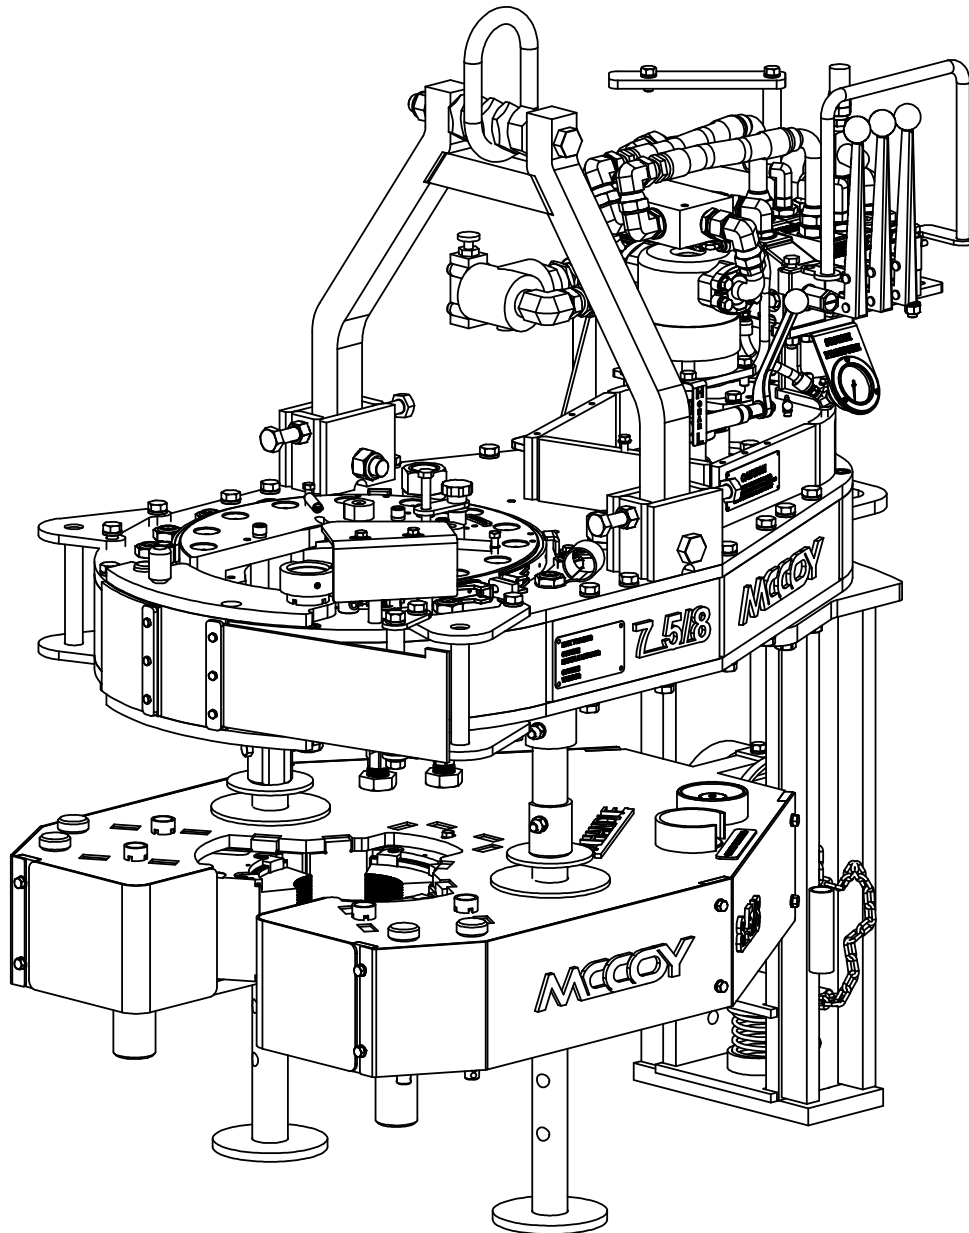

**Illustration 2.0.1: Power Tong, Backup, and Mounting Kit**




**This page intentionally  
left blank**



2.0 EQUIPMENT DESCRIPTION (CONTINUED):


**⚠ WARNING**

IN ADDITION TO THE HAZARD AREAS OF THIS EQUIPMENT THAT ARE COATED YELLOW, THE ROTATING CAGE PLATE ASSEMBLY POSES A SIGNIFICANT HAZARD WHEN THE EQUIPMENT IS ACTIVE. KEEP HANDS CLEAR OF THE CAGE PLATE WHEN EQUIPMENT IS ENERGIZED. SAFE AREAS TO HANDLE WHILE THE EQUIPMENT IS ENERGIZED ARE INDICATED BY GREEN COATING

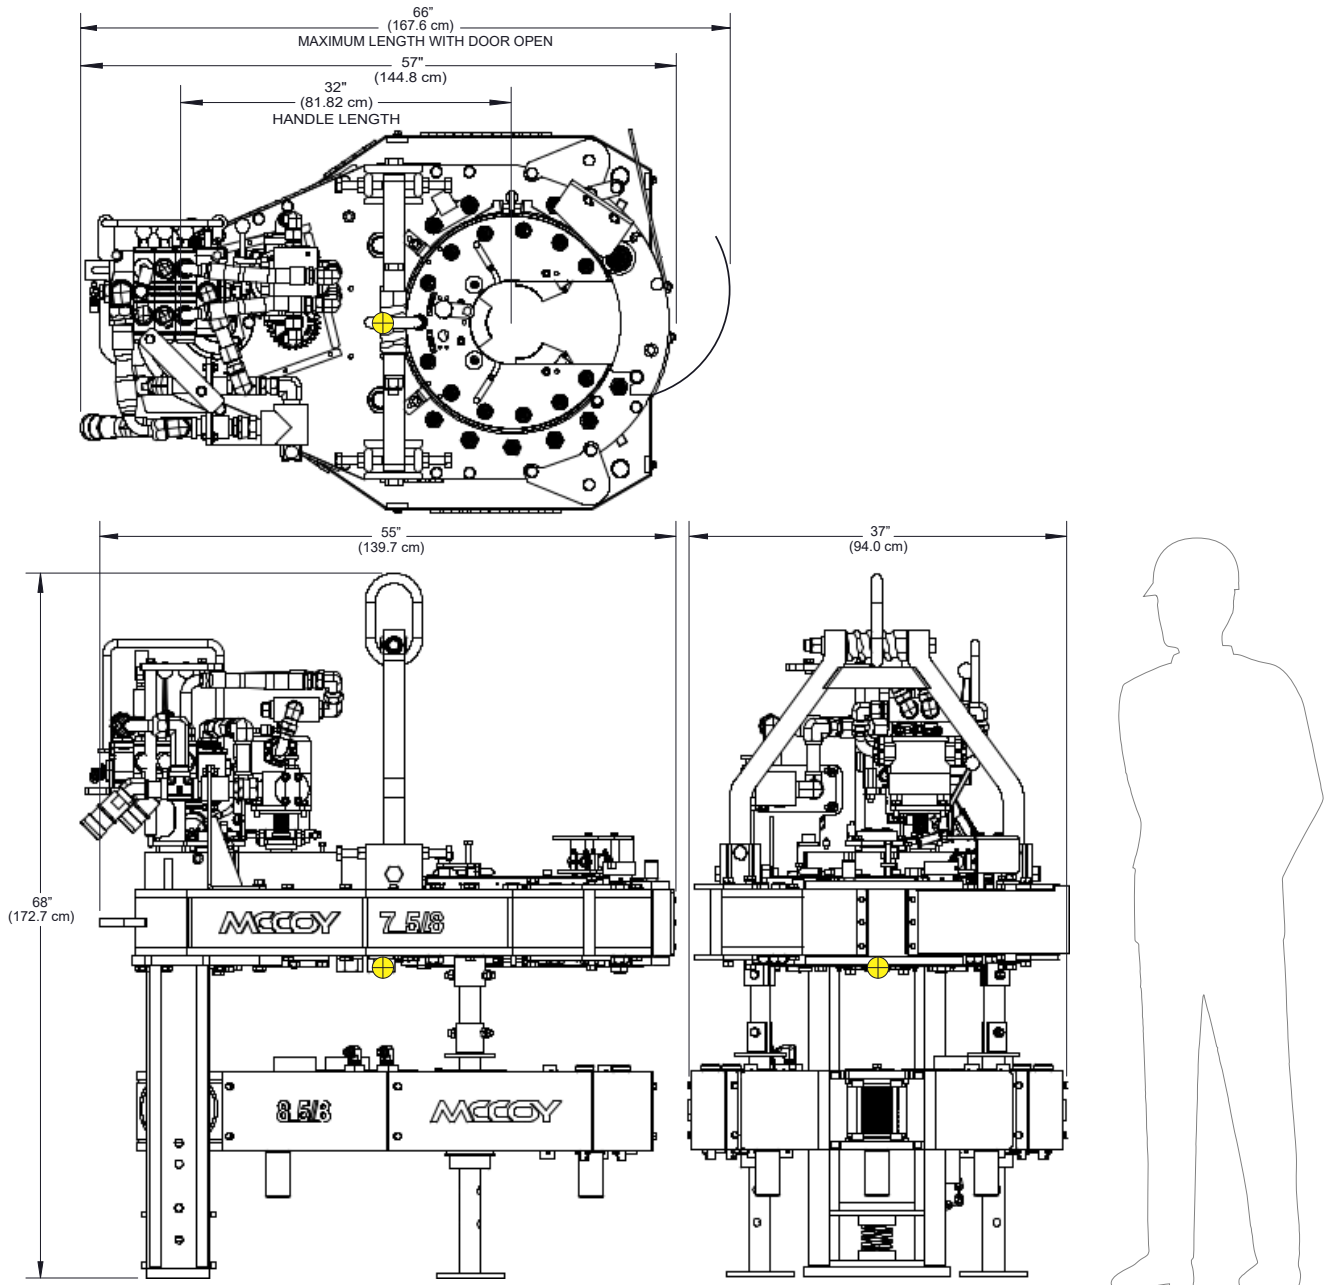

**Illustration 2.0.2: Dimensions & Hazard Areas**


2.1 MAJOR COMPONENT IDENTIFICATION

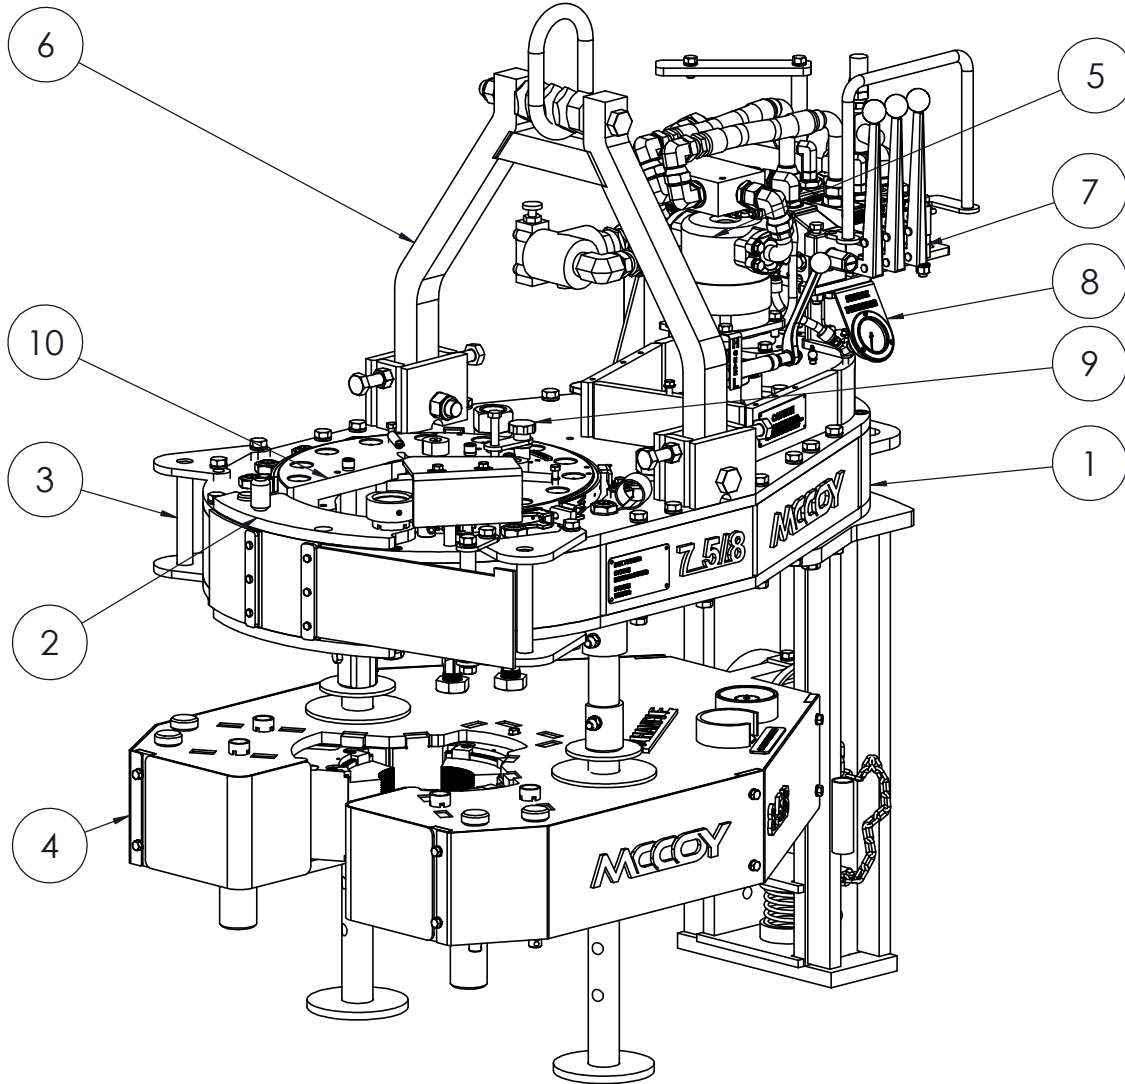

ITEM	DESCRIPTION
1	TONG ASSEMBLY
2	TONG DOOR ASSEMBLY
3	TONG HANDLE
4	BACKUP ASSEMBLY
5	HYDRAULIC MOTOR
6	BAIL ASSEMBLY
7	HYDRAULIC VALVE BANK
8	TONG HYDRALUC PRESSURE GAUGE
9	REVERSING PIN ASSEMBLY
10	CAGE PLATE ASSEMBLY

**Illustration 2.1.1: Major Component Identification 01**

2.1 MAJOR COMPONENT IDENTIFICATION (CONTINUED):

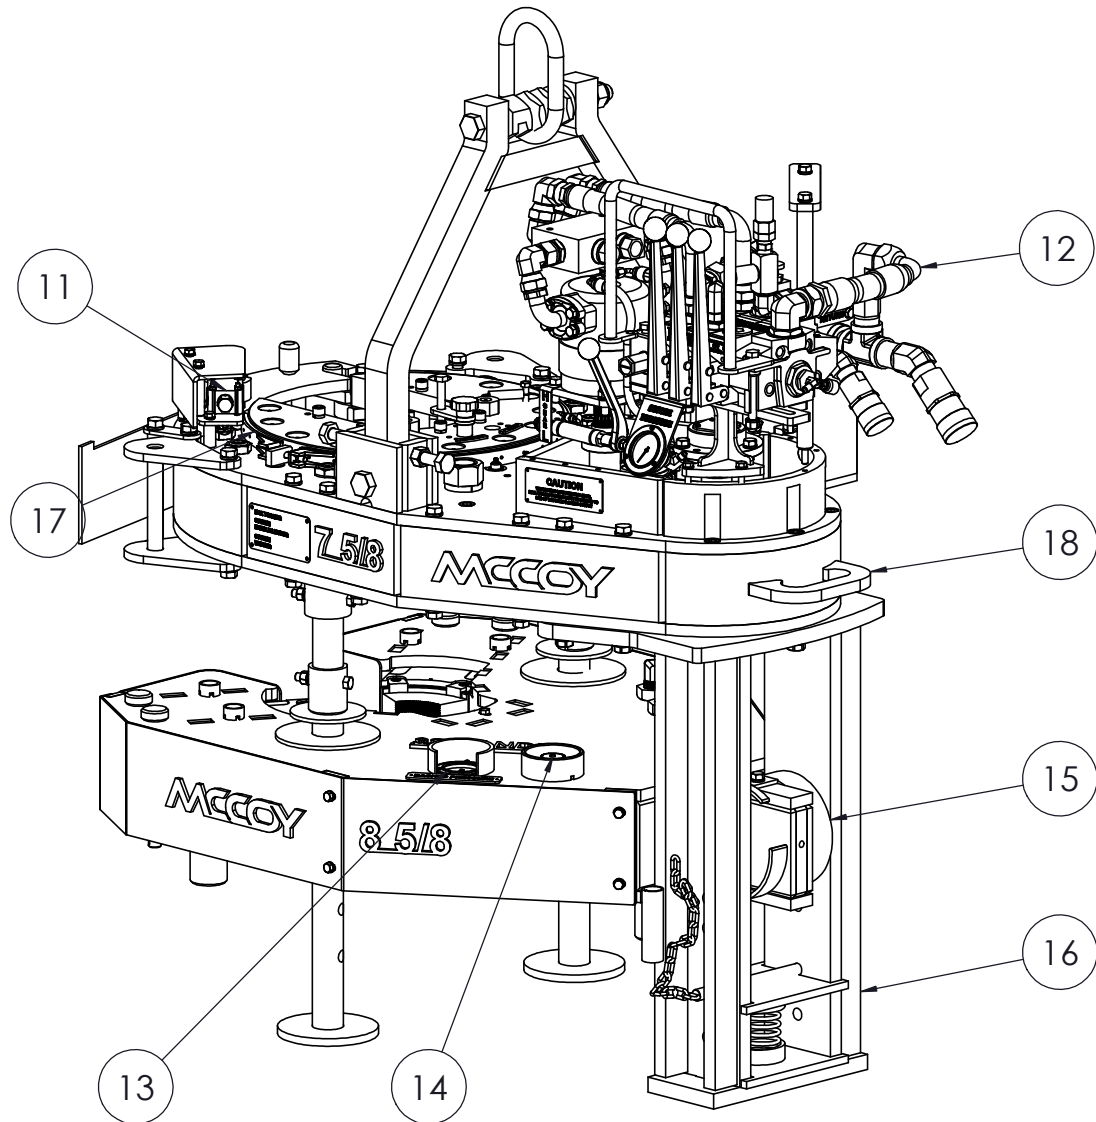

ITEM	DESCRIPTION
11	TONG DOOR SWITCH
12	HYDRAULIC PLUMBING
13	BACKUP PRESSURE GAUGE
14	BACKUP PRESSURE ADJUSTMENT
15	LOAD CELL (NOT SHOWN)
16	MOUNTING KIT
17	BRAKE BAND ASSEMBLY
18	SNUB LINE CONNECTION

**Illustration 2.1.2: Major Component Identification 02**

2.2 EQUIPMENT SPECIFICATIONS

TONG SPECIFICATIONS		
MAX TORQUE (FT-LBS/NM)	30,000	40,700
BACKUP ARM LENGTH (INCH/CM)	32.0	81.3
MASS (LBS/KG)	3,060	1,520
TORQUE (FT-LBS/NM, ESTIMATED)		
AT PRESSURE (PSI/BAR):	2,700	186
Hi/Full	4,300	5,800
Lo/Full	30,000	40,700
SPEED (RPM, ESTIMATED)		
AT FLOW RATE (GPM/LPM):	60	227
Hi/Full	65	
Lo/Full	9	

7-5/8" UHT TONG & 8-5/8" BACKUP DIE SERIES MAX TORQUE CAPACITY IN FT-LBS @2700 PSI			
PIPE DIAMETER	DOVETAIL DIES	GRITFACE DIES	STEEL DIES
8 3/4 *	30,000	30,000	30,000
8 5/8 **			
7 5/8 ***			
DOWN TO 7		28,000	27,000
DOWN TO 6 5/8		23,000	
DOWN TO 5 1/2	28,000	15,000 (LOW FRICTION) ****	24,000
DOWN TO 5		15,000 (LOW FRICTION) ****	15,000 (LOW FRICTION) ****
DOWN TO 3 1/2	15,000 (LOW FRICTION) ****	12,000 (LOW FRICTION) ****	14,000 (LOW FRICTION) ****
DOWN TO 2 7/8	15,000 (LOW FRICTION) ****	10,000 (LOW FRICTION) ****	11,000 (LOW FRICTION) ****

- \* MAXIMUM BACKUP GRIP SIZE OF 8 3/4" IS ACHIEVED USING SDI86 DIES
- \*\* MAXIMUM BACKUP PIPE SIZE IS 8 5/8"
- \*\*\* MAXIMUM TONG SIZE IS 7 5/8"
- \*\*\*\* IT IS ACCEPTABLE TO USE LOW FRICTION JAWS AS LONG AS THE TORQUE IS LIMITED TO 15,000 FT. LBS.

<b>Maximum Hydraulic Requirements</b>	60 GPM (227 LPM)
	2,700 PSI (18.62 MPa)
<b>Dimensions</b>	See page 2.5
<b>Maximum Elevator Diameter</b>	Unlimited (tong comes off pipe)
<b>Space Between Tong Die and Backup Die</b>	7.875" - 18.625"
<b>Gear Reduction Ratio, Turns Encoder Mount to Ring Gear</b>	1:24
<b>Recommended Spring Hanger</b>	SH-060

**2.3 RECOMMENDED LUBRICANT SPECIFICATIONS****2.3.1 Hydraulic Fluid**

McCoy Global recommends using high-quality hydraulic fluid containing rust & oxidation inhibitors and foam suppressant that meets the following requirements. Operating this equipment using hydraulic fluid that does not meet these requirements greatly accelerates equipment damage due to (but not limited to) premature component wear, premature seal failure, cavitation, and fluid starvation.

 **CAUTION**

**OPERATING THIS EQUIPMENT USING HYDRAULIC FLUID THAT DOES NOT MEET THE LISTED REQUIREMENTS GREATLY ACCELERATES EQUIPMENT DAMAGE.**

Hydraulic Fluid Standards	
Characteristic	Requirement
Maximum viscosity at cold startup	<1000 cSt (<4600 SUS)
Operating viscosity range	100 to 16 cSt (170 to 80 SUS)
Minimum viscosity (intermittent periods only)	10 cSt (60 SUS)
Hydraulic fluid operating temperature range	86 - 140°F (30 - 60°C) - measured in main reservoir
Maximum fluid temperature	180°F (82°C)
Fluid cleanliness	Filtered to ISO 4406:1999 (17/15/13)

Hydraulic fluid should be chosen with due regard to expected climactic conditions and equipment load. Note that this equipment may have been tested using hydraulic fluid that does not meet operational requirements beyond those specified in the above table. Therefore, McCoy recommends purging and flushing the equipment's hydraulic system before connecting to a hydraulic supply.

 **NOTICE**

**MCCOY GLOBAL RECOMMENDS PURGING AND FLUSHING THE EQUIPMENT'S HYDRAULIC SYSTEM BEFORE CONNECTING TO A HYDRAULIC SUPPLY.**

**2.3.2 Grease**

McCoy Global recommends use of a high-quality EP multi-purpose grease with an NLGI consistency grade of "2" and an NLGI performance grade of "GC-LB" for general lubrication of bearings and metal-to-metal contact.

McCoy Global recommends thoroughly greasing the equipment before first use as per the lubrication instructions in Section 5.



**This page intentionally  
left blank**



**SECTION 3: INSTALLATION & COMMISSIONING**



**This page intentionally  
left blank**



## 3.0 RECEIPT, INSPECTION, AND HANDLING OF EQUIPMENT

**⚠ CAUTION**

**EQUIPMENT SHOULD BE INSPECTED FOR SHIPPING DAMAGE UPON RECEIPT. AND TESTED EQUIPMENT BEFORE RELEASING TO AN OPERATIONAL ENVIRONMENT.**

Upon receipt, inspect packaging materials for shipping damage. Record all shipping damage on the shipping manifest and ensure the shipping company and McCoy are immediately contacted.

Remove all protective shipping materials and perform a visual inspection of the equipment. Any damage to equipment must be repaired before connecting the equipment to a hydraulic power source.

McCoy recommends connecting the equipment to a hydraulic power source and testing complete functionality in a controlled environment before releasing to an operational environment.

**⚠ CAUTION**

**MCCOY GLOBAL RECOMMENDS TESTING EQUIPMENT BEFORE RELEASING TO AN OPERATIONAL ENVIRONMENT.**

This equipment may have been factory tested using hydraulic fluid that does not meet operational requirements of the end user. Variances in ambient temperature may have an effect on factory adjusted components. McCoy Global recommends purging and flushing the hydraulic system before connecting to third party hydraulic power units.

Perform the following steps as a general functionality test:

1. Perform a complete lubrication of the equipment.
2. Test the door switch function.
3. Test and (if required) adjust the operation of the brake bands.
4. Perform a complete functional test of the equipment. Note that rotating the power tong(s) without an applied load does not accurately reflect the performance of the tong. McCoy Global recommends performing a “stump test” in order to determine full functionality of the equipment under load before releasing to an operational environment, including successfully reaching the specified torque of the equipment.

## 3.1 SLING / LOAD BEARING DEVICE SAFETY


**DANGER**

A “LOAD-BEARING DEVICE” IS A CHAIN SLING, RIGID SLING, SPREADER BAR ASSEMBLY, FRAME, OR ANY OTHER DEVICE THAT BEARS THE PARTIAL OR TOTAL WEIGHT OF THE EQUIPMENT FOR WHICH THIS MANUAL HAS BEEN PRODUCED

THE LOAD-BEARING DEVICE SUPPLIED BY MCCOY GLOBAL IS DESIGNED TO SUPPORT THE EQUIPMENT DESCRIBED IN THIS MANUAL. MCCOY GLOBAL WILL NOT GUARANTEE THE ABILITY OF THE LOAD-BEARING DEVICE TO SUPPORT ANY OTHER PART, ASSEMBLY OR COMBINATION OF PARTS AND ASSEMBLIES. MCCOY GLOBAL WILL NOT GUARANTEE THE ABILITY OF THE LOAD-BEARING DEVICE TO LIFT OR SUPPORT THE EQUIPMENT DESCRIBED IN THIS MANUAL IF THERE ARE ANY MODIFICATIONS TO THE LOAD-BEARING DEVICE, OR ANY ADDITIONS TO THE EQUIPMENT DESCRIBED IN THIS MANUAL THAT ADD WEIGHT TO THE EQUIPMENT, UNLESS SUPPLIED BY MCCOY GLOBAL.


**WARNING**

WHEN RE-ASSEMBLING LOAD-BEARING DEVICES (CHAIN SLINGS, RIGID SLINGS, BACKUP LEGS, ETC.) NOTE THAT THE ASSOCIATED FASTENERS MUST BE TIGHTENED TO THE CORRECT TORQUE SPECIFIED FOR THAT SIZE OF FASTENER (SEE MAINTENANCE SECTION). ANY THREADED FASTENER IN A LOAD-BEARING DEVICE MUST BE SECURED WITH RED OR BLUE LOCTITE™.

REPLACEMENT FASTENER (BOLTS, NUTS, CAP SCREWS, MACHINE SCREWS, ETC.) USED DURING MAINTENANCE OR OVERHAUL MUST BE GRADE 8 OR EQUIVALENT UNLESS OTHERWISE SPECIFIED.

McCoy Global recommends following an industry-accepted standard such as OSHA, ASME B30.9-2006, or manufacturer's guidelines when performing any rigging and overhead lifting. Use by untrained persons is hazardous. Improper use will result in serious injury or death. Do not exceed rated capacity. Slings will fail if damaged, abused, misused, overused, or improperly maintained.

- Use only Grade 80 or Grade 100 alloy chain for overhead lifting applications.
- Working Load Limit (WLL) is the maximum allowable load in pounds or kilograms which may be applied to the load-bearing device, when the device is new or in “as new” condition, and when the load is uniformly and directly applied. The WLL must never be exceeded.
- The Working Load Limit or Design factor may be affected by wear, misuse, overloading, corrosion, deformation, intentional alterations, sharp corner cutting action and other use conditions.
- Shock loading and extraordinary conditions must be taken into account when selecting alloy chain slings.

See OSHA Regulation for Slings 1910.184, ANSI/ASME B30.9-“SLINGS”, ANSI/ASME B30.10-“HOOKS” and ANSI/ASME B30.26 “RIGGING HARDWARE” for additional information.

### 3.1.1 Inspection Of Load-Bearing Devices and Structures

McCoy strongly recommends the following practices:

A complete inspection of new load-bearing devices and attachments shall be performed by a qualified, designated person prior to initial use. Each component shall be examined individually, taking care to expose and examine all surfaces including the inner link surface. In addition, daily inspection of fastenings and attachments shall be performed by a designated person. If damage or defects are found at either inspection, the damaged or defective component shall be quarantined from service until it can be properly repaired or replaced.

Removal Criteria:

A load-bearing device shall be removed from service if conditions such as the following are present:

- Cracks or breaks
- Evidence of tampering is seen - for example, tamper-proof nuts are missing.
- Signs of impact on load-bearing components, including spreader bars, lifting lugs, rigid slings & rigid sling weldments, and legs & leg mounts.
- Broken or damaged welds.
- Excessive wear, nicks, or gouges.
- Excessive pitting of the components due to rust and/or corrosion

**3.1.1 Inspection Of Load-Bearing Devices and Structures (Continued):**

Inspect all lugs and fixing points for signs of elongation and/or bending, or for material build-up around the hole. Repair or replace components that appear distorted. Ensure all hardware is tight and in good condition. Replace missing hardware if necessary. All hardware must be free of rust and corrosion. Additional inspections shall be performed where service conditions warrant (a maritime environment, for instance). Periodic inspection intervals shall not exceed one year. The frequency of periodic inspections should be based on:

- Frequency of use of the load-bearing device.
- Severity of service conditions
- Experience gained on the service life of load-bearing devices used in similar circumstances.

General guidelines for the interval are:

- Normal Service - yearly
- Severe Service - monthly to quarterly
- Special Service - as recommended by a qualified person

McCoy recommends that all users of lifting or load-bearing assemblies establish inspection criteria, or adopt a relevant inspection standard assigned to a competent inspection body. McCoy recommends an inspection schedule similar to that listed in the following table.

Time / Interval	Test / Examination		
	Proof Load Test(s) <sup>1</sup>	Non-Destructive Examination (NDE) of Lifting Points	Thorough Visual Examination
Initial Certification By McCoy	YES	YES	YES
Interval Not Exceeding 6 Months	NO	At discretion of inspection body	YES
Interval Not Exceeding 12 Months	NO	YES	YES
Interval Not Exceeding 24 Months	YES	YES	YES
Following Substantial Repair or Alteration <sup>2</sup>	YES	YES	YES

1. Load test(s) as established by end user's inspection criteria. McCoy recommends testing to two times MGW (maximum gross weight) or in the case of spring hangers, as indicated in Section 5.
2. For the purposes of this standard, a substantial repair or modification is defined as any repair and/or modification that has been carried out which may, in the opinion of the inspection body, affect the load-bearing elements of the container or lifting device, or elements that contribute directly to its structural integrity.

 **WARNING**

**IF THE LOAD-BEARING DEVICE HAS BEEN MECHANICALLY DAMAGED OR OVERLOADED, IT MUST BE IMMEDIATELY REMOVED FROM SERVICE AND QUARANTINED UNTIL IT HAS BEEN RECERTIFIED.**

Record the inspection dates and results in a visible location, including a description of the condition of the load-bearing equipment. To avoid confusion, do not list the date of the next test or examination, only the most recent.

 **DANGER**

**THIS INFORMATION IS TO BE USED AS A GENERAL GUIDELINE ONLY. DETERMINING SITE SPECIFIC INSPECTION FREQUENCY AND METHODOLOGY IS ULTIMATELY THE RESPONSIBILITY OF THE END USER.**

### 3.1.2 Proper Use Of Load-Bearing Devices

Whenever any load-bearing device is used, the following practices shall be observed.

- Load-bearing devices that are damaged or defective shall not be used.
- Slings shall not be shortened with knots or bolts or other makeshift devices.
- Sling legs shall not be kinked.
- Load-bearing devices shall not be loaded in excess of their rated capacities.
- Slings shall be securely attached to their load.
- Load-bearing devices shall be protected from snagging, and shall not be further obstructed by any object.
- Suspended loads shall be kept clear of all obstruction.
- All employees shall be kept clear of loads about to be lifted and of suspended loads.
- Hands or fingers shall not be placed between the sling and its load while the sling is being tightened around the load.
- Shock loading is prohibited.

Do not stand directly under a load during lifting.

### 3.1.3 Storage Of Load-Bearing Devices

Proper storage of out-of-service load bearing devices is important to ensure full integrity of the device once it is returned to service. McCoy recommends observing the following practices.

- Wipe off all excess grease. Use a solvent-based cleaner on rags to wipe all external surfaces to remove residual grease or hydraulic fluid. Once the outside surfaces have been de-greased, wipe all external surfaces with clean water to remove residual solvent.
- McCoy recommends that an anti-corrosive agent such as Tectyl<sup>®</sup> 506 be applied to all external surfaces. Refer to manufacturer data sheets for proper application and safety information. Allow the anti-corrosive coating ample time to dry - refer to manufacturer data sheets for drying times at room temperature.
- Store in a clean, dry location. When returning to service, note that a full inspection of the device must be performed.

### 3.2 LIFT CYLINDER INSTALLATION AND SAFETY

Follow these instructions for safely and securely installing the lift cylinder. Where not supplied, use shackles that are safely rated for the maximum lifting capacity of the spring hanger.



## WARNING

**TEST LIFT CYLINDER BEFORE INSTALLATION. REFER TO THE LIFT CYLINDER TECHNICAL MANUAL FOR DETAILED TESTING PROCEDURES, OPERATING PROCEDURES, AND DETAILED SAFETY GUIDELINES.**

**IF USING A SPRING HANGER, ITS WEIGHT MUST BE ACCOUNTED FOR WHEN CALCULATING TOTAL SUSPENDED WEIGHT.**

#### 3.2.1 Installation Procedure

1. Attach an appropriate shackle to the fixed end of the spring hanger. Ensure the nut securing the shackle bolt is secondarily retained by a cotter pin.
2. Use a crane to hoist the spring hanger by the shackle installed in the previous step. Install a second shackle to the rod end of the spring hanger. Ensure the nut securing the shackle bolt is secondarily retained by a cotter pin.
3. Lay the lift cylinder on its side near the hoisted spring hanger.
4. Insert the shackle on the bottom of the spring hanger and secure in place.
5. Hoist the lift cylinder and spring hanger.
6. If not already done, remove the supplied shackle from the lift cylinder.
7. Place the shackle around the master lifting link on the tong sling, and re-attach the shackle to the lift cylinder. Ensure the nut securing the shackle bolt is secondarily retained by a cotter pin.

### 3.2.2 Lift Cylinder Hydraulic Connection

Inspect the hydraulic hose before connection, ensuring the line is free of ruptures, cracks, cuts, or other damage. Inspect the female quick-connect fitting to ensure it is free from damage. Connect the female quick-connect on the lift cylinder hydraulic hose to the male quick-connect fitting attached to the needle valve on the tong valve bank. Once the fitting has snapped into place give the hydraulic line a light tug upwards to ensure the fitting is securely seated.

If not already done, connect the main hydraulic supply to the power tong. Energize the hydraulic supply to the power tong.

Lift the power tong approximately three inches off the work surface, and suspend the tong for approximately thirty seconds. Following the suspension alternately lift and lower the tong slightly to confirm that lift and lower functions each operate correctly.

### 3.2.3 Lift Cylinder Safety

## WARNING

**A CLEARLY IDENTIFIED REMOTE POWER PACK EMERGENCY STOP MUST BE INSTALLED IN THE IMMEDIATE VICINITY OF THE TONG OPERATOR.**

McCoy Global recommends following an industry-accepted standard such as OSHA, ASME B30.9-2006, or manufacturer's guidelines when performing any rigging and overhead lifting. Use by untrained persons is hazardous. Improper use may result in serious injury or death. Do not exceed rated capacity.

Working Load Limit (WLL) is the maximum allowable load in pounds or kilograms which may be applied to the load-bearing device, when the device is new or in "as new" condition, and when the load is uniformly and directly applied. The WLL must never be exceeded.

The Working Load Limit or Design factor may be affected by wear, misuse, overloading, corrosion, deformation, intentional alterations, sharp corner cutting action and other use conditions.

See OSHA Regulation for Slings 1910.184, ANSI/ASME B30.9-"SLINGS", ANSI/ASME B30.10-"HOOKS" and ANSI/AMSE B30.26 "RIGGING HARDWARE" for additional information.

The flexible line providing hydraulic power to the lift cylinder has been equipped with abrasion-resistant, high visibility protective wrap. The high visibility wrap allows operators to easily see monitor the position of the hydraulic line at all times, and can easily see if the line appears to become entangled or snagged.

## WARNING

**IMMEDIATELY CEASE LIFT CYLINDER OPERATION IN THE EVENT OF ENTANGLEMENT OF THE HYDRAULIC LINE WITH FIXED RIG COMPONENTS OR TONG SUPERSTRUCTURE.**

The protective wrap also prevents wear of the hydraulic line through abrasion. Do not remove the protective wrap from the lift cylinder line, and replace protective wrap if it is missing, torn, or split. Regardless of use or condition, the hydraulic line supplying the lift cylinder must be replaced every two years.

## WARNING

**REPLACE LIFT CYLINDER HYDRAULIC LINE EVERY TWO YEARS**

The control valve section on the power tong is equipped with an internal check valve, preventing sudden drop of the tong in the event of hydraulic power failure. A speed-limiting orifice is installed directly in the hydraulic inlet port of the lift cylinder. The orifice limits flow of hydraulic fluid from the lift cylinder through the control valve, preventing sudden drop of the lift cylinder in the event of a ruptured hydraulic line. Do not remove the speed-limiting orifice, and only replace with an identical orifice supplied by McCoy.

## WARNING

**DO NOT REMOVE THE SPEED-LIMITING ORIFICE FROM THE LIFT CYLINDER HYDRAULIC INLET PORT**

3.2.3 Lift Cylinder Safety (continued):

The working load limit (WLL) is clearly stenciled on to the side of the lift cylinder. Do not use lift cylinder if the WLL stencil has been rubbed off or intentionally removed. Locate the test certificate that accompanied the cylinder to the job site or, if necessary, obtain a copy of the test certificate from the location at which the original certificate has been stored. The lift cylinder must be clearly re-marked with the WLL before it is released to an operating environment.

**! WARNING**

**DO NOT USE A LIFT CYLINDER WITH A MISSING OR DEFACED WLL STENCIL.**


McCoy Global recommends inspecting lift cylinders at the beginning of each shift prior to hoisting to ensure that the integrity of the rod ends have not been compromised. Damaged lift cylinders must be immediately repaired or replaced.

Do not attach any device capable of exerting a lateral (side-to-side) load to any component of the lift cylinder or spring hanger. Do not place a lateral (side-to-side) load on any component of a lift cylinder or spring hanger while a load is suspended.

Positioning system or device must be placed against the hanging line in order to maintain vertical orientation of the suspended equipment.

**! DANGER**

**DO NOT PLACE LATERAL FORCE AGAINST ANY COMPONENT OF THE LIFT CYLINDER OR SPRING HANGER WHEN MOVING TUBULAR CONNECTION EQUIPMENT ON AND OFF WELL CENTRE.**

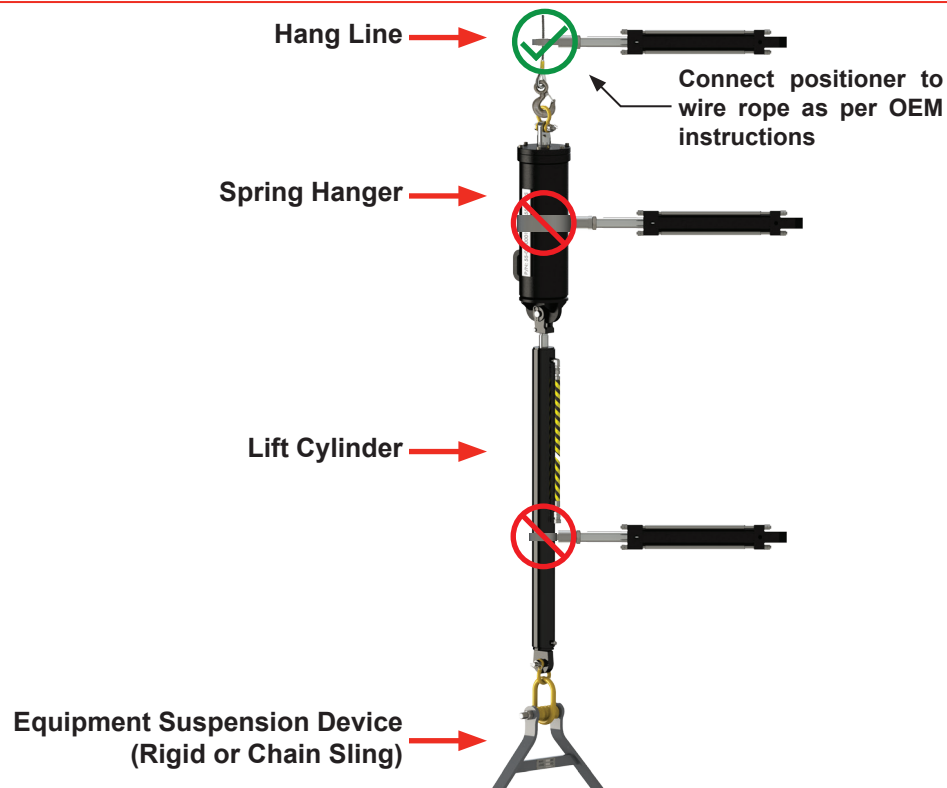

**Illustration 3.2.1: Correct Installation of Positioning System**

**NOTICE**

**CONTINUED USE OF A LIFT CYLINDER THAT SUBJECTS IT TO LOADS OUTSIDE OF ITS INTENDED APPLICATION (VERTICAL LOADS ONLY) SHALL BE AT THE CUSTOMER'S SOLE RISK AND LIABILITY**






**3.3 HYDRAULICS (CONTINUED):**

**3.3.2 Main Hydraulic Connections**

Supply hydraulic pressure to the equipment through the 1" hydraulic supply connection. A 1-1/4" return connection provides a return path to the power unit, and a 3/8" female quick-connect fitting allows motor case drain to tank. The different sizes of the supply and return lines eliminates the possibility of accidental cross-connections.

Ancillary devices (hydraulic motors, hydraulic cylinders, etc.) are connected through the hydraulic control valve block.

Inspect all connectors for damage, debris, or other contaminants before performing hydraulic connections. Clean connectors using compressed air, or an approved cleaning solvent and lint-free cloth. Always cover disconnected fittings with a clean brass or plastic dust cap, typically attached to each connector with a lightweight chain or flexible line. These caps provide significant protection from dust, dirt, other contaminants, and impact damage.

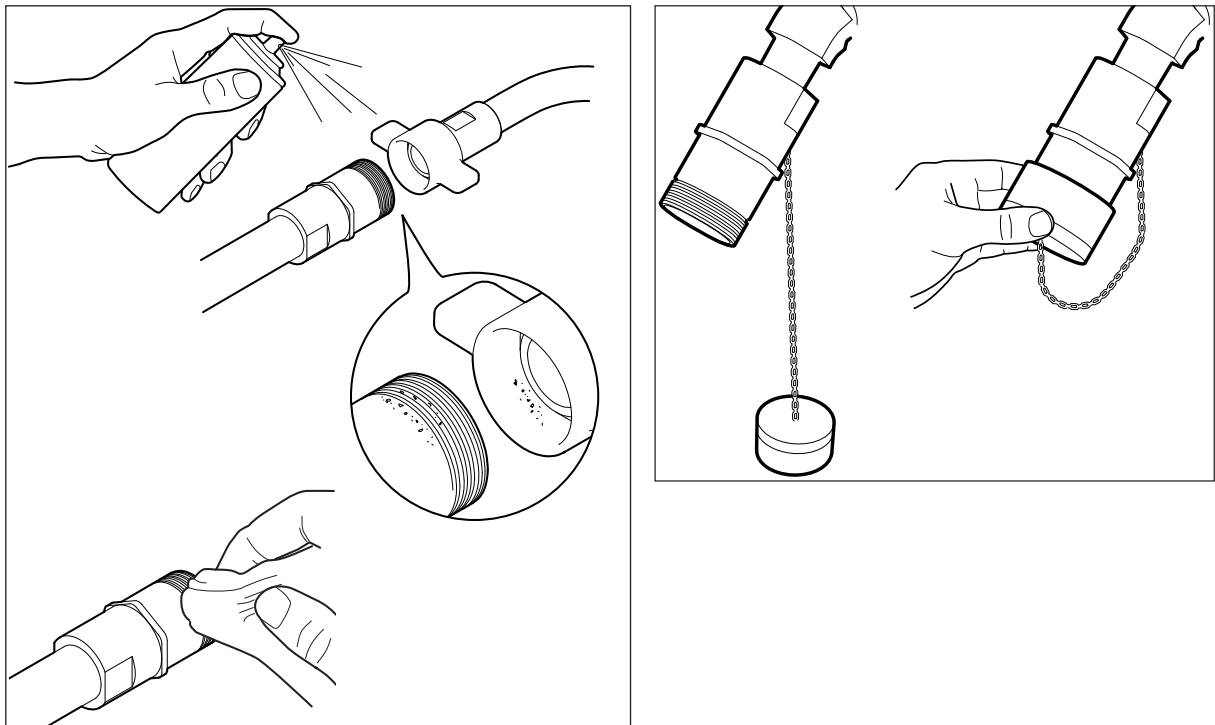


**Illustration 3.3.1: Hydraulic Connections 01**

**3.3.3 Main Hydraulic Connections (Continued):**

Perform hydraulic connection when the power unit is not running, or when the hydraulic pump is disengaged. Wing-type connections are self-sealing, and must always be made up to the connection line on the male connector to prevent partial closure of the integral check valve.

Self-sealing wing-type hydraulic disconnects should always be fully made up to the “fully engaged” indicator line on the male side of the connection. Inspect all hydraulic connections before energizing hydraulic power to ensure secure connections have been made. Supply of full hydraulic pressure without ensuring an established return line may result in system damage.

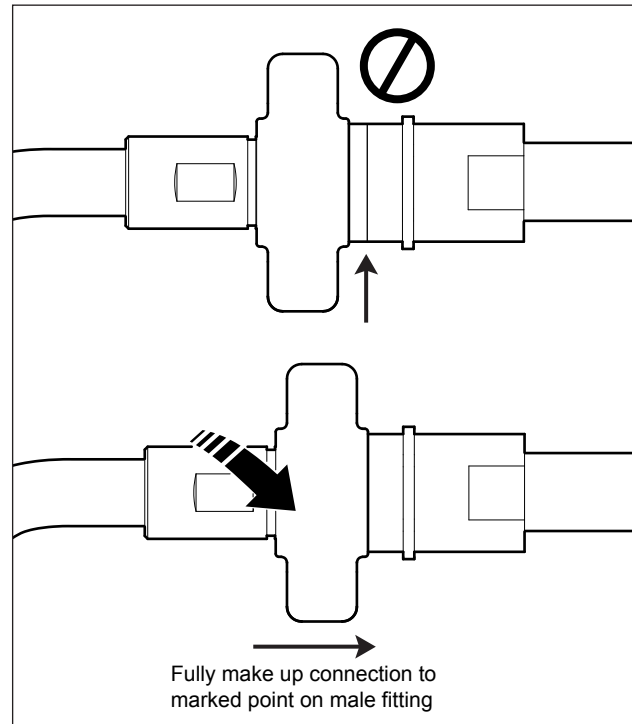

**Illustration 3.3.2: Hydraulic Connections 02**

## ⚠ WARNING

**A CLEARLY IDENTIFIED REMOTE POWER PACK EMERGENCY STOP MUST BE INSTALLED IN THE IMMEDIATE VICINITY OF THE TONG OPERATOR.**

Inspect these connections upon activation of the power unit. Leaking components must be repaired before releasing the tong to the operational environment. Deactivate the power unit and de-pressurize the hydraulic system according to the procedure on page 5.5. Disconnect the main hydraulic connections and inspect all four connectors (two male, two female) for damage or debris. If the connectors cannot be cleaned or easily repaired, McCoy recommends replacement of the leaking connector. Note that damage to one of the connectors may have caused damage to its mate.

Turn off power unit and depressurize hydraulic system before disconnecting the main hydraulic lines under normal working conditions. See page 5.5 for hydraulic system depressurization. McCoy recommends placing protective caps over the exposed connectors to protect them from water and impact damage.

## ⚠ WARNING

**ALWAYS TURN OFF HYDRAULIC POWER AND DEPRESSURIZE HYDRAULIC SYSTEM BEFORE DISCONNECTING MAIN HYDRAULIC LINES.**

3.4 JAW AVAILABILITY & INSTALLATION

3.4.1 Jaw Availability

The following tables lists dovetail jaw die kits and wraparound dies that are available as standard stocked sizes for this model of tong. McCoy Global can custom-engineer and manufacture any size of jaw within the range of the tong. Jaw systems are available to allow use of die inserts intended for specialized applications. Contact McCoy Global for information on jaw and die systems designed for higher or lower grip, or for non-marking applications.

**⚠ WARNING**

**NEVER ATTEMPT TO CLAMP ON TUBULARS WITH INCORRECTLY SIZED DIES. OPERATORS MUST BE AWARE OF THE SIZE OF TUBULAR TO BE GRIPPED AND THAT THE JAW AND DIE SYSTEM IN USE IS PROPERLY SIZED. USE OF INCORRECTLY SIZED DIES POSES A HAZARD TO PERSONNEL AND EQUIPMENT. USE OF JAWS NOT SUPPLIED BY MCCOY MAY CAUSE JAW SLIPPAGE OR FAILURE, AND MAY RESULT IN DAMAGE TO THE TONG. THE USE OF REDUCER DIES IS NOT RECOMMENDED**

**⚠ DANGER**

**USE OF ALUMINIUM DIES IN CE-MARKED EQUIPMENT IS FORBIDDEN**

**NOTICE**

**MCCOY JAW DIE KITS ARE DESIGNED TO GRIP DESIGNATED SIZES WITHIN API MAX/MIN TOLERANCES ONLY**

JAW DIE KITS FOR 7.625 IN. TONGS			
Description	DOVETAIL JAW PART NUMBER	STEEL WRAP-AROUND DIE PART NUMBER	WRAP-AROUND JAW PART NUMBER
2.375 in. Jaw Die Kit	CJDTLF78x2375	BUC45002375	CJ-LF-76A
2.875 in. Jaw Die Kit	CJDTLF78x2875	BUC45002875	
3.5 in. Jaw Die Kit	CJDT78x3500	BUC45003500	
4 in. Jaw Die Kit	CJDT78x4000	BUC45004000	
4.5 in. Jaw Die Kit	CJDT78x4500	BUC45004500	
5.0 in. Jaw Die Kit	CJDT78x5000	BUC7625-5000	CJ-76B
5.5 in. Jaw Die Kit	CJDT78x5500	BUC7625-5500	
6.0 in. Jaw Die Kit	CJDT78x6000	BUC7625-6000	
6.625 in. Jaw Die Kit	CJDT76x6625	BUC7625-6625	
7 in. Jaw Die Kit	CJDT76x7000	BUC7625-7000	
7.625 in. Jaw Die Kit	CJDT76x7625	BUC7625-7625	

### 3.4.2 Tong Jaw Die Replacement

Worn jaw dies can usually be replaced without removing the tong jaws. Replacement of dies is simple and straightforward, and may be performed on the drill floor in a few simple steps.

1. Remove hydraulic power from the equipment. Although opening the tong door inhibits rotation, McCoy Global recommends completely isolating the equipment from hydraulic power in order to prevent accidental rotation in the event of component failure.



**ISOLATE TONG FROM HYDRAULIC POWER BEFORE PROCEEDING WITH JAW OR JAW DIE REPLACEMENT.**

2. Rotate the jaw towards pipe centre to fully expose jaw die keeper fasteners. **NOTE:** die keeper fasteners may be located on the bottom of the jaw, depending upon jaw orientation at installation.
3. Extract the keeper fasteners and, if required, use a hammer and soft metal drive to lightly tap the worn dies from the top or bottom (depending on orientation) to remove.
4. Use a metal brush to clean the die slots.
5. Insert the new jaw dies in to the jaw(s), and secure in place using the keeper fasteners.

### 3.4.3 Tong Jaw Installation & Removal

Tong jaws often require removal to change jaw size or replace worn jaw die inserts that are “stuck” in place. Follow these instructions to remove the tong jaws.

1. Remove hydraulic power from the equipment. Although opening the tong door inhibits rotation, McCoy



**JAWS MAY PRODUCE METAL SLIVERS. WEAR STURDY WORK GLOVES WHEN HANDLING JAW DIE KITS.**

Global recommends completely isolating the equipment from hydraulic power in order to prevent accidental rotation in the event of component failure.

2. Remove one jaw at a time. Support the jaw being removed from the bottom. If required use a temporary lifting sling and crane to support the jaw assembly.
3. Remove the jaw pivot bolt.
4. Slide the jaw assembly toward the centre of the cage plate assembly, and, once clear of the cage plates, remove and transport to a secure location.
5. Repeat steps 2 through 4 for the second jaw.
6. Inspect each jaw weldment or casting for cracks or other damage, including (but not limited to) chipped metal and missing welds. Do not use cracked or otherwise damaged jaws. Cracked or otherwise damaged jaws must be clearly tagged and quarantined. Subcomponents of each jaw assembly (rollers, roller pins, jaw dies, and bearings, where applicable) may be removed and re-used, providing the subcomponents are free of damage. McCoy recommends referring to the illustrations of the exploded assemblies in section 7 for each type of jaw die kit under undergoing inspection and/or maintenance.
7. Place the jaw face down (roller up) on a sturdy surface. Wearing a leather work glove, attempt to manually rotate the roller. Jaw rollers must spin freely to ensure proper camming action against the ring gear during engagement with the tubular. If the roller turns freely, proceed directly to step 12. Rollers that do not freely rotate or are jammed must be freed before installing and using jaw assemblies.
8. Extract the fasteners retaining the jaw roller pin. In most cases this will be a keeper screw, but in some cases the jaw pin is secured using a retaining ring. Occasionally the jaw pin is secured using a weld bead. In these instances the weld bead must be ground away before the jaw pin can be removed.
9. Extract the roller pin. If necessary use a soft metal drive and hammer to tap the jaw pin out of its seat. Removing the jaw pin allows the jaw roller to come free.
10. Confirm all rotating components are undamaged and free from “flat spots”.

**3.4 JAW AVAILABILITY & INSTALLATION (CONTINUED):**

11. Apply a liberal coating of grease to the jaw pin and all surfaces of the jaw roller. Re-install the jaw pin and roller, and secure the jaw pin in the jaw weldment/casting with the appropriate fastener. NOTE: jaw pins secured by a weld bead must have the weld bead re-applied by an authorized, skilled welder.
12. Re-check the jaw roller to ensure that it turns freely.
13. Tong jaws are clearly marked with the size. Ensure the jaw to be installed is the proper size for the pipe to be run. Over-sized or under-sized jaws may result in jaw slippage, or cause the jaws to leave the end of the cam surface on the inside of the ring gear. Additionally, incorrectly sized jaws will cause the pipe to be off-centre relative to the backup, resulting in eccentric rotation and potential pipe thread damage.

 **WARNING**

**NEVER ATTEMPT TO CLAMP TUBULARS WITH INCORRECTLY SIZED JAWS. OPERATORS MUST BE AWARE OF THE SIZE OF TUBULAR TO BE GRIPPED AND THAT CORRECTLY SIZED JAWS AND DIES ARE INSTALLED. USE OF INCORRECTLY SIZED JAWS POSES A HAZARD TO PERSONNEL AND EQUIPMENT.**

14. Apply a generous coating of grease to the jaw roller & pin. Rotate the roller several times to distribute the grease.
15. Install the jaw assemblies one at a time. Liberally coat each jaw pivot bolt with a layer of grease before installing.

 **WARNING**

**USE OF JAWS NOT MANUFACTURED BY MCCOY IS NOT RECOMMENDED, AND MAY RESULT IN JAW SLIPPAGE AND/OR JAW FAILURE, OR DAMAGE TO THE CAMMING SURFACES OF THE RING GEAR.**

**3.4.4 Backup Die Availability**

The following tables lists dovetail adapter and wraparound dies that are available as standard stocked sizes for this model of backup. McCoy Global can custom-engineer and manufacture any size of jaw within the range of the backup. Jaw systems are available to allow use of die inserts intended for specialized applications. Contact McCoy Global for information on jaw and die systems designed for higher or lower grip, or for non-marking applications.

<b>BACKUP DIE KITS FOR 8.625 IN. TONGS</b>		
<b>Description</b>	<b>DOVETAIL PART NUMBER</b>	<b>WRAP-AROUND PART NUMBER</b>
2.375 in. Jaw Die Kit	BUDT86-02375A	BUC8625-2375
2.875 in. Jaw Die Kit	BUDT86-02875A	BUC8625-2875
3.5 in. Jaw Die Kit	BUDT86-03500A	BUC8625-3500
4 in. Jaw Die Kit	BUDT86-04000A	BUC8625-4000
4.5 in. Jaw Die Kit	BUDT86-04500A	BUC8625-4500
5.0 in. Jaw Die Kit	BUDT86-05000A	BUC8625-5000
5.5 in. Jaw Die Kit	BUDT86-05500A	BUC8625-5500
6.0 in. Jaw Die Kit	BUDT86-06000A	BUC8625-6000
6.625 in. Jaw Die Kit	BUDT86-06675A	BUC8625-6675
7 in. Jaw Die Kit	BUDT86-07000A	BUC8625-7000
7.625 in. Jaw Die Kit	BUDT86-07625A	BUC8625-7625
8.000 in. Jaw Die Kit	BUDT86-08000A	SDI86-8000
8.625 in. Jaw Die Kit	SDI86-8625	SDI86-8625

**3.4 JAW AVAILABILITY & INSTALLATION (CONTINUED):**

**3.4.5 Backup Die Removal/Installation**

1. Extend the clamp cylinder enough so that the fasteners securing the die retainer tabs are exposed. Turn off or disconnect hydraulic power.



**DANGER**

**ISOLATE TONG FROM HYDRAULIC POWER BEFORE PROCEEDING WITH JAW OR JAW DIE REPLACEMENT.**

2. Remove the fasteners securing the die retainer tab on the top of the die holder.
3. Remove the top die retainer tabs.
4. Slide the die straight up and remove.

### 3.5 EQUIPMENT CONFIGURATION & LEVELING

#### 3.5.1 Suspension & Restraint

Suspend the tong from a location as near to the centre of the drill rotary as possible, and from a location high enough on the mast to ensure easy handling. Suspending the equipment lower in the rig increases the effort required to move the tong to and from the connection point.

The suspension line may be extended over a pulley and balanced by a counterweight equal to the weight of the tong, or simply tied off in the derrick to form a dead line. When using a dead line arrangement it is necessary to use a McCoy spring hanger assembly (see specification page for recommended spring hanger). The spring hanger compensates for the downward movement of the casing as the thread is made-up, and imparts additional force to the suspension cable as the internal spring(s) is (are) deflected. See “3.1 SLING / LOAD BEARING DEVICE SAFETY” on page 3.4 for further information. In all cases hang lines must be rated to support the total weight of the suspended equipment PLUS the additional force imparted as a result of spring hanger deflection. **For application purposes, consider the “test loads” listed on the table in Section 3.1 as being the maximum total weight of equipment plus spring hanger deflection force.**

Refer to the specification page in this manual for information on the recommended spring hanger for this application. McCoy Global will not guarantee or specify spring hangers other than what has been supplied by McCoy.

Many applications use a lift cylinder for adjusting the height of the tong. Ensure the weight of the lift cylinder is known if it has not been included in the total weight of the tong.

All forces acting upon the suspension line must be considered when calculating necessary strength of the suspension line. The weight of the tong, the weight of the lift cylinder, the weight of the spring hanger, and the force imparted on the suspension line by the spring hanger must all be added together in order to arrive at the total force supported by the suspension line. Select the suspension line based upon the total force and the margins of safety dictated established engineering practices. Ultimately, calculating the force on the suspension line and selection of the suspension line is the complete responsibility of the customer.

McCoy Global recommends using backup (snub) lines on each side of the assembly to restrict motion in either direction of rotation. Snub lines must be of sufficient strength to withstand the force imparted by the maximum rated torque of the tong and backup assembly in use. Snub lines will arrest uncontrolled movement of the tong and backup in the event slipping of the backup jaws. Calculate the force on the snub lines by dividing the maximum torque of the tong by the tong’s torque arm (expressed in feet). For example, a 25,000 lb-ft. tong with a 36 inch (3 ft) torque arm will generate 8,333 lb of force against a snub line connected 90° to the longitudinal axis of the equipment. Select the snub lines based upon the total force and the margins of safety dictated by established engineering practices. Ultimately, calculating the force on the snub line and selection of the snub line is the complete responsibility of the customer.

Snub lines must be securely connected to the rear of the tong and backup assembly, and tied off to a suitably rated anchor. When properly installed the snub line should be taut enough to allow very little movement, preventing the tong from generating excessive force on the lines by “snapping” tight when rotation is applied.



## DANGER

**MCCOY GLOBAL ACCEPTS NO RESPONSIBILITY FOR DESIGNING AND SELECTING AN ADEQUATE SUSPENSION AND RESTRAINT SYSTEM FOR DRILLING EQUIPMENT. THE INSTRUCTIONS IN THIS SECTION ARE PROVIDED FOR INFORMATION PURPOSES ONLY.**

**ALL SELECTED FASTENERS, SHACKLES, CLAMPS, ETC. USED FOR CONSTRUCTING THE SUSPENSION AND SNUB LINES MUST BE RATED FOR THE CALCULATED FORCES.**

### 3.5.2 Tong Leveling

Leveling the tong side-to-side and front-to-rear at well-center is essential before placing into service. The following guidelines will assist when leveling the tong and backup.

## ⚠ CAUTION


**FAILURE TO ENSURE TONG IS LEVEL AT WELL-CENTER MAY RESULT IN JAW SLIPPAGE OR FAILURE OF JAW COMPONENTS**

1. Position the equipment with the center of the rotary assembly over well center (in the correct operating position for making or breaking connections).

## ⚠ WARNING

**ONLY USE THE MASTER LINK TO SUSPEND THE TONG ASSEMBLY. THE RIGID SLING IS DESIGNED FOR VERTICAL LIFTING ONLY.**

2. Place a level axially (side to side) across the tong as near to well center as possible, ensuring the level remains parallel with the top plate of the tong. Note whether the side-to-side level requires adjustment, and move the equipment back to the drill floor.
3. Use a thin wrench on the flat of the adjusting helix to rotate the helix in the direction required for side-to-side

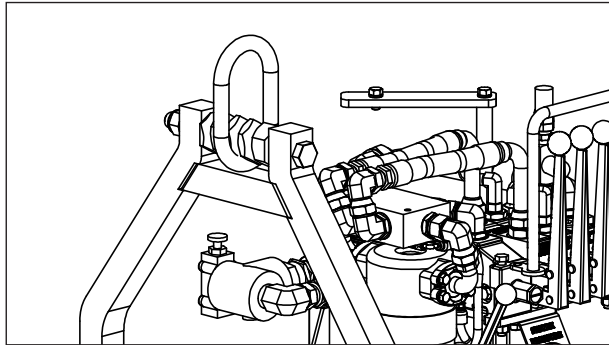

leveling of the tong, forcing the lift link to move in the appropriate direction toward the outer supports of the sling. The nylock nut on the pin may have to be slightly loosened to allow the helix to rotate.

**Illustration 3.5.1: Master Link Leveling**

4. Repeat steps 1 through 3 until the level shows that the tong is level side-to-side at well center.
5. Position the equipment with the center of the rotary assembly over well center (in the correct operating position for making or breaking connections).
6. Place a level lengthwise (front to back) along the tong as near to well center as possible, ensuring that it remains parallel with the top plate of the tong. Note whether the front-to-back level requires adjustment, and move the equipment back to the drill floor.

## ⚠ CAUTION

**ADJUST LEFT AND RIGHT RIGID SLING LEVELING ADJUSTMENTS SIMULTANEOUSLY AND EQUALLY**

7. Adjust the bolts in each rigid sling bracket simultaneously and equally.
8. Repeat steps 5 through 7 until the equipment is level front-to-rear at well center. Double-check that the equipment has remained level side-to-side.




**3.5.3 Load Cell Configuration**


**Make-Up:** When facing the rear of the equipment, the load cell should be mounted onto the operator’s side of the backup.

**Break-Out:** When facing the rear of the equipment, the load cell should be mounted onto the backup opposite the operator’s side.

Reference the illustration below for further clarification.

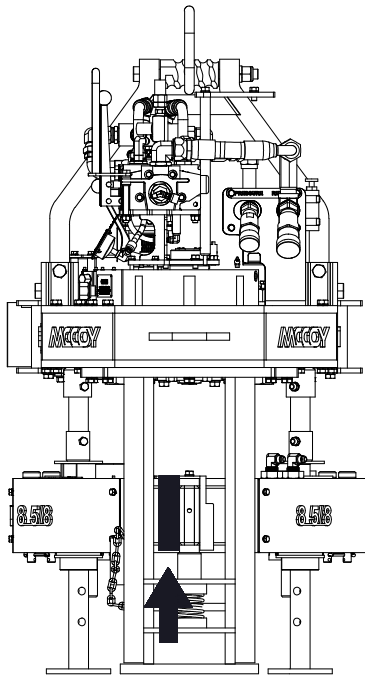

**Illustration 3.5.2: Make Up Load Cell Configuration**

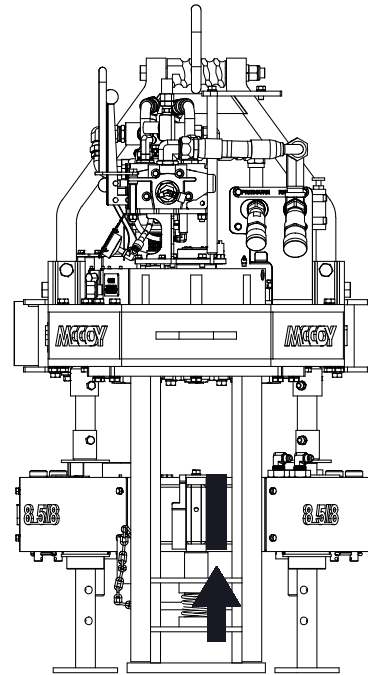

**Illustration 3.5.3: Break Out Load Cell Configuration**

### 3.5.4 Adjusting Backup Clamping Pressure

The clamping pressure of the backup requires occasional adjustment to compensate for wear of the backup jaw die inserts and for resetting the backup pressure to factory specification when new dies are installed. Occasional lowering of the backup clamping pressure may be required for thin-walled pipe or tubing, or if using the backup in non-marking applications.

A wide variety of operating conditions prevents McCoy from recommending an ideal backup pressure for any one type of pipe or joint; rather, the ideal pressure is only identified through a combination of “trial and error” and the operating manager’s best estimate based on their own experience.

Use this procedure to check and adjust the backup pressure:


1. Connect the equipment to an active hydraulic fluid power source to perform this procedure.
2. Use the BACKUP CLAMP / RELEASE control valve to fully extend the backup clamp cylinder. When the cylinder is fully extended **do not** release the valve handle. Maintain hydraulic pressure on the cylinder.
3. The backup pressure indicator displays current backup clamping pressure. Rotate the relief valve adjustment knob clockwise to increase the backup pressure, and rotate the relief valve handle counter-clockwise to decrease the backup pressure.

Maximum backup pressure is the system pressure (as displayed on the system pressure indicator on the tong), or 2500 PSI (17.232 MPa), whichever is lower. Never exceed a clamping pressure of 2500 PSI (17.232 MPa).

## ⚠ WARNING

### BACKUP CLAMPING PRESSURE MUST NEVER EXCEED 2500 PSI (17.237 MPA)

4. When the desired pressure has been set, move the BACKUP CLAMP / RELEASE control valve to the ‘RELEASE’ position to retract the cylinder.
5. Perform enough test connections to determine that the backup pressure is adequate for making up and breaking out joints within the current application. If pipe slippage or crushing is observed repeat the backup pressure adjustment procedure.

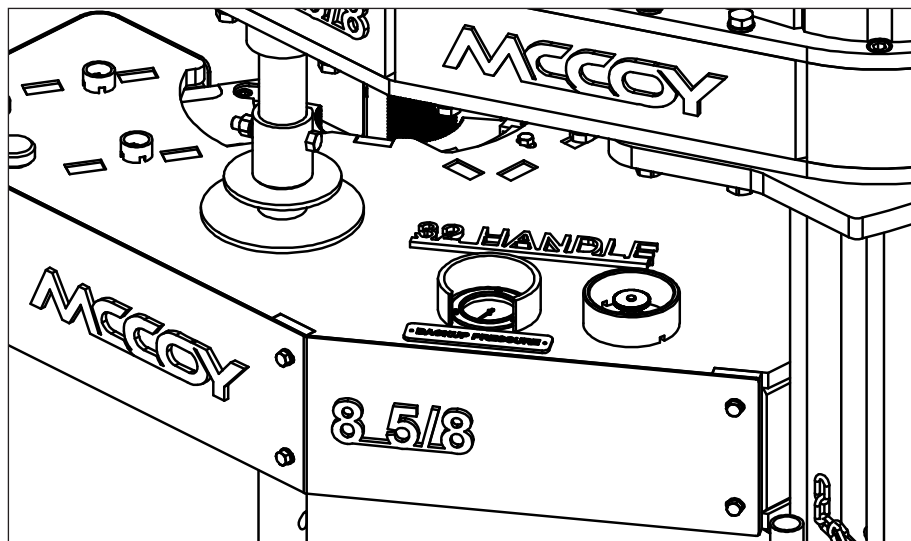

**Illustration 3.5.4: Backup Pressure Adjustment**



**This page intentionally  
left blank**



## SECTION 4: OPERATION

---



**This page intentionally  
left blank**

#### 4.0 TONG OPERATION

##### 4.0.1 Operator Training

Many companies set qualification standards that must be met before equipment may be operated without supervision. McCoy Global recommends operator training, which typically consists of operation of the equipment under the supervision of a trained equipment operator until a satisfactory level of competence is achieved. Typical operator training should include:

- Introduction to and general description of equipment
- Technical specifications and performance data
- Operating instructions
- Control systems and interlocks
- Operating hazards
- Checks and inspections

##### 4.0.2 Operator Safety

McCoy recommends that a hazard assessment of the work area be performed by a designated safety representative before commencing operations. A designated safety representative is responsible for verifying that all operators have adequate equipment and safety training.

Confirm the correct operation of the door switch system before every job. Never disable the door switch.

## DANGER

### NEVER DISABLE OR BYPASS THE TONG DOOR SWITCH SYSTEM

The area surrounding the tong operating area must be clutter-free and free from tripping hazards, or protruding objects that may snag hydraulic hoses on the tong, backup, lift cylinder, or torque measurement system. Operating surface or drill floor must be kept free of slipping hazards like grease, oil, water, etc.

Adequate lighting of the work area is required. All warnings, labels, gauges, and signs must be clearly visible

The components of the tong commonly manipulated or requiring control input are painted green, and are safe for continuous handling. Areas painted yellow are designated as hazardous areas, and contact with those areas must be avoided during operation. Always wear all personal protective equipment (PPE) specified by established HSE guidelines.

## CAUTION

### ALWAYS WEAR APPROVED PERSONAL PROTECTIVE EQUIPMENT (PPE) WHEN OPERATING HYDRAULICALLY-POWERED EQUIPMENT.

Ensure hydraulic power is deactivated and tong hydraulics are de-pressurized before disconnecting the main hydraulic lines. McCoy recommends depressurizing the tong hydraulic system before connecting or disconnecting quick-connect fittings.

## WARNING

### DEPRESSURIZE EQUIPMENT BEFORE DISCONNECTING MAIN HYDRAULIC LINES.

#### 4.0.3 Shifting Gears

Shift between high and low gear using the manual shift lever on the rear of the tong.

Note that the high clutch gear or the low clutch gear may not be exactly aligned when shifting, so the operator may need to “bump” the motor control handle slightly to turn the main clutch gear shaft and shifting collar into alignment. This is most effective when applying a small amount of pressure on the gear shift lever in the desired shift direction, ensuring the shifting collar will “catch” when the main clutch gear aligns with either the high or low clutch gear.

### **WARNING**

**SHIFTING TONG WHILE ROTATING THE MOTOR AND CAGE PLATE MAY RESULT IN CATASTROPHIC GEAR TRAIN FAILURE**

#### 4.0.4 Backing Pin Operation

The backing pin must be engaged in either the MAKE or BREAK position to make up or break out a connection. The backing pin can only be engaged when the tong is rotated to the ‘open throat’ position and no rotating components of the tong are in motion. See “Illustration 2.1.1: Major Component Identification 01” on page 2.6 for backing pin location.

#### 4.0.5 Pre-Operational Checks

McCoy recommends that the following pre-operating tests be performed prior to releasing the tong assembly to a operational environment:

1. Connect the tong to a hydraulic power source in a controlled environment. Ensure the power unit’s operating parameters are within the specifications as identified on page 2.8 and the hydraulic connections from the power source are properly and securely made up (see page 3.11). Do not neglect to connect the motor drain line.
2. Energize hydraulic power to the tool. Inspect all hydraulic connections. Be aware that a restriction in the pressure supply hose will result in high pressure within the power unit hydraulic system, which may activate a hydraulic governor in a stand-alone power unit and increase the engine speed to as high as maximum RPM. A restriction in the return line will result in high pressure within both the power unit and the tong hydraulic system, and may cause failure of the motor seal.

### **WARNING**

**A CLEARLY IDENTIFIED REMOTE POWER PACK EMERGENCY STOP MUST BE INSTALLED IN THE IMMEDIATE VICINITY OF THE TONG OPERATOR.**

3. If using a stand-alone hydraulic power unit, allow hydraulic system to warm by circulating fluid for about 10 minutes, then slowly close the bypass valve to allow hydraulic fluid to circulate through the hoses and tong. Ensure circulating pressure does not exceed 200 psi.
4. Inspect all hydraulic hoses and connections on the tong. Immediately correct any hydraulic fluid leaks.
5. Inspect all gauges. Replace leaking or cracked gauges, or any gauge not registering a reading.
6. Confirm that all load-bearing pins and R-clip retainers are installed and in good condition (rigid sling pins, lift cylinder pins).
7. Confirm all hydraulic hoses (with the exception of the supply & return to the backup) are securely fastened to the tong, and are not in contact with the cage plate or creating a snagging hazard.

A rotating tong potentially stores a large amount of kinetic energy in the gear train. Suddenly opening the tong door to stop rotation will generate a shock load that could result in catastrophic equipment failure not covered by the manufacturer’s warranty, and may present a hazard to personnel on the drill floor.

### **WARNING**

**SUDDENLY OPENING THE TONG DOOR TO STOP ROTATION WILL GENERATE A SHOCK LOAD THAT COULD RESULT IN CATASTROPHIC EQUIPMENT FAILURE NOT COVERED BY THE MANUFACTURER’S WARRANTY, AND MAY PRESENT A HAZARD TO PERSONNEL ON THE DRILL FLOOR**

#### 4.0.6 Hydraulic Lever Operation

The hydraulic levers on the valve bank assembly are controlled by 4-way directional valves, which allows greater control over hydraulic flow as the levers are moved. Depending on the degree that the lever is manipulated in either direction, a proportional amount of hydraulic fluid will be delivered to the corresponding device indicated on the valve package label plate.

##### 1. TONG - BREAK / MAKE


- **Break** - Rotates the tong assembly in a counter-clockwise direction to 'Break Out' a threaded connection
- **Make** - Rotates the tong assembly in a clockwise direction to 'Make Up' a threaded connection

##### 2. BACKUP - CLAMP / RELEASE

- **CLAMP** - Clamps onto the tubular and closes the backup doors
- **RELEASE** - Releases the tubular and opens backup doors

##### 3. LIFT CYLINDER - LIFT / LOWER

- **LIFT** - retracts the lift cylinder, lifting the tong vertically
- **LOWER** - extends the lift cylinder, lowering the tong vertically

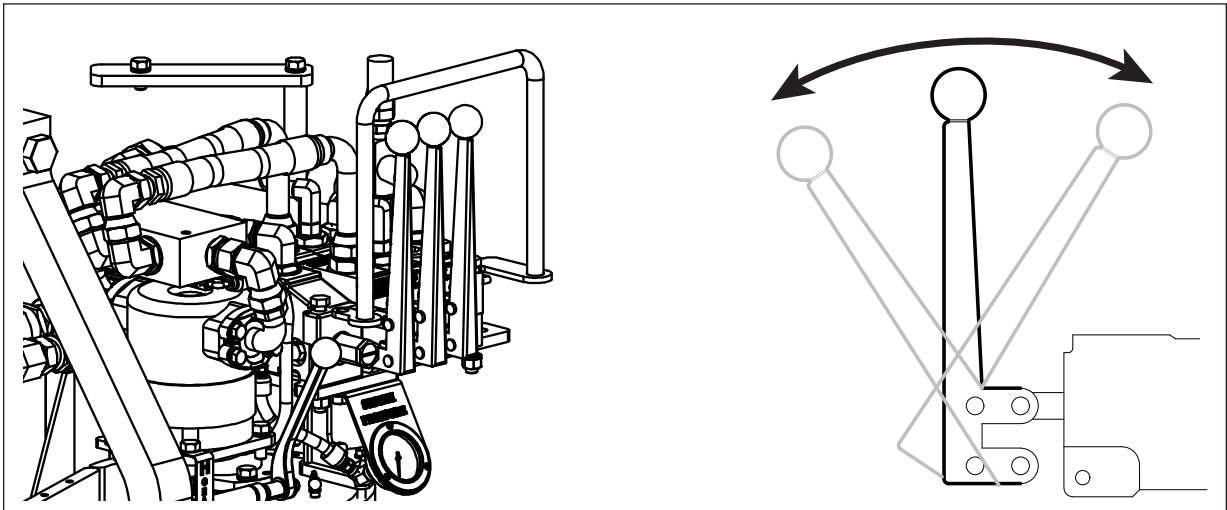

**Illustration 4.0.1: Hydraulic Lever Operation**



#### 4.0.7 General Operational Comments

1. Full break-out torque is only achievable when the ring gear is in full contact with both idler gears. Position ring gear in contact with both idler gears when preparing to break connections or collars where high torques are required. Do not apply break-out torque if, for any reason (slippage, for example), the ring gear rotates past 90 degrees without gripping the tubular. Applying full torque to break out a joint when the ring gear is not in full contact with both idler gear assemblies presents a significant hazard of catastrophic tong failure.

### **WARNING**

**DO NOT APPLY BREAK-OUT TORQUE IF THE RING GEAR IS NOT IN FULL CONTACT WITH BOTH IDLER GEAR ASSEMBLIES.**

2. When making-up integral (shouldered) joints, it is essential to make up the last turn of the threads in low gear. This reduces the tendency of an instant stop or a sudden increase in torque, which induces extremely high stresses on the gear train.
3. DO NOT employ the “snap break” method of breaking-out joints when pulling a string. The extremely high stress placed on the gear train frequently causes gear breakage.

### **WARNING**

**THE “SNAP-BREAK” METHOD OF BREAKING CONNECTIONS IS HAZARDOUS TO RIG PERSONNEL AND EQUIPMENT**

4. Consider the following when operating this equipment in temperatures below 0°C (32°F)
  - Select gear and bearing lubricants that are compatible with expected climatic conditions.
  - Select hydraulic fluid that is compatible with expected climatic conditions.
  - Allow sufficient time for hydraulic fluid to warm to operating temperature following a power unit cold start prior to activating the bypass valve to allow fluid to circulate to tong.
  - Allow for adequate drying of moisture (prior to lubricating) when cleaning tong parts in cold weather.

## 4.1 MAKING AND BREAKING CONNECTIONS

**NOTICE**

**THESE OPERATING PROCEDURES ASSUME THE USER HAS PROPERLY SET UP AND PREPARED THE EQUIPMENT FOR OPERATION AS PER SECTION 3 OF THIS MANUAL.**

Set up and prepare the equipment for operation as per Section 3 of this manual.

The tong and backup assembly should be properly suspended, connected to a hydraulic power source, and ready to make or break connections at this point.

**4.1.1 Making A Connection**

1. Ensure hydraulic power supply to the tong is energized.
2. Ensure the backing pin is in the "makeup" position. From the front of the tong, the backing pin correctly configured for makeup will be in the 10 o'clock position. The cage plate opening must be aligned with the door opening when setting the backing pin position.
3. Properly configure the load cell and snub line(s) for making up connections. The "snub line" is a length of wire rope or chain connecting the rear of the tong body opposite to the load cell to a sturdy anchor on the drill floor which arrests unanticipated and uncontrolled rotation of the assembly. The load cell and snub line(s) must be rated for the applied torque plus established operating policies. The load cell and snub line connection point(s) on the drill floor must be sturdy enough to absorb all applied forces generated by tong rotation. When making up joints connect the load cell to the the driller's side of the tong, which is the left side of the tong as seen from the rear. For accurate torque measurement the load cell connection line must be perpendicular to the vertical, and perpendicular to the centre-line of the tong
4. Use the rig's pipe-handling equipment to position the fresh tubular in position over the stump. Where possible manually engage the connection, and ensure the connection is not cross-threaded.
5. Open the tong door.
6. Lift the tool from the drill floor and adjust the height of the tool as necessary. Position the tool over the connection.

**⚠ CAUTION**

**RIG PERSONNEL MUST STABILIZE THE TOOL AS IT IS LIFTED FROM THE DRILL FLOOR**

7. Close the tong door. Ensure the door latch has properly and securely engaged.
8. Shift the tong to high gear to thread the connection at high speed. Do not shift gears while the tong is rotating.

**⚠ WARNING**

**SHIFTING TONG WHILE ROTATING THE MOTOR AND CAGE PLATE MAY RESULT IN CATASTROPHIC GEAR TRAIN FAILURE**

9. Rotate the tong in the make-up direction to cam the jaws on to the tubular.
10. As the joint becomes fully made up the increasing torque demand will stall the motor, and displayed torque will rapidly begin to increase.
11. Stop rotation, and shift to low gear (low speed/high torque). This will enable the tong to produce adequate torque for making up the joint to specification. Do not shift gears while the tong is rotating.

**⚠ WARNING**

**SHIFTING TONG WHILE ROTATING THE MOTOR AND CAGE PLATE MAY RESULT IN CATASTROPHIC GEAR TRAIN FAILURE**

- Complete the connection at low speed/high torque. Monitor the torque gauge during rotation, and stop rotation upon reaching the specified make-up torque. Reverse the rotation control valve to release the tong jaws from the tubular. **OPERATING NOTE:** releasing the tong jaws may release compression energy stored in the spring hanger springs during make-up, causing the tong to “jump” upwards to its pre-connection level.

## CAUTION

**COMPRESSION ENERGY STORED IN THE SPRING HANGER SPRINGS MAY CAUSE THE TONG TO “JUMP” SLIGHTLY WHEN TONG JAWS ARE RELEASED.**

- When tong jaws are free, align the opening in the ring gear with the mouth of the tong, and open the tong door.
- Free the tool from the drill string. Note that rig personnel may be required to stabilize the tool as it completely releases from the drill string. Guide the tool away from the string and lower it to the drill floor if desired.
- Repeat steps 4 through 14 until the desired number of connections are made up.

### 4.1.2 Breaking A Connection

## NOTICE

**THIS EQUIPMENT SHOULD BE PROPERLY SUSPENDED, CONNECTED TO A HYDRAULIC POWER SOURCE, EQUIPPED WITH PROPERLY SIZED JAWS, AND READY TO BREAK CONNECTIONS.**

- Ensure hydraulic power supply to the tong and backup is energized. The master link on the rigid sling must be used to suspend the tong. Do not suspend the tong from any other point.
- Set the backing pin for “Breakout” operation, indicated on the top of the cage plate assembly. The opening in the ring gear must be aligned with the tong door opening in order to properly set the backing pin (see “Illustration 2.1.1: Major Component Identification 01” on page 2.6).
- Properly configure the load cell for breaking out connections (see Section 3.5.3). The load cell must be transferred to the off-driller’s side (the right hand side as seen from the rear of the tong), and the snub line must be transferred to the driller’s side to perform break-out operations. Load cell and snub lines must be rated for the applied torque plus established operating policies. The load cell and snub line connection points on the drill floor must be sturdy enough to absorb all applied forces.
- Open the tong door.
- If necessary, lift the tool from the drill floor.

## CAUTION

**RIG PERSONNEL MUST STABILIZE THE TOOL AS IT IS LIFTED FROM THE DRILL FLOOR**

- Move the tool on to the tubing joint. Ensure the tong is level and perpendicular in relation to the tubular.
- Close the tong door.
- Breakout torque is only available when the tong is in low gear. Shift the tong to low gear. Do not shift gears while the tong is rotating.

## WARNING

**SHIFTING TONG WHILE ROTATING THE MOTOR AND CAGE PLATE MAY RESULT IN CATASTROPHIC GEAR TRAIN FAILURE**

- Rotate the cage plate in the break-out direction, and cam the jaws on to the tubular. **OPERATIONAL NOTE:** Do not apply break-out torque if, for any reason (slippage, for example), the ring gear rotates past 90 degrees without gripping the tubular. Applying full torque to break out a joint when the ring gear is not in full contact with both idler gear assemblies presents a significant hazard of catastrophic tong failure.

 **WARNING**

**DO NOT APPLY BREAK-OUT TORQUE IF THE RING GEAR IS NOT IN FULL CONTACT WITH BOTH IDLER GEAR ASSEMBLIES.**

10. Stop rotation when the connection breaks, and shift to high gear. This will enable the tong to completely unthread the connection at high speed.
11. Release the tong jaws from the tubing by reversing rotational direction when connection has been completely unthreaded.
12. When the tong jaws disengage, align the opening in the ring gear with the mouth of the tong, and open the tong door.
13. Free the tool from the drill string. Note that rig personnel may be required to stabilize the tool as it completely releases from the drill string. Guide the tool away from the string and use the lift cylinder control to lower it to the drill floor if desired.

 **CAUTION**

**RIG PERSONNEL MUST STABILIZE THE TOOL AS IT IS FREED FROM THE TUBULAR.**

14. Use standard pipe handling procedures to remove and rack the freed tubing stand.
15. Repeat steps 5 through 14 as many times as necessary to break out and un-thread the desired number of connections.



**This page intentionally  
left blank**



**SECTION 5: MAINTENANCE**

---



**This page intentionally  
left blank**

McCoy Global recognizes that minor on-site repairs and modifications are required to maintain peak operating condition of this equipment, or to reconfigure the equipment to suit the operating environment. Examples of minor repairs are:

- replacement of damaged hoses, cables, and fittings
- replacement of malfunctioning pressure gauges and valves
- replacement of fasteners

Any replacement component must be an identical component supplied by McCoy Global. Fasteners must be Grade 8 or equivalent, unless otherwise specified by McCoy Global. All repairs must be performed by authorized, skilled personnel. Any attempt to make unauthorized repairs to equipment beyond the minor repairs described above exposes personnel to potential hazards and may cause catastrophic equipment failure. Contact McCoy Global if any question about the nature of repairs arises.



## DANGER

**UNAUTHORIZED REPAIRS TO EQUIPMENT EXPOSES PERSONNEL TO POTENTIAL HAZARDS AND MAY CAUSE CATASTROPHIC EQUIPMENT FAILURE.**

By nature, steel machinery with rotating and moving parts have the potential to generate ignition sources, ie. sparks. As outlined in this manual, scheduled maintenance, lubrication, timely replacement of worn components and most importantly, on-site risk assessments with stringent standard operating procedures are all required to prevent the potential of spark generation.



## WARNING

**USE THE MAINTENANCE INFORMATION IN THIS MANUAL TO DEVELOP AND IMPLEMENT PROCEDURES TO HELP ELIMINATE SPARK GENERATION**

### 5.0 GENERAL MAINTENANCE SAFETY PRACTICES

The practices identified here are intended as a guideline. All personnel are responsible for performing their tasks in a manner that ensures worker, equipment, and environmental safety, and may require taking additional steps that are not identified in this section.

Equipment maintenance shall be performed only by designated qualified maintenance personnel. Wear approved eye wear and footwear, and follow all safety guidelines. Do not begin a maintenance task without the proper tools or materials on hand, or the proper drawings and documentation necessary.

Schedule planned maintenance with operators to avoid conflicts, unnecessary downtime, and the danger of accidental equipment activation. Notify operations when maintenance procedures are complete and equipment functionality is restored.

Isolate the location of the maintenance under way to prevent unaware personnel from inadvertently exposing themselves to a hazard. Use tape, rope, or signage to clearly indicate “off-limits” area.

Replacement of large, heavy individual parts and/or heavy structural components must be performed using an approved lifting device of sufficient lifting capacity. Use care when attaching the lifting device. Safeguard area to avoid endangering personnel or equipment.

All spare parts must meet or exceed OEM specifications in order to maintain equipment integrity, especially protective equipment.

Ensure equipment is isolated from hydraulic power before commencing maintenance operations.



## WARNING

**DO NOT PERFORM MAINTENANCE UNTIL TUBULAR CONNECTION EQUIPMENT HAS BEEN COMPLETELY ISOLATED FROM HYDRAULIC POWER**

This equipment uses materials that may be harmful to the environment if improperly disposed of (hydraulic fluid, grease, etc.). Dispose of all materials according to environmental protection regulations.



## 5.1 CLEANING

Clean equipment thoroughly with a high quality petroleum-based cleaning agent after each job, prior to storage. McCoy Global recommends that the equipment be periodically partially disassembled so that internal components can be properly cleaned. Ensure that cleaning solvents and chemicals are captured to prevent environmental contamination. Dispose of all materials according to environmental protection regulations.

## 5.2 PREVENTIVE MAINTENANCE PRACTICES

Regular maintenance programs must be established to assure safe, dependable operation of this equipment and to avoid costly repairs. The following maintenance procedures provide information required to properly maintain your equipment. This equipment may require more or less maintenance depending upon the frequency of use and the operational field conditions.

These maintenance procedures are designed for equipment operating at normal operating temperatures for 10 hours per day. McCoy Global recommends that the inspection and maintenance procedures in this section be performed as recommended in the maintenance checklists, or in conjunction with a qualified technician's best estimates of when this equipment is due for this maintenance.

OEM component manufacturers (for example: motors, valves, etc.) may specify maintenance tasks and intervals over and above what McCoy Global recommends as part of their recommended procedures. These additional tasks may be performed or ignored at the user's discretion.

McCoy Global recommends tracking all maintenance activity including the lubrication schedule and replacement of hoses or cables. A maintenance log is a valuable tool that can be used for easily retrieving maintenance history or identifying trends that require correction.

## 5.3 HYDRAULIC SYSTEM MAINTENANCE

Poor hydraulic fluid maintenance is a leading cause of hydraulic equipment failure. Contaminants are introduced to the hydraulic system through several sources including dirty hydraulic connections, dirty hydraulic cylinder rods, and through the wear of internal components. Failure to remove contaminants through the use of a maintained filtration system will contribute to rapid wear of system components. McCoy recommends protecting equipment by filtering to ISO 4406:1999 standards.

Premature fouling of particulate filters within the prime mover or ancillary hydraulic power unit indicates a high level of contaminants, and requires immediate hydraulic fluid laboratory analysis to identify the contaminants. High levels of wear metals in the fluid may be symptomatic of impending failure of a component in the hydraulic system. Early identification of the potential failure enables the user to schedule preventive repairs, preventing costly breakdown maintenance.

Fluid that has been repeatedly and consistently overheated will provide much poorer response and overall performance than fluid in a temperature-managed hydraulic system. McCoy recommends the use of hydraulic heaters and/or coolers to maintain the fluid temperature within the operating temperature range specified in Section 2. Maintaining adequate fluid level in the hydraulic reservoir helps dissipate heat in the hydraulic system. Fluid repeatedly heated to high temperatures (above 80°C) is subject to rapid depletion of the additives that prevent oxidation and water emulsification, leading to the build-up of sludge, gum, and varnish. These contaminants will build up on internal surfaces of the hydraulic system causing "sticky" operation or clogging orifices and small passages. Water entrained in the fluid will react with components in the hydraulic system to produce rust and increase the rate of oxidation of the fluid.

Schedule hydraulic fluid analysis regularly as part of a preventive maintenance routine. Test particulate content using a portable fluid analysis kit and compare the fluid sample to new hydraulic fluid. Fluid that is discolored or has a strong odor should be sent to a qualified laboratory for detailed analysis. Hydraulic fluid that is no longer capable of operating within the parameters specified by this manual must be replaced in conjunction with a complete hydraulic system flush.

Fluid that is unused for a long period of time should be tested before circulating through the hydraulic system. Hydraulic systems operated in environments experiencing extreme temperature variances are susceptible to condensation within in the oil reservoir. Over a period of time, the condensation will accumulate in the bottom of the reservoir. This condensation should be drawn off as required, or at six month intervals.

#### 5.4 HYDRAULIC SYSTEM DEPRESSURIZATION

McCoy Global recommends that the hydraulic system be depressurized prior to maintenance on any hydraulic component. Perform the following steps to ensure the dangers posed by hydraulic fluid under pressure are minimized.

### CAUTION

#### **ENSURE ADEQUATE CONTAINMENT IS IN PLACE TO PREVENT ENVIRONMENTAL CONTAMINATION FROM RESIDUAL HYDRAULIC FLUID**

1. Rotate the tong to the “open throat” position. Ensure tong and backup doors (if equipped) are closed. Fully extend the lift cylinder
2. De-energize the power unit.
3. Repeatedly actuate the tong motor control valve lever IN BOTH DIRECTIONS to dissipate any residual pressure in the valve and motor.
4. Remove the hydraulic SUPPLY line from the equipment.
5. Repeatedly actuate the remaining control valve levers IN BOTH DIRECTIONS to dissipate any residual pressure in the remainder of the hydraulic control system.

### WARNING

#### **HYDRAULIC PRESSURES AS HIGH AS OPERATING PRESSURE MAY REMAIN TRAPPED IN SMALL AREAS OF THE EQUIPMENT. ENSURE ALL MAINTENANCE IS CARRIED OUT BY A QUALIFIED SERVICE TECHNICIAN, AND THAT ADEQUATE PERSONAL PROTECTIVE EQUIPMENT IS USED TO GUARD AGAINST PRESSURE INJURIES**

6. Disconnect the hydraulic RETURN line from the equipment.
7. Disconnect remaining hoses such as case drains, or lines connected to the turns counter encoder.

#### 5.5 LUBRICATION INSTRUCTIONS

Use a quality multipurpose bearing lubricant that will remain within its viscosity range at expected operating temperatures. In addition, McCoy recommends the following lubrication procedure at the completion of each job prior to storage.

McCoy recommends that a liberal coating of grease be applied to the cam surface of the ring drive gear prior to jaw installation. Also, the clutch inspection plate should periodically be removed, and a liberal coating of grease applied to the clutch, drive gears and shifting shaft.

Coat the jaw pins and rollers with a liberal amount of anti-seize compound when installing new jaw die kits.


##### 5.5.1 Recommended Lubrication Amounts

McCoy recommends lubricating this equipment before beginning each shift, and immediately following operation prior to storage. The grease amounts listed in the table below are estimated minimums, and should be used as a guideline when establishing a lubrication routine as part of a maintenance schedule.


McCoy recommends liberally coating the cam surface of the ring drive gear with grease prior to jaw installation. Periodically remove the clutch inspection plate and apply grease generously to the clutch, drive gears and shifting shaft. Coat the jaw pins and rollers with a liberal amount of anti-seize compound when installing new jaw die kits.

5.5 LUBRICATION INSTRUCTIONS (CONTINUED):

Item	Lubrication Point	No. of Locations on Assembly
1	Door Shaft	2
2	Dumbbell Roller	20
3	Cam Follower	32
4	Shift Gear	1
5	Motor Gear Box	2
6	Mid Idler Gear	1
7	Outbard Idler Gear	2
8	Jaw Pivot Pin	4

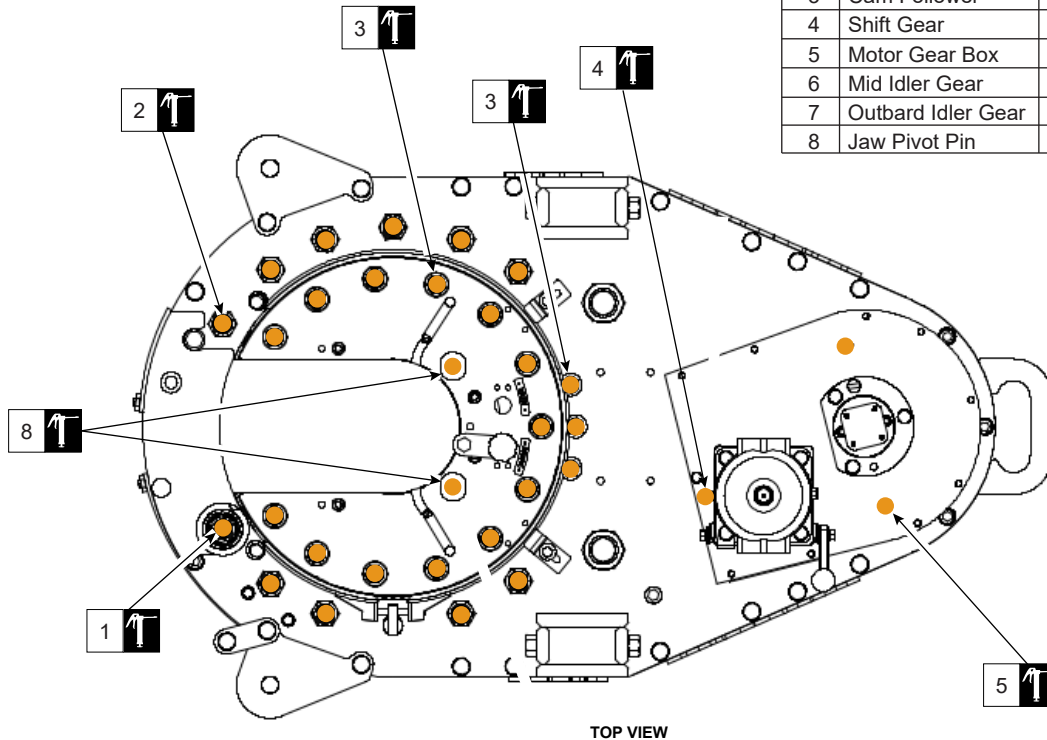

TOP VIEW

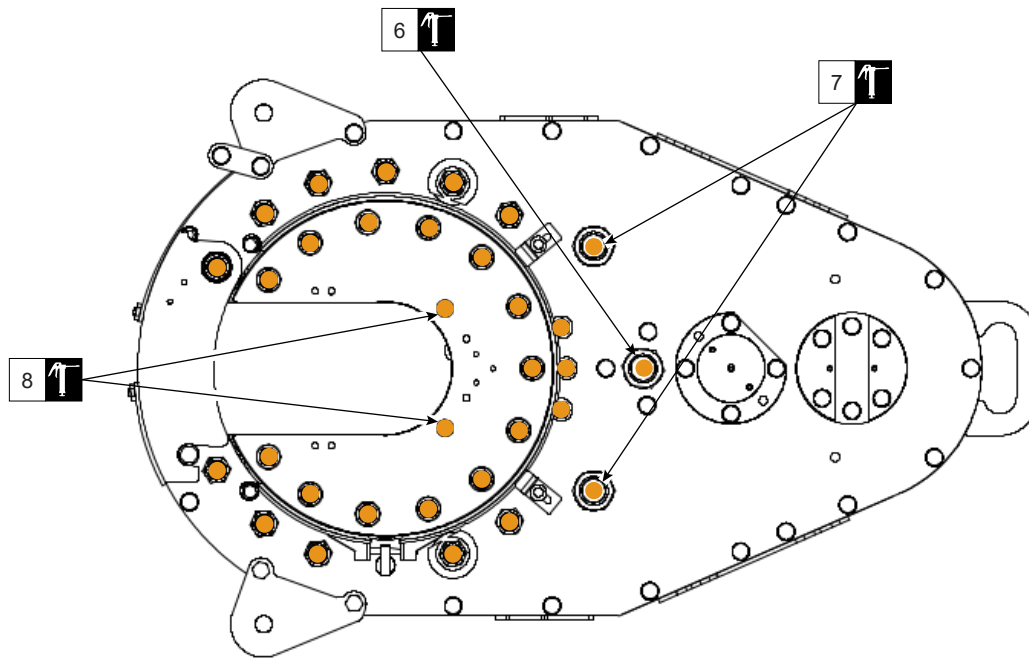


BOTTOM VIEW


Illustration 5.5.1: Tong Lubrication Diagram

5.5 LUBRICATION INSTRUCTIONS (CONTINUED):

Item	Lubrication Point	No. of Locations on Assembly
1	Backup Cylinder	8

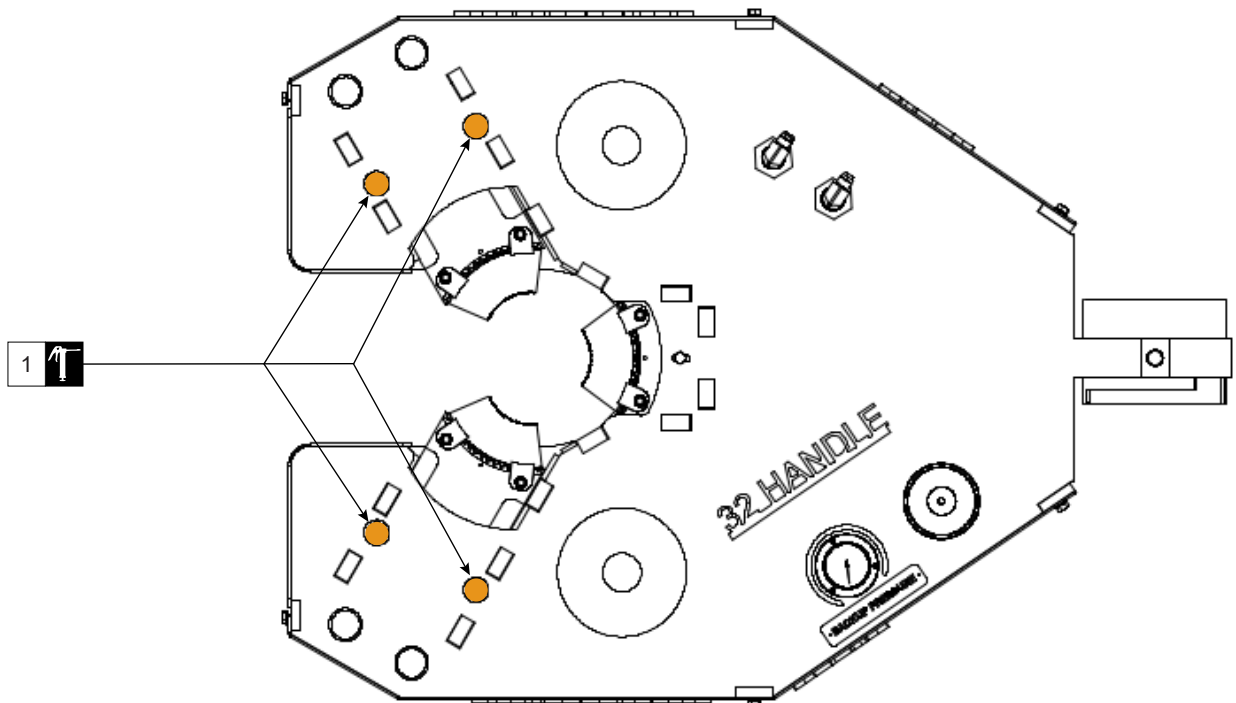

TOP VIEW

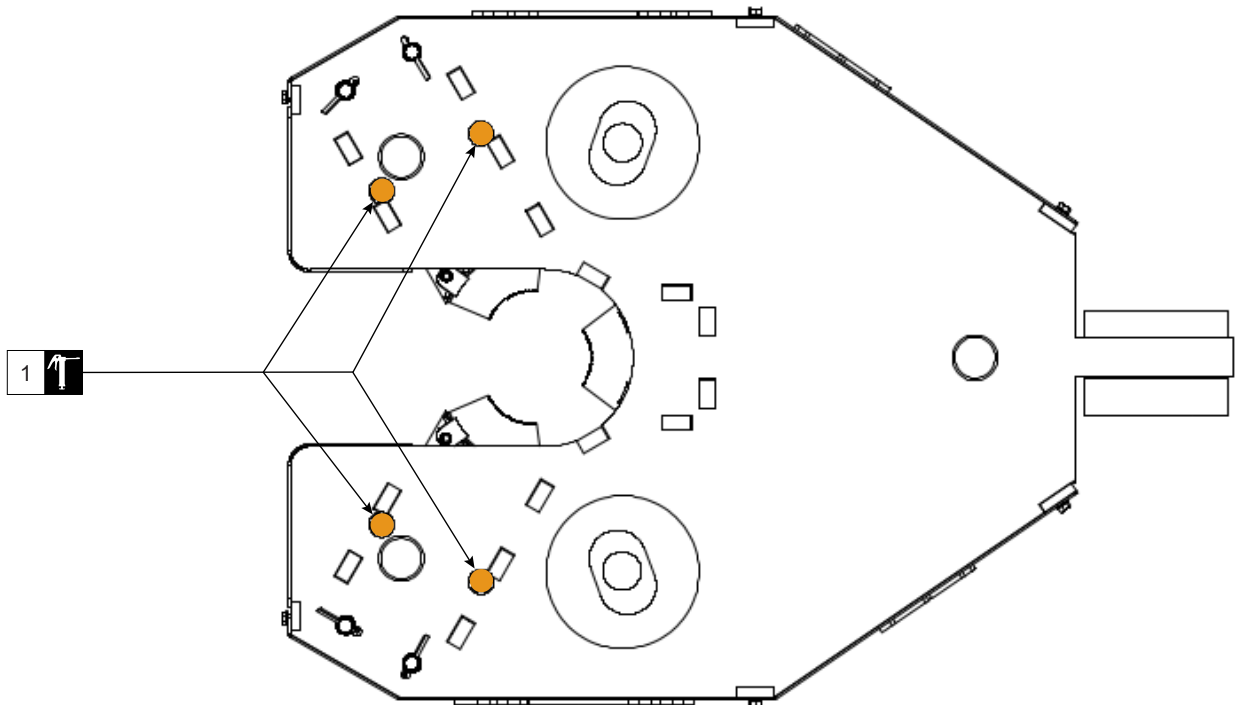

BOTTOM VIEW

Illustration 5.5.2: Backup Lubrication Diagram


## 5.6 ADJUSTMENTS

### 5.6.1 Brake Band Adjustment

Periodically adjust the brake bands to compensate for brake lining wear, ensuring continued smooth and efficient jaw cam action. Inadequate cage plate tension will allow the cage plate to rotate with the ring gear, resulting in poor gripping of the pipe or casing due to improper “camming” action of the tong jaws. Tightening the brake band against the cage plates will increase frictional resistance, allowing jaws to cam properly and grip the casing. Adjust the brake band using the adjustment nut and bolt set as shown in the illustration below, using the following procedure:

1. Rotate the cage plate until the tong is in the ‘open throat’ position (ready to accept tubulars).
2. Tighten the top and bottom brake bands a quarter turn each. Ensure both brake bands are adjusted simultaneously and equally.
3. Rotate the cage plate in the make-up direction. If the jaws cam out, the procedure is complete. If jaws do not cam out, repeat steps 1 & 2.
4. Continue to repeat steps 1 through 3 until the jaws properly cam.

Over-tightening will cause excessive wear to the brake bands. Do not over-tighten brake bands.

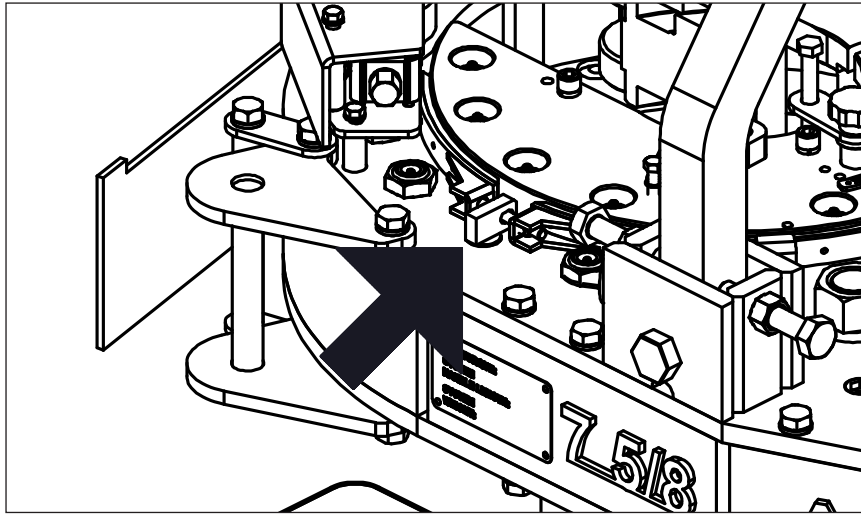

**Illustration 5.6.1: Brakeband Adjustment Locations**

## 5.7 ASSEMBLY PRACTICES

Although the assembly of McCoy hydraulic power tongs is straightforward and can be accomplished without the use of special tools, the instructions in this subsection are presented as a guide only and are similar to the assembly sequence our technician would use while assembling the tong in our plant.

**NOTE ON INSTALLATION PRACTICES:** Ensure all bearings are liberally greased before installing over a shaft or into gears or bearing caps. When inserting a shaft through a support roller assembly ensure shaft is greased. Also ensure all metal-to-metal contact in the gear train is adequately greased. **Please refer to the relevant exploded diagrams in Section 7 when assembling components in this power tong and backup.**

### **WARNING**

**ALL FASTENERS USED DURING REASSEMBLY OF LOAD-BEARING COMPONENTS (CHAIN SLINGS, RIGID SLINGS, BACKUP LEGS) MUST BE TIGHTENED TO THE CORRECT TORQUE. THREADED FASTENERS USED IN LOAD-BEARING DEVICES MUST BE SECURED WITH RED LOCTITE™.**

**REPLACEMENT FASTENER (BOLTS, NUTS, CAP SCREWS, MACHINE SCREWS, ETC.) USED DURING MAINTENANCE OR OVERHAUL MUST BE GRADE 8 OR EQUIVALENT UNLESS OTHERWISE SPECIFIED.**

## 5.7 ASSEMBLY PRACTICES (CONTINUED):

TIGHTENING TORQUE GUIDE (DRY)			
SAE GRADE 8 - FINE THREAD			
SIZE	CLAMP LOAD	PLAIN	PLATED
¼ - 28 (.250)	3,263	14 ft. lbs.	10 ft. lbs.
<sup>5</sup> / <sub>16</sub> - 24 (.3125)	5,113	27 ft. lbs.	20 ft. lbs.
<sup>3</sup> / <sub>8</sub> - 24 (.375)	7,875	49 ft. lbs.	37 ft. lbs.
<sup>7</sup> / <sub>16</sub> - 20 (.4375)	10,650	78 ft. lbs.	58 ft. lbs.
½ - 20 (.500)	14,400	120 ft. lbs.	90 ft. lbs.
<sup>9</sup> / <sub>16</sub> - 18 (.5625)	18,300	172 ft. lbs.	129 ft. lbs.
<sup>5</sup> / <sub>8</sub> - 18 (.625)	23,025	240 ft. lbs.	180 ft. lbs.
<sup>3</sup> / <sub>4</sub> - 16 (.750)	33,600	420 ft. lbs.	315 ft. lbs.
<sup>7</sup> / <sub>8</sub> - 14 (.875)	45,825	668 ft. lbs.	501 ft. lbs.
1 - 12 (1.000)	59,700	995 ft. lbs.	746 ft. lbs.
1 - 14 (1.000)	61,125	1019 ft. lbs.	764 ft. lbs.
1- <sup>1</sup> / <sub>8</sub> - 12 (1.125)	77,025	1444 ft. lbs.	1083 ft. lbs.
1- <sup>1</sup> / <sub>4</sub> - 12 (1.125)	96,600	2012 ft. lbs.	1509 ft. lbs.
1- <sup>3</sup> / <sub>8</sub> - 12 (1.375)	118,350	2712 ft. lbs.	2034 ft. lbs.
1-½ - 12 (1.500)	142,275	3557 ft. lbs.	2668 ft. lbs.
SAE GRADE 8 - COARSE THREAD			
SIZE	CLAMP LOAD	PLAIN	PLATED
¼ - 20 (.250)	2,850	12 ft. lbs.	9 ft. lbs.
<sup>5</sup> / <sub>16</sub> - 18 (.3125)	4,725	25 ft. lbs.	18 ft. lbs.
<sup>3</sup> / <sub>8</sub> - 16 (.375)	6,975	44 ft. lbs.	33 ft. lbs.
<sup>7</sup> / <sub>16</sub> - 14 (.4375)	9,600	70 ft. lbs.	52 ft. lbs.
½ - 13 (.500)	12,750	106 ft. lbs.	80 ft. lbs.
<sup>9</sup> / <sub>16</sub> - 12 (.5625)	16,350	153 ft. lbs.	115 ft. lbs.
<sup>5</sup> / <sub>8</sub> - 11 (.625)	20,325	212 ft. lbs.	159 ft. lbs.
<sup>3</sup> / <sub>4</sub> - 10 (.750)	30,075	376 ft. lbs.	282 ft. lbs.
<sup>7</sup> / <sub>8</sub> - 9 (.875)	41,550	606 ft. lbs.	454 ft. lbs.
1 - 8 (1.000)	54,525	909 ft. lbs.	682 ft. lbs.
1- <sup>1</sup> / <sub>8</sub> - 7 (1.125)	68,700	1288 ft. lbs.	966 ft. lbs.
1- <sup>1</sup> / <sub>4</sub> - 7 (1.125)	87,225	1817 ft. lbs.	1363 ft. lbs.
1- <sup>3</sup> / <sub>8</sub> - 6 (1.375)	103,950	2382 ft. lbs.	1787 ft. lbs.
1-½ - 6 (1.500)	126,450	3161 ft. lbs.	2371 ft. lbs.

**NOTICE****IMPORTANT ASSEMBLY INFORMATION**

**DO NOT TORQUE NYLOCK NUTS. NYLOCK NUTS ARE NOT USED FOR CLAMPING PURPOSES AND SHOULD ONLY BE TIGHTENED UNTIL METAL-TO-METAL CONTACT IS MADE AND VERTICAL MOTION IS ELIMINATED. OVER-TIGHTENING WILL RESULT IN PREMATURE BUSHING FAILURE AND WILL INHIBIT ROTATION, AND MAY IMPART EXCESS STRESS ON ROTATING COMPONENTS.**

**NYLOCK NUTS ARE A ONE-TIME USE ITEM AND MUST BE DISCARDED & REPLACED AFTER USE.**

**This page intentionally  
left blank**

**5.8 DAILY INSPECTION & MAINTENANCE CHECKLIST**

McCoy recommends that the following inspection and maintenance procedures be performed before each use, and at least once per day when the tong is in steady use, in the order in which they are listed.

1.  Rotate cage plate/ring gear until the opening in the ring gear faces towards the rear of the tong.

## **WARNING**

**DO NOT PERFORM ANY FURTHER ACTIONS OR MAINTENANCE WHILE THE TONG IS CONNECTED TO ANY HYDRAULIC POWER SUPPLY. MCCOY RECOMMENDS THAT ALL HYDRAULIC LINES ARE FULLY DISCONNECTED, AND RESIDUAL HYDRAULIC PRESSURE IS BLEED OFF. ENSURE ADEQUATE CONTAINMENT IS IN PLACE TO PREVENT ENVIRONMENTAL CONTAMINATION FROM RESIDUAL HYDRAULIC FLUID.**

### **DEPRESSURIZE HYDRAULIC SYSTEM IN PREPARATION FOR MAINTENANCE:**

1. Rotate the tong to the “open throat” position. Ensure tong and backup doors (if equipped) are closed. Fully extend the lift cylinder
2.  De-energize the power unit.
3. Repeatedly actuate the tong motor control valve lever IN BOTH DIRECTIONS to dissipate any residual pressure in the valve and motor.
4. Remove the hydraulic SUPPLY line from the equipment.
5. Repeatedly actuate the remaining control valve levers IN BOTH DIRECTIONS to dissipate any residual pressure in the remainder of the hydraulic control system.
7. Disconnect the hydraulic RETURN line from the equipment.
8. Disconnect remaining hoses such as case drains, or lines connected to the turns counter.

## **WARNING**

**HYDRAULIC PRESSURES AS HIGH AS OPERATING PRESSURE MAY REMAIN TRAPPED IN SMALL AREAS OF THE EQUIPMENT. ENSURE ALL MAINTENANCE IS CARRIED OUT BY A QUALIFIED SERVICE TECHNICIAN, AND THAT ADEQUATE PERSONAL PROTECTIVE EQUIPMENT IS USED TO GUARD AGAINST PRESSURE INJURIES**

3.  Remove the majority of dirt and grease build-up from the tong, backup, and frame assembly using a hose with spray nozzle, or a pressure washer set to the “low pressure” mode. Ensure adequate containment is in place to prevent environmental contamination from residual hydraulic fluid and dirty grease.
4.  If present, remove the access panel on the side of the tong directly adjacent to the shifter mechanism.
5.  Use a flashlight to perform a visual inspection of the gear train through the opening of the ring gear. If gear damage or chips of metal are seen, the tong should be removed from service and overhauled to avoid further damage.
6.  Perform a visual inspection of all fasteners and protruding body pieces (example: hydraulic valve mounts, inlet & outlet line supports, tong legs, shifter handle pivot lugs). Tighten or replace loose or missing fasteners. McCoy recommends that damaged or missing body parts be repaired or replaced as soon as possible.
7.  Inspect the jaws and dies on the tong and backup. Inspect the jaw roller pins for signs of damage - replace pins if necessary. If the pins are welded in place, replace the entire jaw assembly. Ensure dies are secure in the jaw - replace worn dies if necessary. Ensure that the jaw rollers rotate freely. Check to ensure the size of the loaded jaws match the size of casing or pipe being run.
8.  Perform a visual inspection of all lifting points - if visible damage is seen, including cracks, broken lugs, distorted metal, etc. replace damaged part(s) before placing tong in service. Also inspect all chains, master links, and turnbuckles - again, if any damage is noted replace the damaged part(s) before placing the tong in service.
9.  Inspect tong for signs of premature wear, or moving parts that are rubbing (bare metal where there used to be paint is a good indication of wear).



## 5.8 DAILY INSPECTION &amp; MAINTENANCE CHECKLIST (CONTINUED):

10.  Inspect backing pin(s). If cracked, broken, or bent it (they) must be replaced.
11.  Inspect top and bottom brake band linings - replace if necessary. Unequal wear of the brake bands indicates that the brake band tension is not evenly adjusted. Refer to the maintenance section of the manual for instructions on properly adjusting brake bands.
12.  Perform a visual inspection of all hydraulic lines. Replace flexible lines if they appear to be cracked, fatigued, or have visible signs of wear from contact with a rigid object.
13.  Perform a complete lubrication of the tong. Refer to Maintenance section of this technical manual.
14.  Ensure main supply and return connections to the tong are fully made up. Reconnect the remainder of the hydraulic lines, and, if applicable, the electrical line to the turns counter.

 **WARNING**

**FAILURE TO ENSURE THAT THE SELF-SEALING SUPPLY AND RETURN LINES ARE FULLY MADE UP MAY RESULT IN CATASTROPHIC EQUIPMENT FAILURE.**

If using a stand-alone power unit, start it now. Refer to the power unit technical manual for startup procedures. Listen to power unit for a moment to see if there are any unusual mechanical sounds (rubbing, grinding, excessive pump noise). If using a diesel unit, allow sufficient time for the engine to reach operating temperature before increasing engine RPM. Once engine is warm, gradually increase engine RPM until operating speed is reached.

15.  Ensure that supply pressure is at or above the tong's specified operating pressure, and that the return pressure is less than 350 psi.
16.  Perform a visual inspection of pressurized hydraulic lines. Document and correct any hydraulic fluid leaks.
17.  Perform a full functional test of the tong (see Operation Section). Report and correct any hydraulic leaks from the hydraulic valve bank, or from any hydraulic cylinders that are used.
18.  Perform a visual inspection of the load cell. If using a tension load cell, replace any cracked, broken, or distorted components including links and chains.
19.  If applicable, inspect the load cell anchor pins (tension load cell only). Replace the anchor pins if cracking or metal distortion is seen.
20.  While rotating the cage plate, ensure that the jaws properly cam. If the jaws do not cam properly, the brake bands need to be tightened. Incrementally adjust the brake band until proper cam action is achieved (see "Illustration 5.6.1: Brakeband Adjustment Locations" on page 5.8).

## 5.9 MONTHLY MAINTENANCE CHECKLIST

The following maintenance checklist is intended as a guideline rather than a definitive maintenance schedule. More or less maintenance may be required depending upon the frequency of use, the percentage of maximum torque that the equipment is routinely subjected to, and the field conditions under which the equipment operates. McCoy Global recommends that the following inspection and maintenance procedures be performed monthly under normal operating conditions.

1.  Rotate cage plate/ring gear until the opening in the ring gear faces towards the rear of the tong.

 **WARNING**

**DO NOT PERFORM ANY FURTHER ACTIONS OR MAINTENANCE WHILE THE TONG IS CONNECTED TO ANY HYDRAULIC POWER SUPPLY. MCCOY RECOMMENDS THAT ALL HYDRAULIC LINES ARE FULLY DISCONNECTED, AND RESIDUAL HYDRAULIC PRESSURE IS BLEED OFF. ENSURE ADEQUATE CONTAINMENT IS IN PLACE TO PREVENT ENVIRONMENTAL CONTAMINATION FROM RESIDUAL HYDRAULIC FLUID.**

**DEPRESSURIZE HYDRAULIC SYSTEM IN PREPARATION FOR MAINTENANCE:**

2.
1. Rotate the tong to the "open throat" position. Ensure tong and backup doors (if equipped) are closed. Fully extend the lift cylinder
  2. De-energize the power unit.
  3. Repeatedly actuate the tong motor control valve lever IN BOTH DIRECTIONS to dissipate any residual pressure in the valve and motor.
  4. Remove the hydraulic SUPPLY line from the equipment.
  5. Repeatedly actuate the remaining control valve levers IN BOTH DIRECTIONS to dissipate any residual pressure in the remainder of the hydraulic control system.
  7. Disconnect the hydraulic RETURN line from the equipment.
  8. Disconnect remaining hoses such as case drains, or lines connected to the turns counter.

 **WARNING**

**HYDRAULIC PRESSURES AS HIGH AS OPERATING PRESSURE MAY REMAIN TRAPPED IN SMALL AREAS OF THE EQUIPMENT. ENSURE ALL MAINTENANCE IS CARRIED OUT BY A QUALIFIED SERVICE TECHNICIAN, AND THAT ADEQUATE PERSONAL PROTECTIVE EQUIPMENT IS USED TO GUARD AGAINST PRESSURE INJURIES**

3.  Clean the exterior of the tool thoroughly, using either a water hose with a spray nozzle or a pressure washer using a low-pressure wash wand, or an appropriate solvent-based grease-cutting cleaner such as Varsol. Ensure adequate containment is in place to prevent environmental contamination from residual hydraulic fluid, dirty grease, and cleaning agents.
4.  Clean the interior spaces of the tool thoroughly, using either a water hose with a spray nozzle (do not use a pressure washer), or an appropriate solvent-based grease-cutting cleaner such as Varsol. Ensure adequate containment is in place to prevent environmental contamination from residual hydraulic fluid, dirty grease, and cleaning agents. Make a note if any metal shavings or metal pieces are flushed out of the gear train cavity - if shavings or metal pieces are seen the tong must be overhauled before it is returned to service.
5.  Inspect all fasteners and fastener safety wires (if equipped). Replace any missing fasteners - use Grade 8 bolts only unless otherwise specified. Re-torque all external fasteners to SAE specifications.
6.  Repair or replace any damaged or missing external body parts, such as torque gauge mounts, hydraulic supports, door switch protectors, etc.
7.  Perform a visual inspection of all protruding body pieces (example: hydraulic valve mounts, inlet & outlet line supports, tong legs, shifter handle pivot lugs). Tighten or replace loose or missing fasteners. McCoy recommends that damaged or missing body parts be repaired or replaced as soon as possible.

## 5.9 MONTHLY MAINTENANCE CHECKLIST (CONTINUED):

8.  Inspect tong for signs of premature wear, or moving parts that are rubbing (bare metal where there used to be paint is a good indication of wear).
9.  Inspect all paint - locations in which the paint has been damaged must be repaired prior to the tong being returned to service. Prepare areas to be painted to ensure they are free of grease, dirt, or solvent. Touch up using a solvent-based acrylic paint. Allow sufficient time for paint to dry before proceeding.
10.  Inspect all external welds. Any weld that is cracked or separating must be repaired and repainted before returning the tong to service.
11.  Perform a visual inspection of all lifting points - if visible damage is seen, including cracks, broken lugs, distorted metal, etc. replace damaged part(s) before placing tong in service. Also inspect all chains, master links, and turnbuckles - again, if any damage is noted replace the damaged part(s) before placing the tong in service. Refer to Section 3 of this technical manual for information on recommended testing and recertification.
12.  Inspect all jaws and dies used since the last monthly inspection. Inspect jaw roller pins for signs of damage - replace pins if necessary. If damaged pins are welded in place, remove and quarantine the jaw until the weld is repaired. Ensure dies are secure in the jaw - replace worn dies if necessary. Ensure that the jaw rollers rotate freely.
13.  Inspect backing pin(s). Replace cracked, broken, or bent pins.
14.  Inspect brake band lining. Replace if necessary. Unequal wear of the brake bands indicates that the brake band tension is not evenly adjusted. Refer to "Illustration 5.6.1: Brakeband Adjustment Locations" on page 5.8 for instructions on properly adjusting brake bands.
15.  Test the door latching mechanism. Ensure the latch fully engages the tong body when the door is closed.
16.  Perform a visual inspection of all hydraulic lines. Replace flexible lines if they appear to be cracked, fatigued, or have visible signs of wear from contact with a rigid object. If the equipment is equipped with rigid hydraulic lines, replace any line that is dented or appears to be stressed or cracked.
17.  Generously fill the gear train housing with grease. Perform a full lubrication per Section 5 of this manual.
18.  Ensure main supply and return connections to the tong are fully made up. Reconnect the remainder of the hydraulic lines, and, if applicable, the electrical line to the turns counter.


**WARNING**

**FAILURE TO ENSURE THAT THE SELF-SEALING SUPPLY AND RETURN LINES ARE FULLY MADE UP MAY RESULT IN CATASTROPHIC EQUIPMENT FAILURE.**

If using a stand-alone power unit, start it now. Refer to the power unit technical manual for startup procedures. Listen to power unit for a moment to see if there are any unusual mechanical sounds (rubbing, grinding, excessive pump noise). If using a diesel unit, allow sufficient time for the engine to reach operating temperature before increasing engine RPM. Once engine is warm, gradually increase engine RPM until operating speed is reached.

19.  Ensure that supply pressure is at or above the tool's specified operating pressure, and that the return pressure is less than 350 psi.
20.  Perform a visual inspection of pressurized hydraulic lines. If any hydraulic fittings or hoses are leaking they must be repaired or replaced before proceeding.
21.  Rotate tong for one minute, stop, and reverse the direction of rotation for another minute, finishing with the opening of the ring gear facing the gear train. De-energize the power unit, and perform another generous lubrication of the gear train, including the gear housing.
22.  Energize power unit. Rotate tong for one minute, stop, and reverse the direction of rotation for another minute, ending with the opening of the ring gear facing the gear train.
23.  De-energize the power unit, and perform a third generous lubrication of the gear train, including the gear housing.
24.  Rotate tong at low speed for 5 minutes while monitoring pressurized seals and hydraulic lines. If a seal, line, or fitting begins to leak while tong is rotating, it must be replaced before the equipment is returned to service.

**5.9 MONTHLY MAINTENANCE CHECKLIST (CONTINUED):**

25.  Rotate tong at high speed for 5 minutes while monitoring temperature of top and bottom bearing caps. If the bearing caps are hot to the touch (higher than approximately 50°C) replace the applicable bearings. Note any unusual sounds (grinding, rubbing) may be indicative of damaged bearings (see section 7 for exploded views for all bearing locations). Monitor hydraulic inlet and outlet lines to ensure operating temperature of the hydraulic fluid does not exceed the specifications stated in the Description & Specifications Section.
26.  Install load cell. Perform a visual inspection of the load cell components and replace any cracked, broken, or distorted items including links and chains. Check oil level in load cell and fill if necessary (refer to Section 8 of the technical manual).
27.  Inspect the load cell anchor pins. Replace the anchor pins if cracking or metal distortion is seen.
28.  While rotating the cage plate, ensure that the jaws properly cam. If the jaws do not cam properly, the brake bands need to be tightened. Incrementally adjust both the top and bottom brake bands EQUALLY until proper cam action is achieved. Refer to the Maintenance Section for instructions on properly adjusting brake bands.
29.  Perform a full functional test of the tong including, if applicable, backup components, lift cylinder, and float frame components. Report and correct any hydraulic leaks from the hydraulic valve bank, or from any hydraulic cylinders that are used.
30.  McCoy recommends that an anti-corrosive agent such as Tectyl® 506 be applied to all external unpainted surfaces (and chain slings) EXCEPT cylinder rods, jaw rollers, and ring gear camming surfaces. Refer to manufacturer data sheets for proper application and safety information.

**Once all of the above maintenance checklist items have been satisfactorily completed the tool may be returned to service.**

**5.10 TUBULAR CONNECTION EQUIPMENT DE-COMMISSIONING & SHIPPING**

Perform the following decommissioning procedures when removing tubular connection equipment from service, with the intent of short to long-term storage. These procedures are essential for ensuring proper protection of the equipment from environmental attack, and to aid in the quick turnaround when returning the equipment to service.

Store all o-rings, seals, packings, gaskets, etc. in strong moisture proof, airtight containers. Ensure that these items are not crushed, nicked, or otherwise damaged.

Do not perform any further actions or maintenance while the tong is connected to any hydraulic power supply. McCoy Global recommends that all hydraulic lines are fully disconnected, and residual hydraulic pressure is bled off. Ensure adequate containment is in place to prevent environmental contamination from residual hydraulic fluid.

**NOTICE**

**IN ORDER TO MAINTAIN THE INTEGRITY OF INSTALLED SEALS, MCCOY RECOMMENDS THAT THE MAXIMUM STORAGE INTERVAL NOT EXCEED ONE YEAR. AT LEAST ONCE PER YEAR ALL TUBULAR CONNECTION EQUIPMENT IN LONG-TERM STORAGE SHOULD BE RECOMMISSIONED AS PER SECTION 4.L. IF FURTHER STORAGE IS REQUIRED, THE EQUIPMENT SHOULD THEN BE PUT THROUGH ANOTHER DE-COMMISSIONING PROCEDURE.**

De-pressurization Procedure In Preparation For Storage:

1. Rotate the tong so that the opening in the ring gear faces the gear train (towards the rear of the tong). Ensure tong and backup doors are closed.
2. De-energize the hydraulic power supply.
3. Repeatedly actuate the tong motor control valve lever IN BOTH DIRECTIONS to dissipate any residual pressure in the valve and motor.
4. Remove the hydraulic SUPPLY line from the equipment.
5. Repeatedly actuate the remaining control valve levers IN BOTH DIRECTIONS to dissipate any residual pressure in the remainder of the hydraulic control system.
7. Disconnect the hydraulic RETURN line from the equipment.
8. Disconnect all remaining quick-connect hoses.
9. Disconnect all remaining connections from the equipment - for example, load cell connections, turns counter connections, dump valve connections. Ensure the tool is completely free of all connections before beginning storage preparations.

**WARNING**

**HYDRAULIC PRESSURES AS HIGH AS OPERATING PRESSURE MAY REMAIN TRAPPED IN SMALL AREAS OF THE EQUIPMENT. ENSURE ALL MAINTENANCE IS CARRIED OUT BY A QUALIFIED SERVICE TECHNICIAN, AND THAT ADEQUATE PERSONAL PROTECTIVE EQUIPMENT IS USED TO GUARD AGAINST PRESSURE INJURIES**

1.  Perform an initial wash of the tool in order to remove the majority of dirt and grease build-up. Ensure adequate containment is in place to prevent environmental contamination from residual hydraulic fluid and dirty grease.  
Clean the interior of the tong thoroughly, using either water (do not use a pressure washer), or an appropriate solvent-based grease-cutting cleaner such as Varsol. Ensure adequate containment is in place to prevent environmental contamination from residual hydraulic fluid, dirty grease, and cleaning agents.
2.  Clean the interior of the tong thoroughly, using either water (do not use a pressure washer), or an appropriate solvent-based grease-cutting cleaner such as Varsol. Ensure adequate containment is in place to prevent environmental contamination from residual hydraulic fluid, dirty grease, and cleaning agents. Make a note if any metal shavings or metal pieces are flushed out of the gear train cavity - if shavings or metal pieces are seen the tong must be overhauled before it is returned to service.
3.  Clean the exterior of the tool thoroughly, using either water (do not use a pressure washer), or an appropriate solvent-based grease-cutting cleaner such as Varsol. Ensure adequate containment is in place to prevent environmental contamination from residual hydraulic fluid, dirty grease, and cleaning agents.
4.  Inspect all fasteners and fastener safety wires (if equipped). Replace any missing fasteners - use Grade 8 bolts only. Re-torque all external fasteners to SAE specifications.
5.  Inspect backing pin(s). Replace cracked, broken, or bent pins.

## 5.10 TUBULAR CONNECTION EQUIPMENT DE-COMMISSIONING &amp; SHIPPING (CONTINUED):

6.  Repair or replace any damaged or missing external body parts
- Inspect all paint - locations in which the paint has been damaged must be repaired prior to the tong being returned to service. Prepare areas to be painted to ensure they are free of grease, dirt, or solvent. Touch up using a solvent-based acrylic paint - "McCoy Grey" is paint color number RAL7015, "McCoy Yellow" (hazard areas) is RAL1007, and McCoy Green is RAL6029 (contact McCoy sales for paint number for custom paint applications). Allow sufficient time for paint to dry before proceeding.
7.  Perform a liberal lubrication of the equipment - refer to the Maintenance Section of this manual to determine lubrication points. Generously fill the gear train housing with grease through the opening in the ring gear.
8.  Connect the equipment to a hydraulic power unit. Ensure all quick-connect control lines are securely connected to prevent equipment damage from excessive back pressure. Do not neglect to connect the motor drain.
9.  Energize hydraulic power to the tool.
10.  Rotate tong for one minute, stop, and reverse the direction of rotation for another minute, ending with the opening of the ring gear facing the gear train. De-energize the power unit, and perform another generous lubrication of the gear train, including the gear housing.
11.  Energize hydraulic power to the tool. Rotate tong for one minute, stop, and reverse the direction of rotation for another minute, ending with the opening of the ring gear facing the gear train.
12.  De-energize the power unit, and perform a third generous lubrication of the gear train, including the gear housing.
13.  Energize hydraulic power to the tool, and rotate the tong for a final time, one minute in one direction, stop, and reverse the direction of rotation for another minute, this time ending with the ring gear in the "open throat" position.
14.  Extend all hydraulic cylinders, and inspect cylinder rods for signs of mechanical damage, flaking, or rust. McCoy recommends that damaged cylinders be replaced prior to storage.
- Depressurize the equipment in preparation for storage
1. Rotate the tong to the "open throat" position.
  2. Exercise each hydraulic cylinder several times - open the tong and backup doors, retract and extend the reversing pins, retract and extend the float cylinders. Finish with all cylinders except for the door cylinders in their fully retracted position. The general idea is to have as little of the chrome cylinder rods exposed as possible.
  3. De-energize the power unit.
  4. Repeatedly actuate the tong motor control valve lever IN BOTH DIRECTIONS to dissipate any residual pressure in the valve and motor.
15.  Remove the hydraulic SUPPLY line from the equipment.
5. Repeatedly actuate the remaining control valve levers IN BOTH DIRECTIONS to dissipate any residual pressure in the remainder of the hydraulic control system.
  6. Connect a low-pressure air supply line (10 PSI or less) to the hydraulic supply line, and force a small amount of the remaining hydraulic fluid from the valve assembly - this will allow for thermal expansion of the hydraulic fluid if the equipment is stored or transported in high ambient temperatures. Failure to do this may result in damaged or destroyed seals in the equipment.
  7. Disconnect the hydraulic RETURN line from the equipment.
  8. Disconnect all remaining quick-connect hoses.
  9. Disconnect all remaining connections from the equipment - for example, load cell connections, turns counter connections, dump valve connections. Ensure the tool is completely free of all connections before beginning storage preparations.

 **WARNING**

**HYDRAULIC PRESSURES AS HIGH AS OPERATING PRESSURE MAY REMAIN TRAPPED IN SMALL AREAS OF THE EQUIPMENT. ENSURE ALL MAINTENANCE IS CARRIED OUT BY A QUALIFIED SERVICE TECHNICIAN, AND THAT ADEQUATE PERSONAL PROTECTIVE EQUIPMENT IS USED TO GUARD AGAINST PRESSURE INJURIES**

**5.10 TUBULAR CONNECTION EQUIPMENT DE-COMMISSIONING & SHIPPING (CONTINUED):**

17.  Repair or replace all leaking hydraulic fittings or hoses before proceeding.
18.  Use a solvent-based cleaner on rags to wipe all external surfaces to remove all residual grease or hydraulic fluid. Once the exterior surfaces have been de-greased, wipe all external surfaces with clean water to remove residual solvent.
19.  McCoy recommends that an anti-corrosive agent such as Tectyl® 506 be applied to all external surfaces EXCEPT cylinder rods (including chain slings). Refer to manufacturer data sheets for proper application and safety information. Allow the anti-corrosive coating ample time to dry - refer to manufacturer data sheets for drying times at room temperature.

 **CAUTION**

**DO NOT ALLOW ANTI-CORROSIVE AGENTS TO CONTACT CYLINDER RODS. CYLINDER ROD DAMAGE WILL OCCUR.**

20.  Apply grease or heavy oil to all exposed cylinder rods.
21.  Allow the anti-corrosive coating ample time to dry - refer to manufacturer data sheets for drying times at room temperature.
22.  Wrap entire assembly in 100 gauge (1 mil) corrosion-inhibiting wrap, at least 3 layers thick. Attempt to ensure that the tool is well-sealed within the wrapping, including the bottom.

If possible, store in a sealed, climate controlled environment. If isolated storage is not available, McCoy recommends storing wrapped equipment in a secure, out-of-the-way location, using silica gel desiccant to reduce the humidity within the wrapping. As a guideline, use 125 g. of desiccant for each cubic meter of space, or 3.5 g. per cubic foot.

**Calculation Of Required Desiccant:**

1. Calculate the trapped air volume by measuring the outside dimensions of the tool to be stored, and treat that as the volume to be stored. For example, the approximate external dimensions of this tool are 102" x 92" x 67.5", which calculates to an approximate volume of 633420 in<sup>3</sup>, or 367 ft<sup>3</sup> (10.392 m<sup>3</sup>).
2. Multiply the calculated air volume, in cubic feet, by the recommended amount of desiccant per cubic foot. Carrying forth the example used in the previous step, the required desiccant charge would be 3.5 g. x 367 ft<sup>3</sup>, equaling 1.285 kg. Several manufacturers offer silica gel desiccant in packaged quantities of 125 grams per bag, so ten to eleven packages of desiccant would be required. Please keep in mind that this is a guideline only - more or less desiccant may be required in extreme environmental conditions.

For best corrosion resistance the equipment should be removed from storage and exercised on a regular basis, depending on the storage environment. McCoy recommends that for equipment stored in a salt-water maritime or exposed dusty environment, repeat steps 9 through 24 monthly. For equipment stored in isolated storage in a non-maritime environment, repeat steps 9 through 24 quarterly. Replace desiccant packs at this time - depleted desiccant packs may be treated as regular dunnage.



**5.10 TUBULAR CONNECTION EQUIPMENT DE-COMMISSIONING & SHIPPING (CONTINUED):****Shipping Instructions:**

The following procedure lists the steps to be followed to prepare equipment for shipping.

1. If not already done remove accessories (tong jaws, load cell, torque gauge, etc.) McCoy recommends wrapping these items in protective wrap and placing in a separate wooden crate.
2. Place the equipment on a sturdy pallet constructed of 4" x 4" cross-members and 2" x 4" flooring. Ensure the pallet is large enough to accommodate the wooden crate containing the tong accessories.
3. Do not allow the backup to "float" on its support springs during shipping. Build a sturdy wooden support structure under the front and back of the backup to support the weight of the backup and release the compression on the springs. Strap the backup to the support blocks and pallet independent of the tong, using minimum 3/4" x 0.029" metal strapping in at least two locations. Place strapping as close to the backup supports as possible, and use caution not to entrap any flexible hydraulic hoses beneath the strapping. Before tightening strapping, place strapping protectors wherever the metal strapping comes into contact with the equipment.
4. Securely strap the equipment in place using metal strapping. Place strapping as close to the cross-members under the equipment legs as possible, and use caution not to entrap any flexible hydraulic hoses beneath the strapping (guide strapping through beneath the hydraulic hoses). Use the following guidelines to determine the strapping requirements:

Assemblies weighing 1000 lbs. (454 kg.) or less:

3/4" x 0.029" metal strapping, 3320 lbs. (1509 kg.) tensile strength  
Minimum two straps

Assemblies weighing more than 1000 lbs. (454 kg.) or less:

1-1/4" x 0.031" metal strapping, 5500 lbs. (2500 kg.) tensile strength  
Minimum two straps for assemblies weighing less than 5000 lbs. (2273 kg.)  
Minimum three straps for assemblies weighing more than 5000 lbs. (2273 kg.)

Before tightening strapping, place strapping protectors wherever the metal strapping comes into contact with the equipment.

Place the wooden crate containing the tong accessories on the crate next to the equipment. Strap the crate to the pallet using 3/4" x 0.029" metal strapping. If it is not practical to place larger loose items in a wooden crate, ensure they are also securely strapped to the pallet using 3/4" x 0.029" metal strapping. Use a large polyethylene shipping bag (sometimes called a pallet cover) to completely enclose the equipment. Seal polyethylene bag to the pallet using 1 mil polyethylene wrap. Use the wrap to conform the plastic cover to the general shape of the equipment, but do not wrap so tight that sharp edges on the equipment perforate the cover.

McCoy recommends enclosing the equipment in a sturdy shipping crate which is securely fastened to the pallet.



**Illustration 5.10.1: Shipping Instructions - Strapping Equipment To Pallet**



**5.11 TUBULAR CONNECTION EQUIPMENT RE-COMMISSIONING PROCEDURE**

Perform the following recommissioning procedures when removing tubular connection equipment from short or long-term storage back into regular service. These procedures are essential for ensuring proper equipment preparation and operation. The following procedures also assume that the decommissioning and storage procedures recommended by McCoy have been strictly observed.

1.  Remove all protective plastic wrapping. Exhausted desiccant packs within the wrapping may be disposed of with the regular garbage. Remove all remaining shipping and/or storage material including straps, blocks, plugs, wire-ties, etc. Ensure the backup floats freely on its suspension chains.
2.  Wipe excess grease or heavy oil from exposed cylinder rods.
3.  Perform a visual inspection of all lifting points - visibly damaged components (cracks, broken lugs, distorted metal, etc.) must be replaced or repaired before placing tong in service. Inspect all chains, master links, and turnbuckles. Damaged components must be replaced before placing the tong in service. If yearly certification of lifting equipment is required, ensure that the most recent test date falls within the past year. Perform recertification if necessary.
4.  Perform a liberal lubrication of the equipment - refer to lubrication diagrams on page 5.6. Generously fill the gear train housing with grease through the opening in the ring gear.
5.  Connect the equipment to a hydraulic power unit. Ensure all lines are fully made up to prevent equipment damage from excessive back pressure. Do not neglect to connect the motor drain.


**WARNING**

**FAILURE TO ENSURE THAT THE SELF-SEALING SUPPLY AND RETURN LINES ARE FULLY MADE UP MAY RESULT IN CATASTROPHIC EQUIPMENT FAILURE.**

6.  Energize hydraulic power to the tool. Ensure that supply pressure is at or above the tong's specified operating pressure, and that the return pressure is less than 350 psi.
7.  Perform a thorough inspection of pressurized hydraulic lines and fittings. Leaking hydraulic fluid lines or fittings must be replaced before returning the equipment to service.
8.  Perform a thorough inspection of all seals. Any seal that is leaking or "weeping" must be replaced before returning the equipment to service.
9.  Rotate tong at low speed for 5 minutes while monitoring pressurized seals and hydraulic lines. If a seal, line, or fitting begins to leak while tong is rotating, it must be replaced before returning the equipment to service. Finish this step with the ring gear opening facing the gear train. De-energize the power unit.
10.  Inspect all flexible hydraulic lines for signs of wear, blistering, or any other signs of potential failure - replace if signs of potential failure are identified.
11.  Inspect the gear train housing. If the amount of grease is inadequate, liberally grease the gear train through the access panel, and through the opening in the ring gear.
12.  Inspect the brake band lining. Replace if necessary. Unequal wear of the brake band indicates that the brake band tension is not evenly adjusted. Refer to "Illustration 5.6.1: Brakeband Adjustment Locations" on page 5.8 for instructions on properly adjusting brake bands. Ensure that all grease is wiped from brake band linings and the parts of the cage plate that come into contact with the brake band linings are free from debris.
13.  Install a set of pre-inspected jaws that are the correct size for the pipe or casing being run.
14.  Install load cell. Perform a visual inspection and replace any cracked, broken, or distorted components including links and chains.
15.  Inspect the load cell anchor pins. Replace the anchor pins if cracking or metal distortion is seen.
16.  Re-energize hydraulic power to the tool.

Continued on next page...

**5.11 TUBULAR CONNECTION EQUIPMENT RE-COMMISSIONING PROCEDURE (CONTINUED):**

17.  Perform a full functional test of the equipment including, if applicable, backup components and float frame components. Report and correct any hydraulic leaks from the hydraulic valve bank, or from any hydraulic cylinders that are used.
18.  While rotating the cage plate, ensure that the jaws properly cam. If the jaws do not cam properly, the brake bands require tightening. See page 5.8 for instructions for adjusting the brake bands.
19.  When all of the previous steps are completed, the re-commissioned equipment may be returned to service.

**5.12 SPARE PARTS RECOMMENDATIONS**

McCoy recommends that the following list of spare parts be kept on hand for basic maintenance and repairs.

Item	Part Number	Description	Qty. Rec.
1	1902	BEARING, MRC5308MZZ	2
2	1909	BEARING	2
3	1900	BEARING, 5308 MZZG	1
4	1905	BEARING, CR, CUSTOM	3
5	1903	BEARING, MRC PART NUMBER 306 SZZC	1
6	1910	BEARING, SKF 1206	2
7	1901	BEARING, RADIAL DEEP GROOVE, 30MM X 72MM X 19MM, DOUBLE SEALED	2
8	55191	BUSHING, DUMBELL ROLLER	24
9	55125	BUSHING, DOOR	2
10	1005526	VALVE, CAM OPERATED, 2 WAY, NORM CLOSED OR OPEN	2
11	1968-ASY	ASSEMBLY, CAM FOLLOWER	13
12	ASAP2226	KIT, SEAL, 5 1/2 HT, 6 1/4 HT, & 7 5/8	2
13	1441	FITTING, 1 MALE, NIPPLE, QUICK DISCONNECT	1
14	1446	FITTING, 1 1/4 MALE, NIPPLE, QUICK DISCONNECT	1
15	1431	FITTING, 1/2 COUPLING, 1/2 NPTF, QUICK DISCONNECT	1
16	1445	FITTING, QUICK DISCONNECT, WING TYPE 1 1/4 FEMALE	1
17	1440	FITTING, QUICK DISCONNECT, WING TYPE 1 FEMALE	1
18	1001	FITTING, GREASE, 1/8 NPT	18
19	1002-E	FITTING, GREASE, NPT 1/4 45 DEG.	3
20	1004	GREASE ZERT, 3/16" DRIVE	4
21	DVG35-HMRV	RELIEF CARTRIDGE: INLET: 3000 PSI MAX	1
22	76061	ASSEMBLY, BRAKE BAND	1
23	BUC4019	SPRING, EXTENSION, #733--EXT., .562 OD, .072 WIRE, 2.88 OAL	2
24	BAC-5M25RCFF	GAUGE, 2 1/2, 5K, 1/4 MNPT	2
25	76114	PIN, PIVOT	2
26	1968	CAM FOLLOWER, W/ NEEDLE BEARING, CF-1 1/2-SB	6
27	76055-S1	SPACER, CAM, FOLLOWER	6
28	86052	CARTRIDGE, LOGIC ELEMENT	1



**This page intentionally  
left blank**



## SECTION 6: TROUBLESHOOTING

---



**This page intentionally  
left blank**

Adequate maintenance and proper fluid selection is essential for minimizing hydraulic-related failures. All troubleshooting must be performed by a technician trained in hydraulic systems, and familiar with the equipment design, assembly and operation.

The following troubleshooting instructions are intended to be guidelines only. Any faults not solved through the use of this guide should be referred to our engineering department for their evaluation and recommendations.

**6.0 TONG WILL NOT DEVELOP SUFFICIENT TORQUE**

	<b>POSSIBLE PROBLEM</b>	<b>SOLUTION(S)</b>
1	Malfunctioning relief valve on tong hydraulic circuit	Troubleshoot relief valve as per subsection 6.1 or OEM instructions.
2	Directional valve is leaking	Check directional valve. Neutral position should return fluid directly to the reservoir. Replace or repair valve to ensure correct operation
3	Power unit is not producing adequate pressure	Troubleshoot power unit (see user’s manual for power unit)
4	Poor hydraulic pressure at the tong despite adequate pressure at the power unit, or excessive back pressure in the return line.	Restrictions exist in line between power unit and tong. Inspect integrity of self-sealing couplings to ensure they are allowing full fluid flow. Check to ensure no other restrictions exist (contaminated catch screens or filters, for example)
5	Fluid viscosity is not appropriate (too high or too low)	Ensure hydraulic fluid being used is the viscosity recommended by McCoy Global. Power unit pump may not prime if fluid is too heavy, and the hydraulic system will overheat if fluid is too light. Replace with proper viscosity fluid
		Hydraulic fluid viscosity is affected by environmental conditions. Ensure the fluid being used is suitable for high or low temperatures. Replace with proper viscosity fluid for the operating conditions if necessary
6	Worn or damaged tong motor causing slippage	Replace or repair worn or damaged motor
7	Damaged bearings or gears causing excessive drag	Replace or repair worn or damaged gears or bearings
8	Jaws slipping on pipe	Ensure jaw dies are not worn to the point that they cannot grip. Ensure the correct sized jaws are in use
9	Torque gauge is indicating incorrectly	Incorrect gauge is being used. Ensure gauge is the proper range, and has been properly calibrated for the arm length of the equipment in use
		Gauge has been damaged. Check gauge operation and calibration on independent system
		Gauge has mistakenly been married to an incorrect load cell
10	Load cell is measuring incorrectly	Incorrect load cell is being used
		Air is trapped in torque measuring circuit (load cell, hydraulic line, or gauge). Refer to torque measurement troubleshooting in Section 8.1 of this manual
		Load cell has been damaged. Replace load cell, or return to McCoy for repair and re-calibration

**NOTICE**

**MCCOY GLOBAL GUARANTEES CALIBRATION OF A LOAD CELL/TORQUE GAUGE ASSEMBLY FOR A PERIOD OF ONE YEAR. MCCOY SUGGESTS THAT THE LOAD CELL/TORQUE GAUGE ASSEMBLY BE RETURNED TO THE FACTORY FOR RE-CALIBRATION ON A YEARLY BASIS.**

	<b>POSSIBLE PROBLEM</b>	<b>SOLUTION(S)</b>
11	Incorrect motor speed selected (applies to 2-speed motors only)	Maximum torque can only be developed when LOW motor speed (maximum hydraulic displacement) is selected.
12	Incorrect tong gear selected	Maximum torque can only be developed when LOW motor gear is selected

**6.1 TONG RUNNING TOO SLOWLY**

	<b>POSSIBLE PROBLEM</b>	<b>SOLUTION(S)</b>
<b>1</b>	Obstruction in tong hydraulic circuit preventing adequate flow	Inspect self-sealing couplings to ensure they are properly engaged
		The main hydraulic lines (supply and discharge) to the tong are obstructed. Remove and clean if required
<b>2</b>	Power unit is not producing adequate flow or pressure	Troubleshoot power unit (see user's manual for power unit)
<b>3</b>	Tong motor is excessively worn and is leaking hydraulic fluid past the vanes	Replace motor or rebuild as per OEM instructions
<b>4</b>	Bearings in gear train and rotary section are excessively worn	Overhaul tong. See Section 5.8 of this manual for instructions for exposing the gear box and support roller assemblies.
<b>5</b>	Shifter has malfunctioned and the tong is not shifting to high gear	Inspect and repair shift mechanism as necessary
<b>6</b>	Hydraulic fluid viscosity too high	Ensure hydraulic fluid meets McCoy specifications
		Ensure hydraulic fluid is appropriate for climatic conditions, especially during cold-weather operation
<b>7</b>	Bypass valve not functioning	Check and repair

**6.2 FAILURE OF JAWS TO GRIP PIPE**

	<b>POSSIBLE PROBLEM</b>	<b>SOLUTION(S)</b>
<b>1</b>	Dies have become too dull to provide adequate grip	Replace dies
<b>2</b>	Incorrect jaws are being used	Double-check jaw size to ensure they are rated for the diameter of pipe or casing being run
<b>3</b>	Incorrect dies are being used	Ensure dies loaded in the jaws are appropriate for the type of pipe or casing being run
<b>4</b>	Brake band(s) is (are) insufficiently adjusted, not allowing jaws to cam properly	Adjust brake bands to give proper resistance to cage plates
<b>5</b>	Jaw roller broken or worn	Remove jaw assembly and inspect. Replace rollers that are visibly "flat-spotted" or otherwise damaged

**6.3 FAILURE OR DIFFICULTY OF TONG TO SHIFT**

	<b>POSSIBLE PROBLEM</b>	<b>SOLUTION(S)</b>
<b>1</b>	Bent or broken shifter yoke	Inspect components. Replace shifter yoke if necessary.
<b>2</b>	Bent or broken shifter shaft	Replace shifting shaft.
<b>3</b>	Locking nuts on shifting shaft have loosened and position of yoke has changed	Reposition yoke and re-tighten locking set screws.
<b>4</b>	Shifting yoke has come loose from shifting shaft	Inspect yoke and inspect for damage. If free of damage, replace on shaft and tighten locking nuts
<b>5</b>	Shifting mechanism requires adjustment	Adjust shifting mechanism - see Section 5.6.4

**6.4 GENERAL COMMENTS**

The following factors generally contribute to poor hydraulic operation and premature wear of equipment:

1. Contaminated hydraulic fluid due to overuse, overheating, or inadequate fluid filtration.
2. Unsuitable hydraulic fluid, especially in extreme climatic conditions.
3. Defective packing or seals in components of the hydraulic system.
4. Poor or incomplete hydraulic system training. Users must be fully qualified to operate the equipment, and have complete understanding of the hydraulic system.

If established hydraulic troubleshooting procedures involve flow and pressure tests at the power unit, McCoy Global recommends construction of a test rig that can easily be connected to the main suction and discharge ports of the power unit.





**This page intentionally  
left blank**



## SECTION 7: PARTS & ASSEMBLIES

---



**This page intentionally  
left blank**


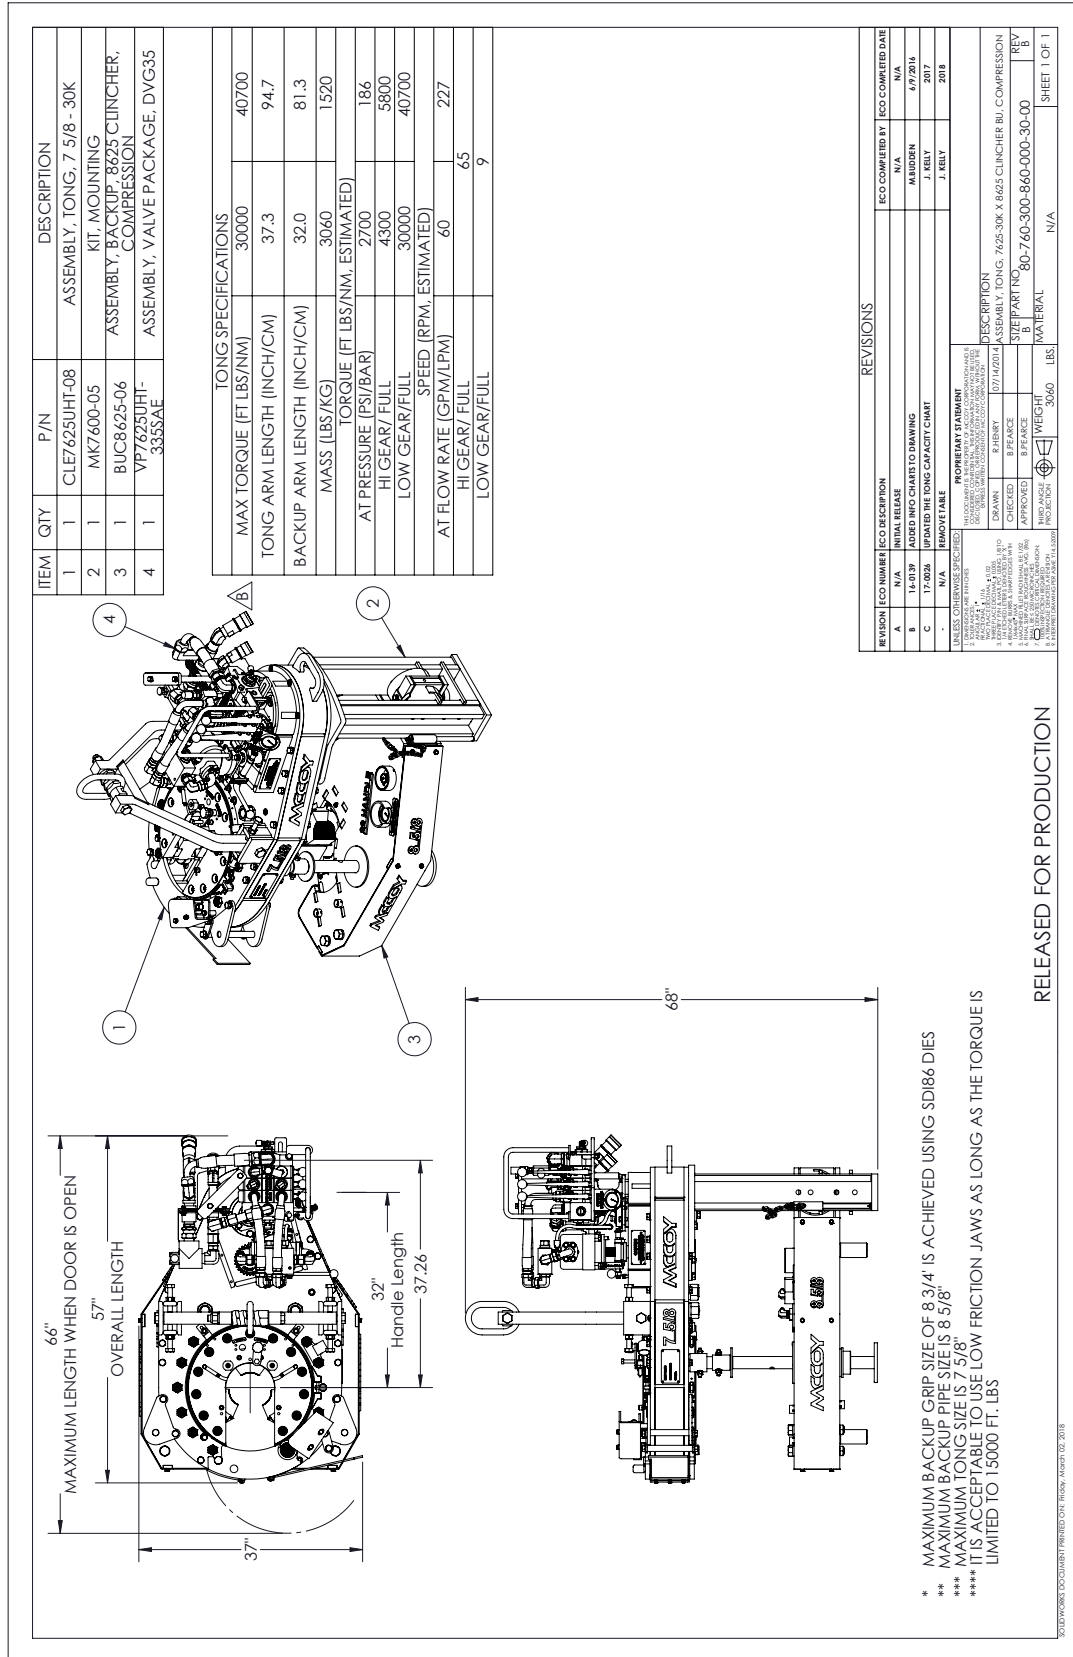


Illustration 7.1: 80-760-300-860-000-30-00 ASSEMBLY, TONG, 7625-30K X 8625 BU, COMPRESSION


ITEM QTY	P/N	DESCRIPTION	ITEM QTY	P/N	DESCRIPTION	ITEM QTY	P/N	DESCRIPTION	ITEM QTY	P/N	DESCRIPTION
1	76143-01	WELDMENT, PLATE, BOTTOM	48	1948-ASY	ASSEMBLY, CAM FOLLOWER	84	12501437	SEAL, POLYPACK, 1/716, 1/11/16, 1/8	1	45078	MOTOR, RINEER, 15 SERIES, 15 CID, KEYSHAFT
2	1151	LOCKWASHER, 5/8 STEEL, GR8	49	76056	PLATE, CAGE, BOTTOM	85	55088-A	SHAFT, MOTOR	1	55088	RETAINER, SEAL, SHAFT
3	1158	SCREW, HEX, 5/8-11, 1/3/4, STEEL, GR8	50	1108-M	SCREW, SOCKET HEAD, 1/2-13 X 8 1/2	86	55151-S1	PLATE, MOUNT, GAUGE	1	55151-S2	POST, MOUNT, GAGE
4	257	SCREW, SOCKET HEAD, 5/8-11 X 1/2	51	210	WASHER, LOCK, H-COLLAR, 1/2, GR8	87	CE-MAKE-TAG	TAG, CE-MAKE	1	76000-01	TAG, BREAK
5	55041-A	ASSEMBLY BEARING, RETAINER, 1 1/2 ALLOY	52	76053	KEY, RING, GEAR	88	CE-BREAK-TAG	ASSEMBLY, RETAINER, DOOR	1	76000-01	ASSEMBLY, RETAINER, DOOR
6	1157	SCREW, HEX, 5/8-11 X 1/2, GR8	53	1106-A	SCREW, CAP, SOCKET HEAD, 1/2-13 X 1 1/2, GR8	89	CE-SPEC-TAG	TAG, SPECIFICATION, CE TONG	1	1025	WELDMENT, MID BODY
7	1029	SCREW, SET, 3/8-16, 1/2, STEEL, GR8	54	76114	SPRING, EXTENSION, #733-EXT., 5/62 OD, 0.72 WIRE, 2.88 OAL	90	76171	WASHER, FLAT, 3/8, STEEL, GR 8	1	55142	ASSEMBLY, ENCODER
8	1903	BEARING, MRC, PART NUMBER 306 SZC	55	BUC-4019	PIN, PIVOT	91	1003906	CLIP, BRAKE BAND	1	55151-S3	SCREW, SET, 3/8-16 X 2
9	1607	PLUG, FLUSH, 1/8 NPT	56	1055	SPRING, EXTENSION, #733-EXT., 5/62 OD, 0.72 WIRE, 2.88 OAL	92	1608	PLUG, O-RING, HEX HEAD, 3/8	1	SLV1000-01	VALVE, CAM OPERATED, 2WAY, NORM CLOSED, PILOT ASSISTED
10	55036	BEARING, CAP	57	14216	SCREW, HEX, 3/8-16 X 2 1/4, GR8	93	1611	FITTING, 1 MNPT, PLUG	1	CLE-ST	TAG, SHIFT, GEAR
11	1156	SCREW, HEX, 5/8-11, 1/4, STEEL, GR8	58	76061	ASSEMBLY, PIN	94	1006627	SNAP RING, RETAINING, SHAFT, .980, 91.633A290	103		
12	1902	BEARING, DOUBLE ROW ANGULAR CONTACT, 40MM X 90MM X 1.4375IN, DOUBLE SEALED	59	1948	ASSEMBLY, BRAKE BAND	95					
13	76410	ASSEMBLY, GEAR	60	55121-01	SNAP RING, 2.834 IN, INTERNAL	96					
14	55048BJ	SHAFT, GEAR	61	55084-02	SPACER, SHAFT, MOTOR	97					
15	76050-01	SHAFT, IDLER, OUTBOARD	62	55085	SPACER, MOTOR	98					
16	73038	GEAR, PINION	63	1311	PLUNGER, SPRING	99					
17	1926	RING, SNAP, 4 1/2 OD, .061 THICKNESS	64	45091	ASSEMBLY, SHIFT	100					
18	76049	GEAR, IDLER	65	76156	WELDMENT, HANDLE, SIDE	101					
19	1905	BEARING, CR, CUSTOM	66	55123-ASY	ASSEMBLY, IDLER, HIGH GEAR	102					
20	76097	SPACER, SHAFT, IDLER, OUTBOARD	67	55070	GEAR, PLATE	103					
21	55161BJ	GEAR, PINION, LOW	68	55131	TUBE, SPACER						
22	55047-1	PLATE, BUSHING	69	76210	WELDMENT, HOUSING, COVER						
23	1222	NUT, HEX, 1/2-12, STEEL, GR8	70	55143	RETAINER, BEARING						
24	1223	WASHER, LOCK, 1/2, STEEL, GR5	71	1110	LOCKWASHER, 1/2						
25	76057	GEAR, RING	72	1048	SCREW, HEX, 3/8-16, 1/4, STEEL, GR8						
26	55191-01	ASSEMBLY, BUSHING, ROLLER	73	1048	ASSEMBLY, MOUNT, SENSOR						
27	55192	SPACER, ROLLER, DUMBELL	74	76128-02A	NUT, NYLOCK, 1/4-20 GR8						
28	55027-D	SPACER, ROLLER, DUMBELL	75	212	SCREW, HEX, 1/4-20, 2 1/4, STEEL, GR8						
29	76155-05	WELDMENT, TONG, PLATE, TOP	76	110	WASHER, LOCK, 3/8, STEEL						
30	76121	ASSEMBLY, RIGID, BAIL	77	1047	SCREW, HEX, 3/8-16, 1, GR8						
31	1900	BEARING, 5308 MZ/G	78	76460-02	ASSEMBLY, DOOR						
32	55119	GEAR, HIGH	79	1610	FITTING, 3/4 MNPT, PLUG						
33	55122-01	RETAINER, GEAR	80	1002-E	FITTING, GREASE, NPT 1/4.45 DEG.						
34	1950	RING, SNAP, EXTERNAL (N5100 - 100)	81	76115	TAG, CAUTION						
35	1901	BEARING, RADIAL DEEP GROOVE, 30MM X 72MM X 19MM, DOUBLE SEALED	82	1111	SCREW, HEX, 1/2-13, 1/4, STEEL, GR8, ZINC						
36	55066	RETAINER, BEARING, TOP	83	5							
37	76025-A	SHAFT, DUMBELL ROLLER									
38	76126	WELDMENT, BRAKE BAND, LUG									
39	25	FITTING, GREASE, STRAIGHT, 1/8 NPT									
40	20	JAM NUT, 1-12, NYLOCK									
41	76055-S1	SPACER, CAM, FOLLOWER									
42	6	CAM FOLLOWER, W/ NEEDLE BEARING, CE, 1 1/2-SB									
43	6	JAM NUT, 5/8-18									
44	6	FITTING, GREASE, 3/16 DRIVE									
45	4	SCREW, HEX, 3/4-10, 4, FULLY THREADED, STEEL, GR8, ZINC									
46	4	SPACER, CAGE PLATE									
47	76003	WELDMENT, CAGE, TOP									

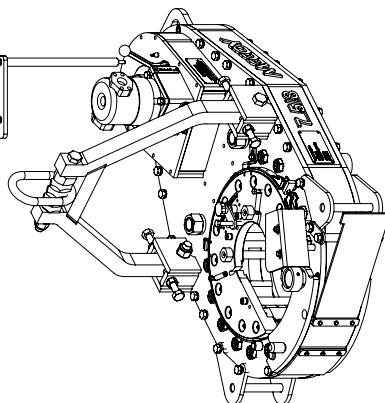


REVISION	ECO NUMBER	ECO DESCRIPTION	REVISIONS	ECO COMPLETED BY	ECO COMPLETED DATE
B	15-6075	REPLACED PIN, 6030 WITH PMS151-52, ADDED P/N 10, 102, 111, 1, 56151-53 & 54		S. CASTLE	3/11/2015
C	16-4039	ADD (1) 106, (1) 141, (1) CLE-8F		M. HEDDEN	9/12/2016
D	21-008P	REMOVE 1 CORNER P/N 198, REPLACE WITH P/N 1004627		J. WALKER	7/2/2021

RELEASED FOR PRODUCTION

Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K

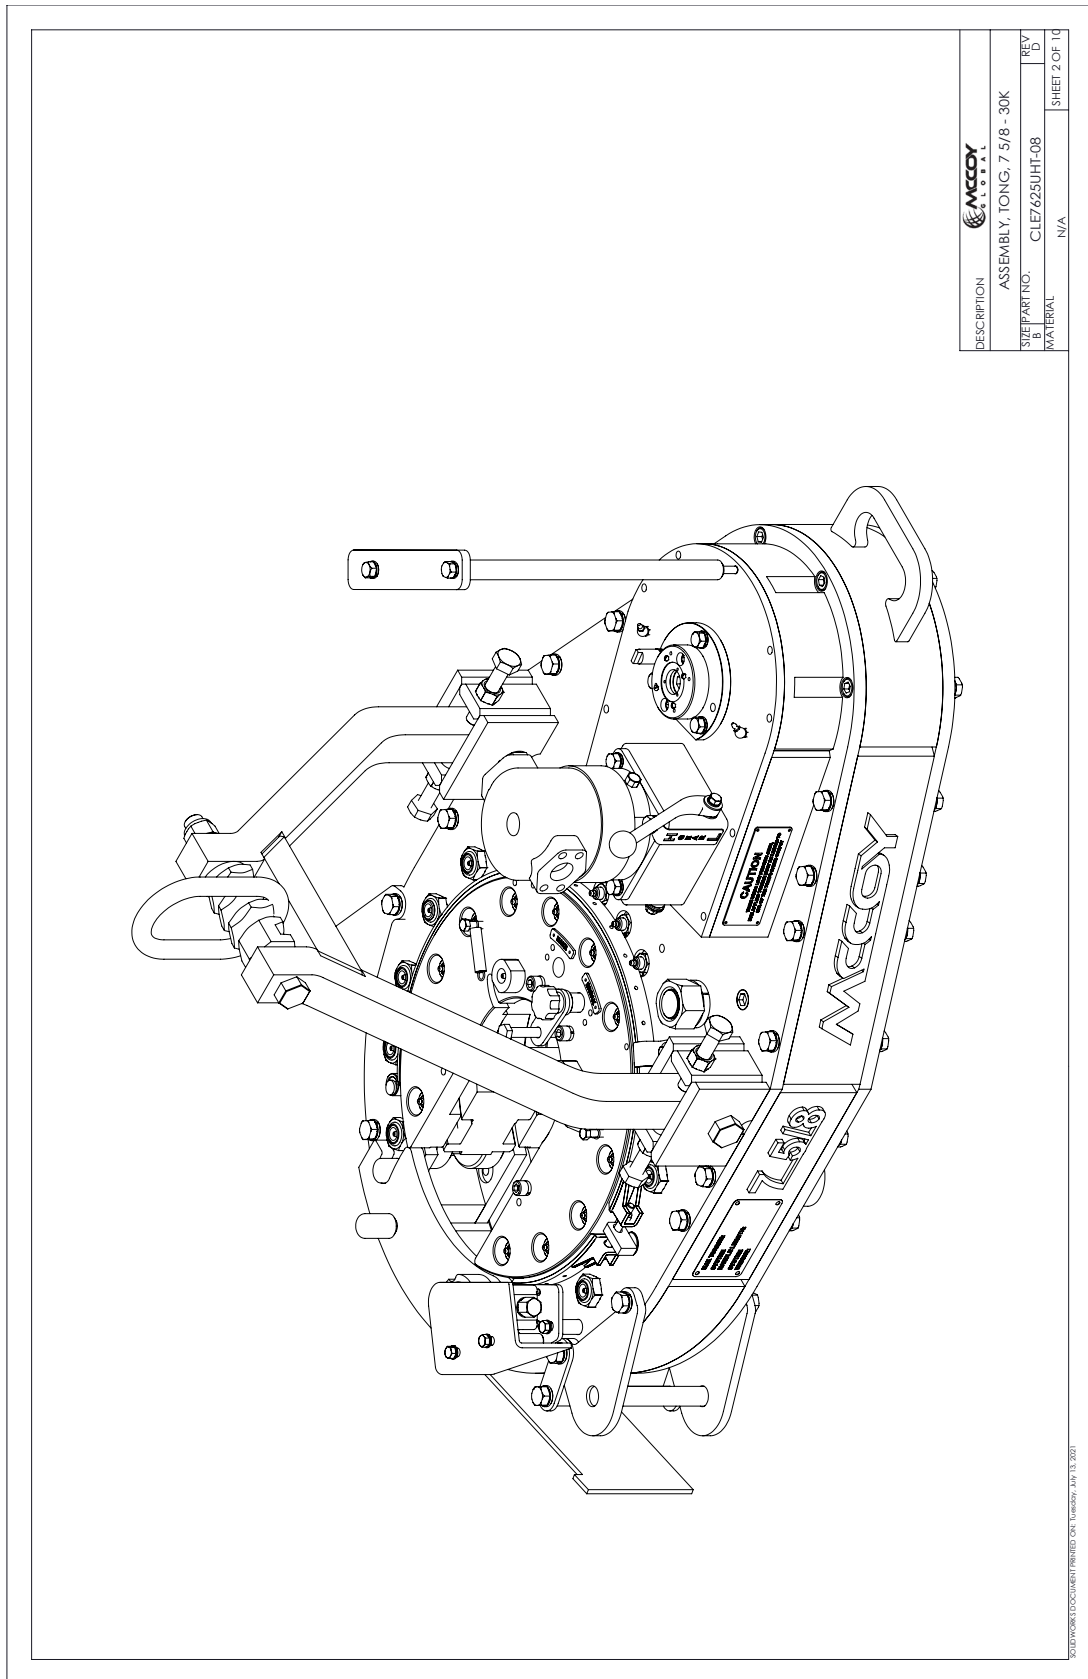

**Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K**

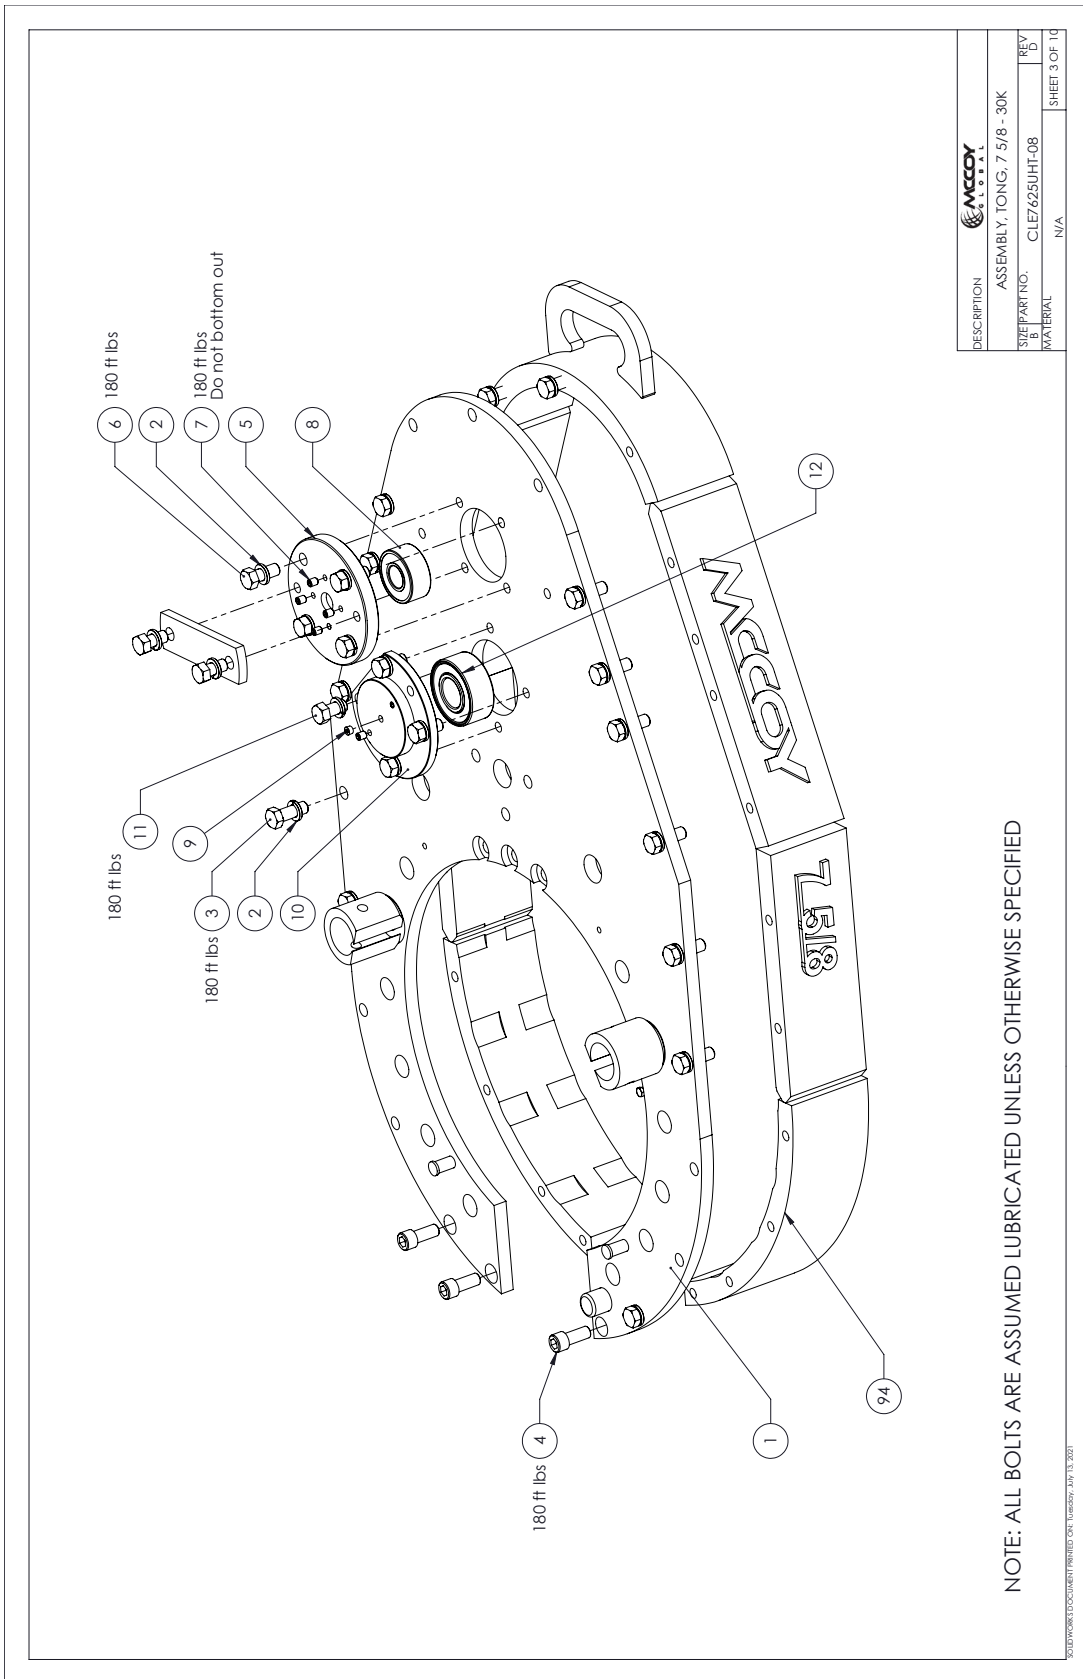


DESCRIPTION	ASSEMBLY, TONG, 7 5/8 - 30K
SIZE/PART NO.	CLE7625UHT-08
MATERIAL	N/A
REV	D
SHEET	3 OF 10

NOTE: ALL BOLTS ARE ASSUMED LUBRICATED UNLESS OTHERWISE SPECIFIED

SOLIDWORKS DOCUMENT PUBLISHED ON: Thursday, July 15, 2021


**Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K**

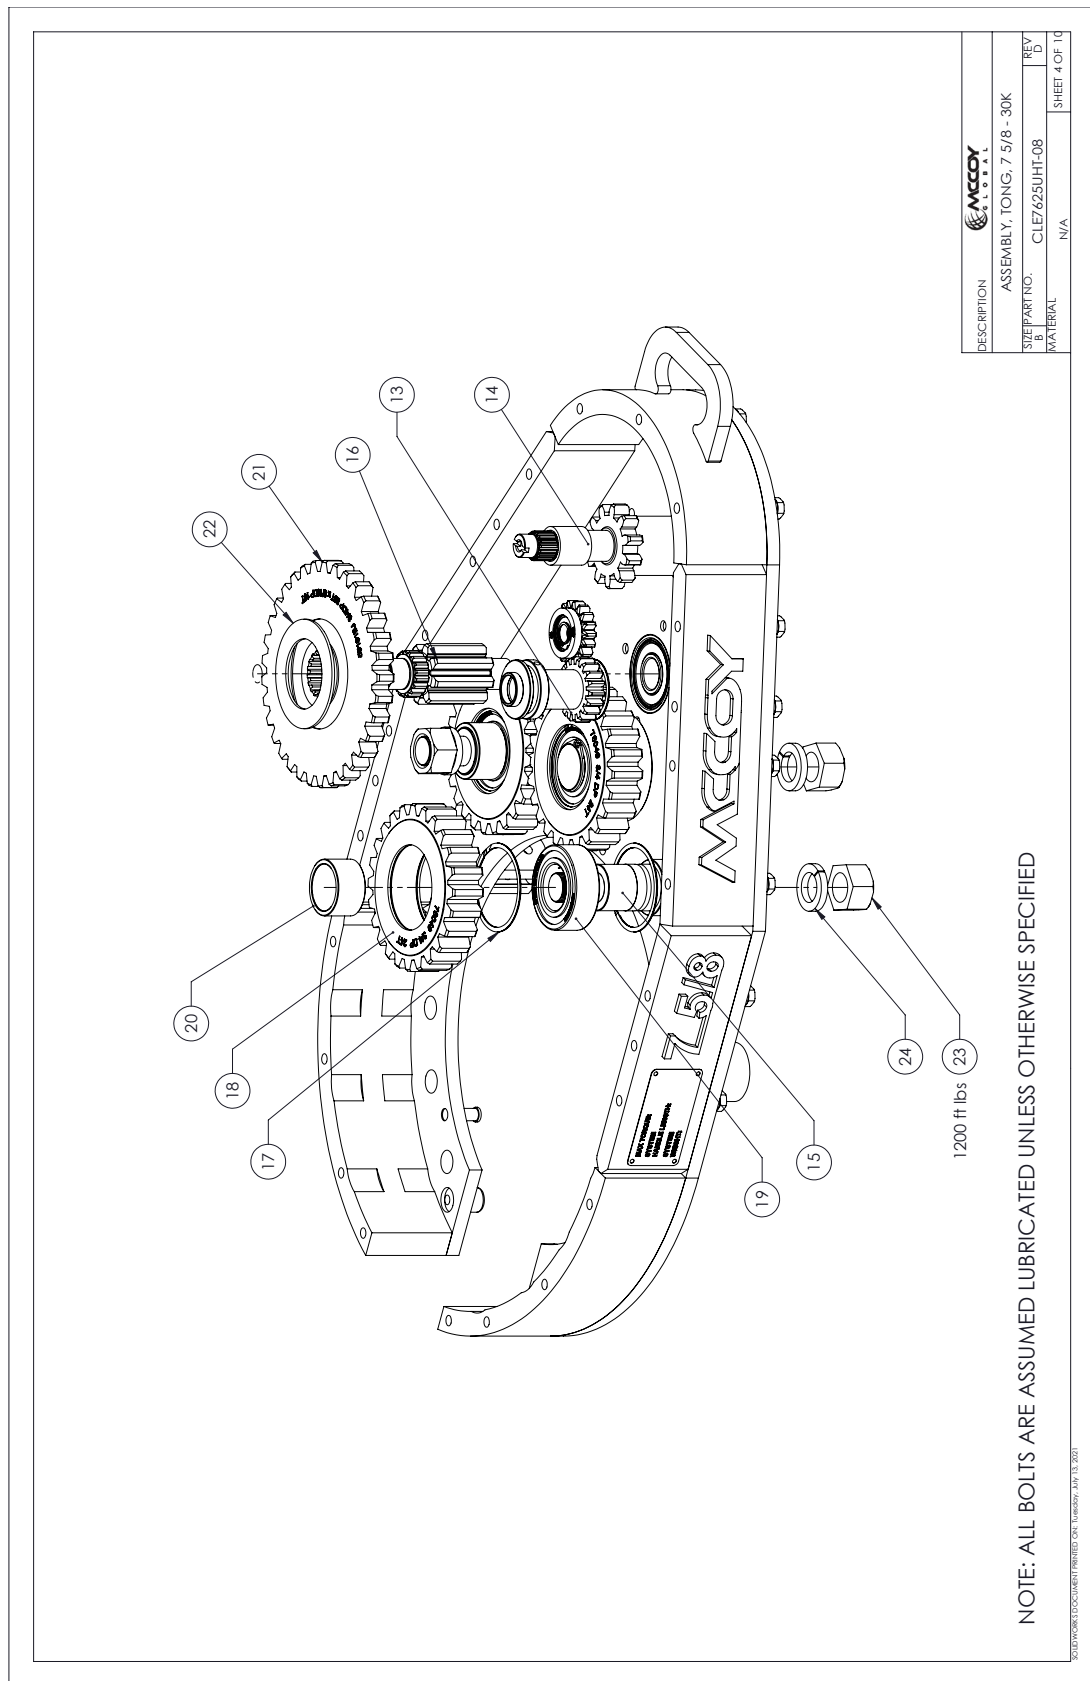

DESCRIPTION	MCCOY L & P L
ASSEMBLY	ASSEMBLY, TONG, 7 5/8 - 30K
STEP/PART NO.	CLE7625UHT-08
REV	D
MATERIAL	N/A
	SHEET 4 OF 10

Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K



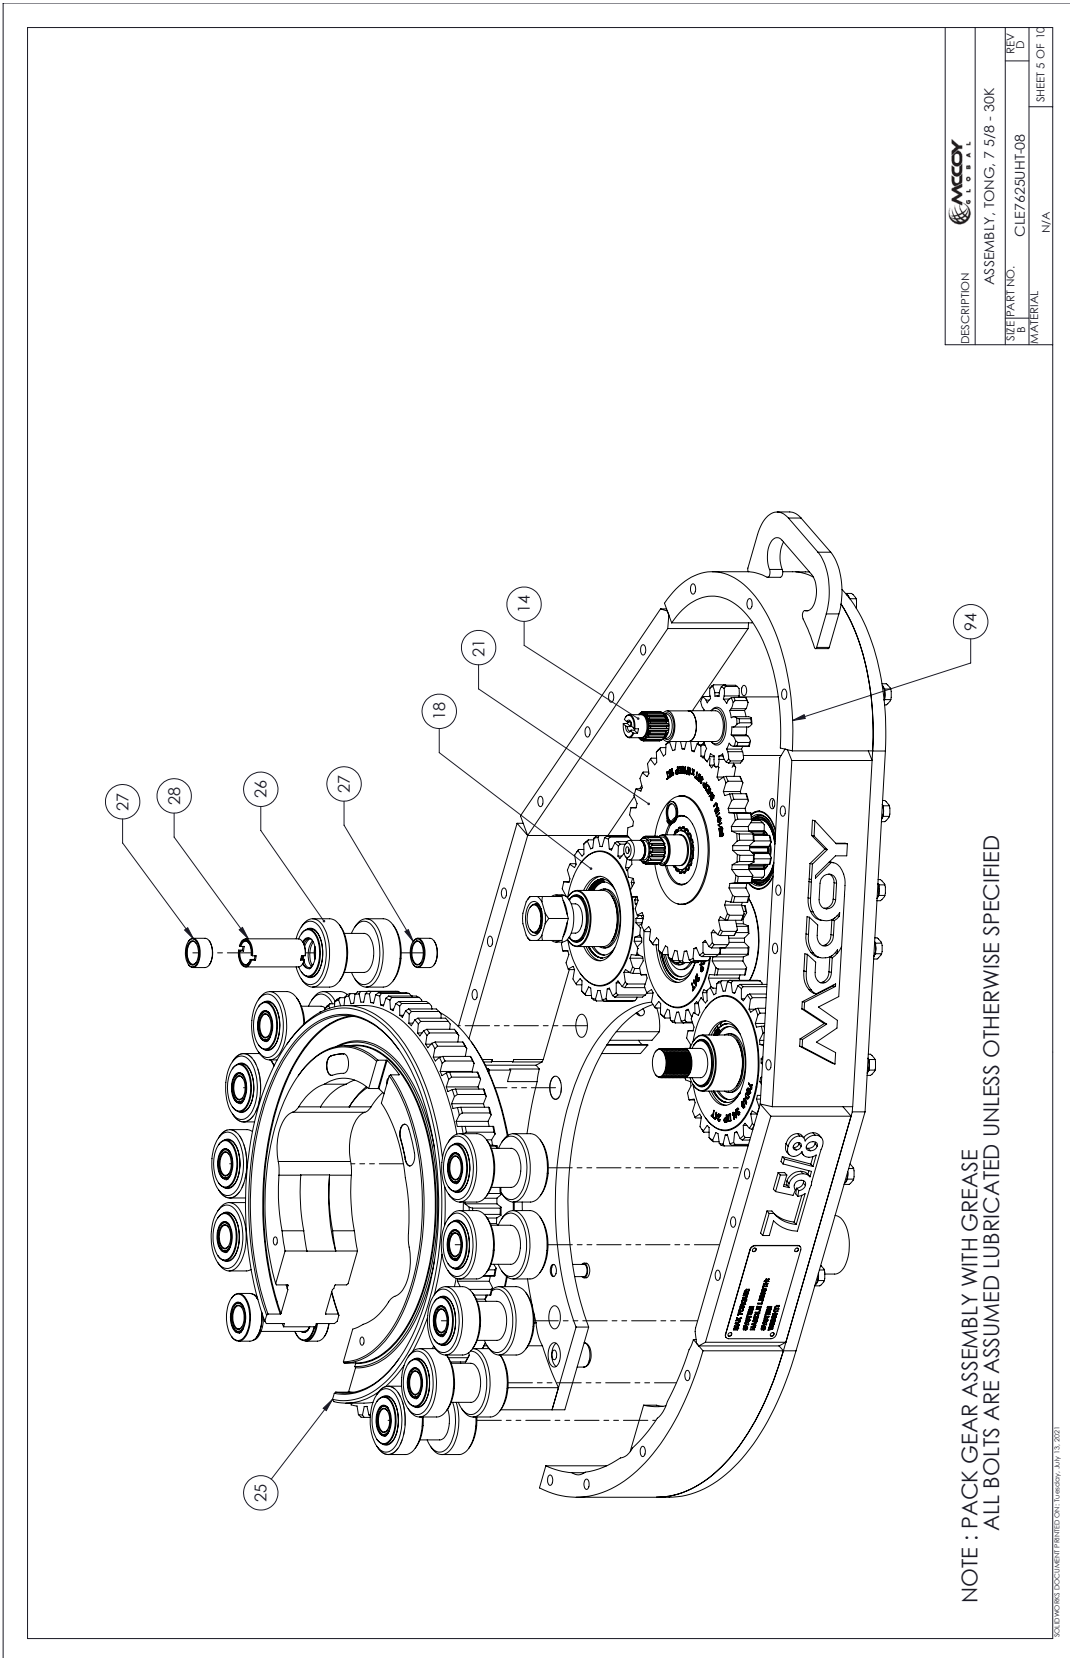

**Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K**



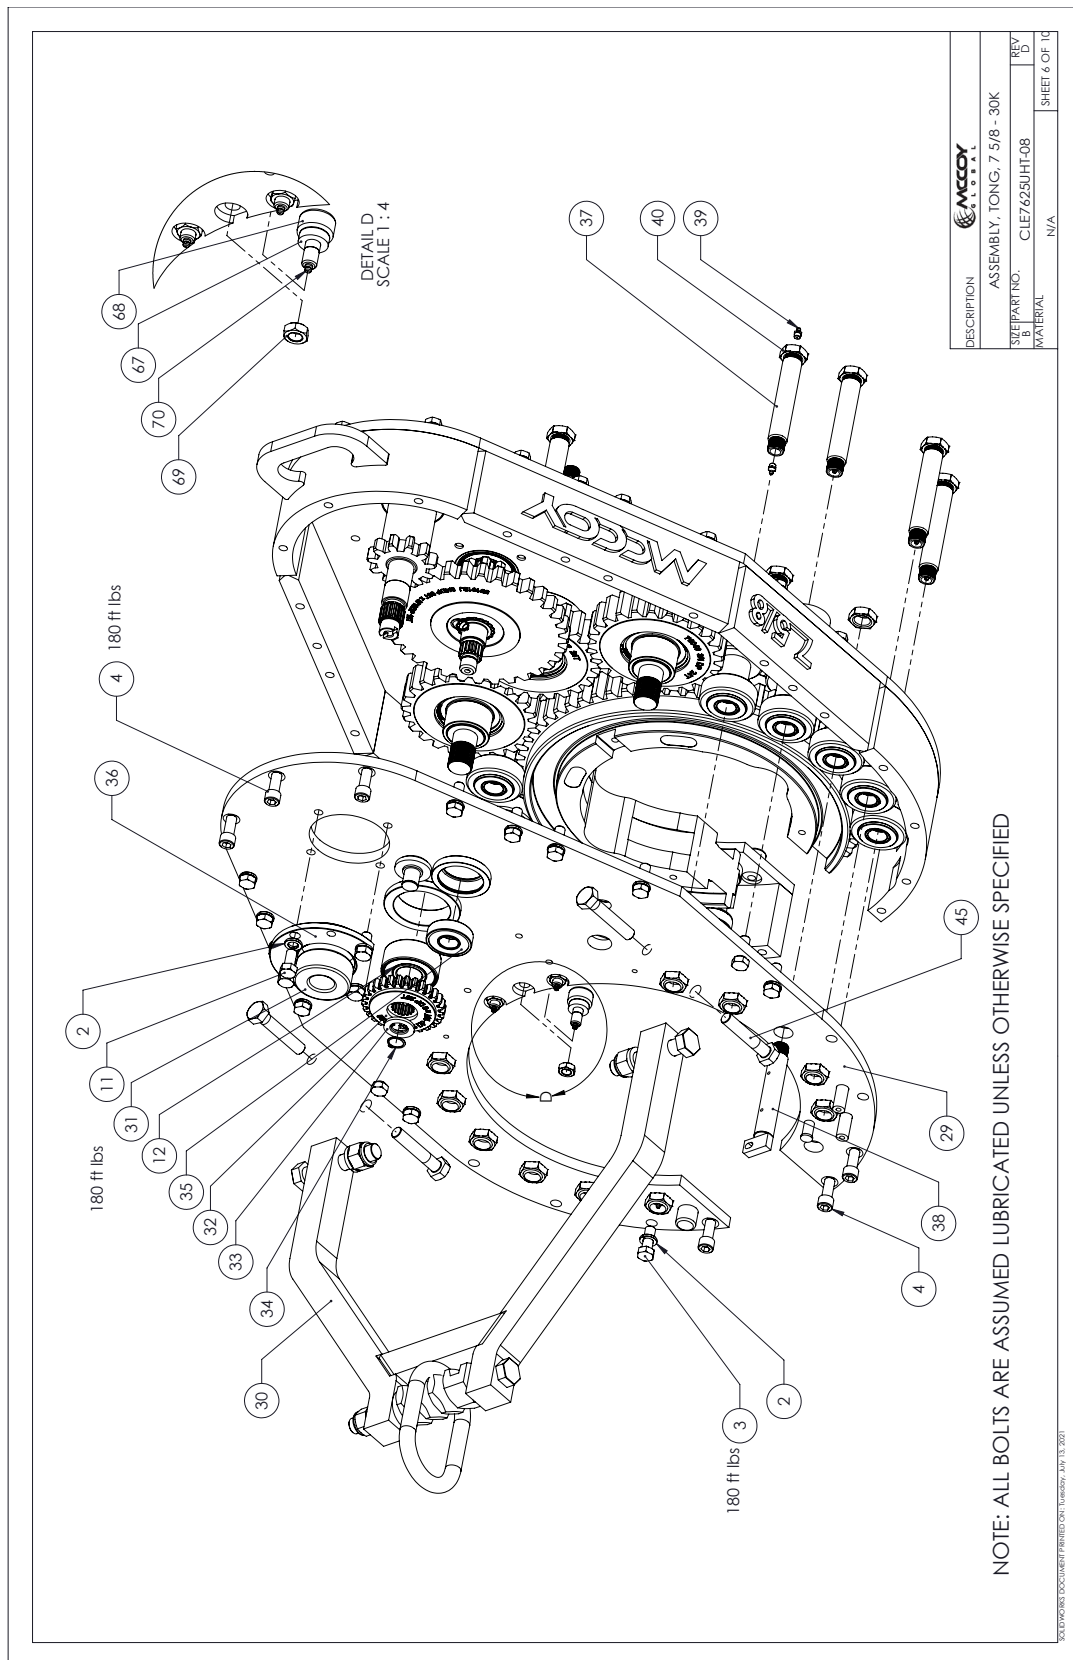



Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K

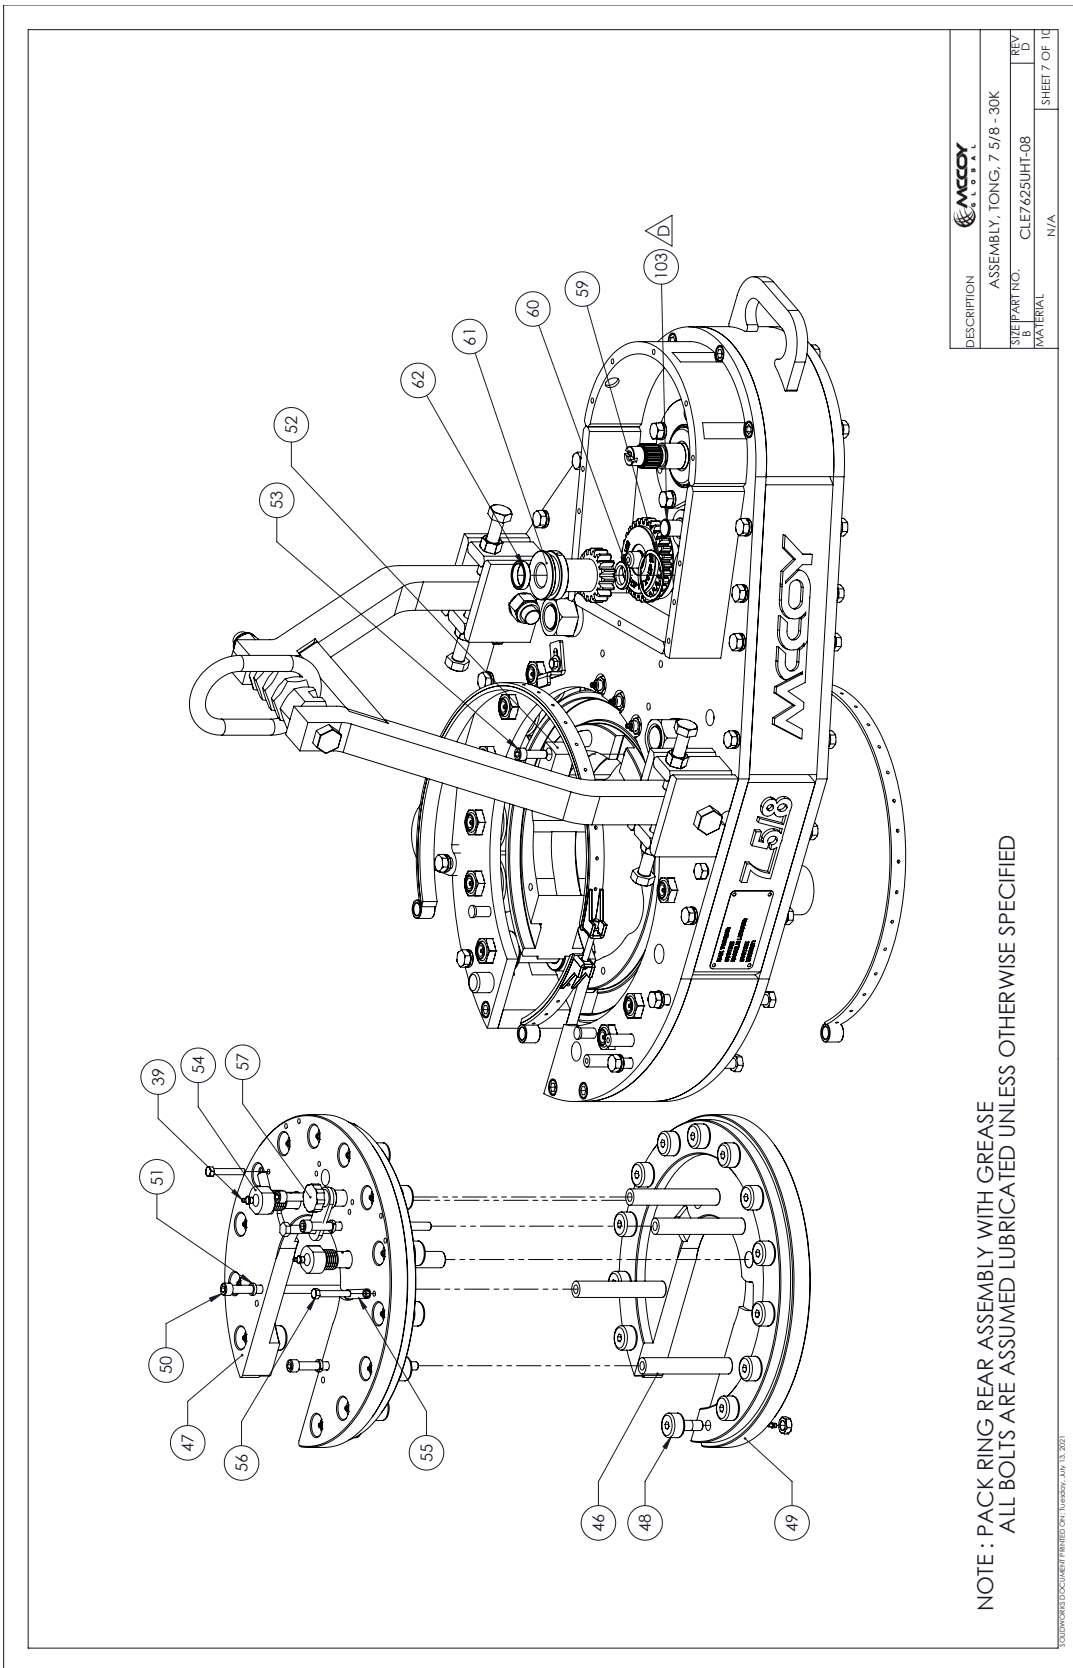

**Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K**

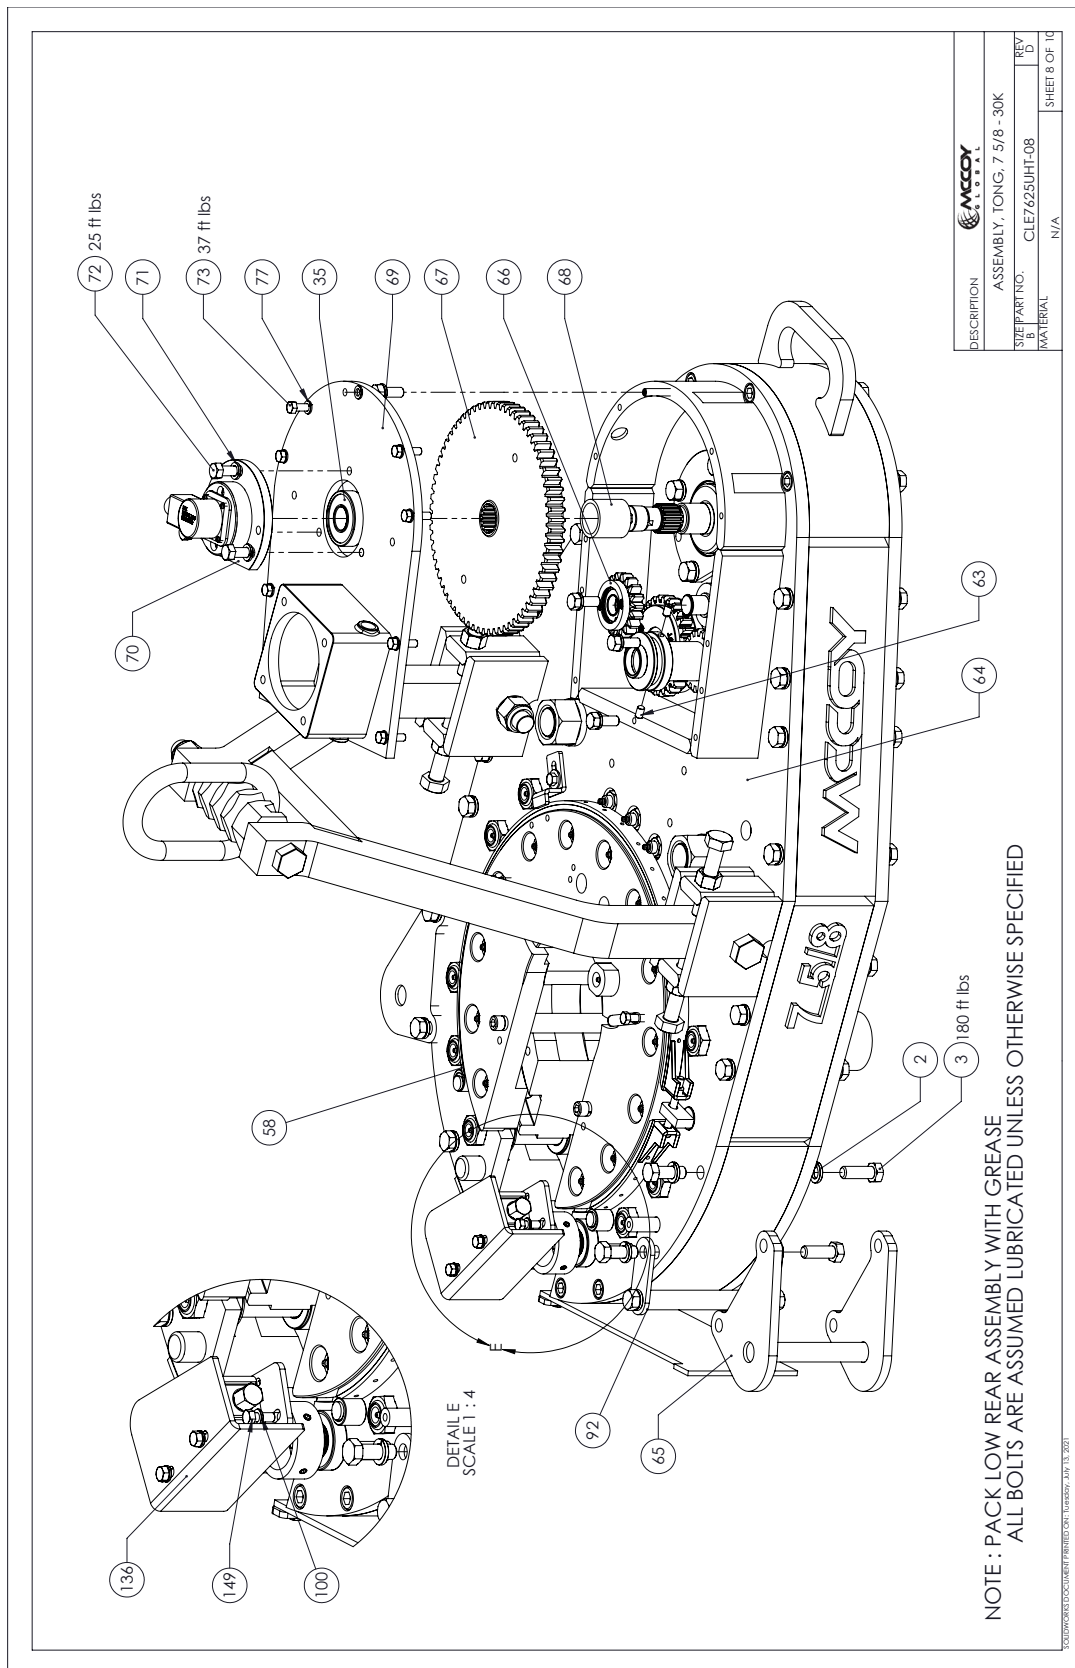

**Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K**

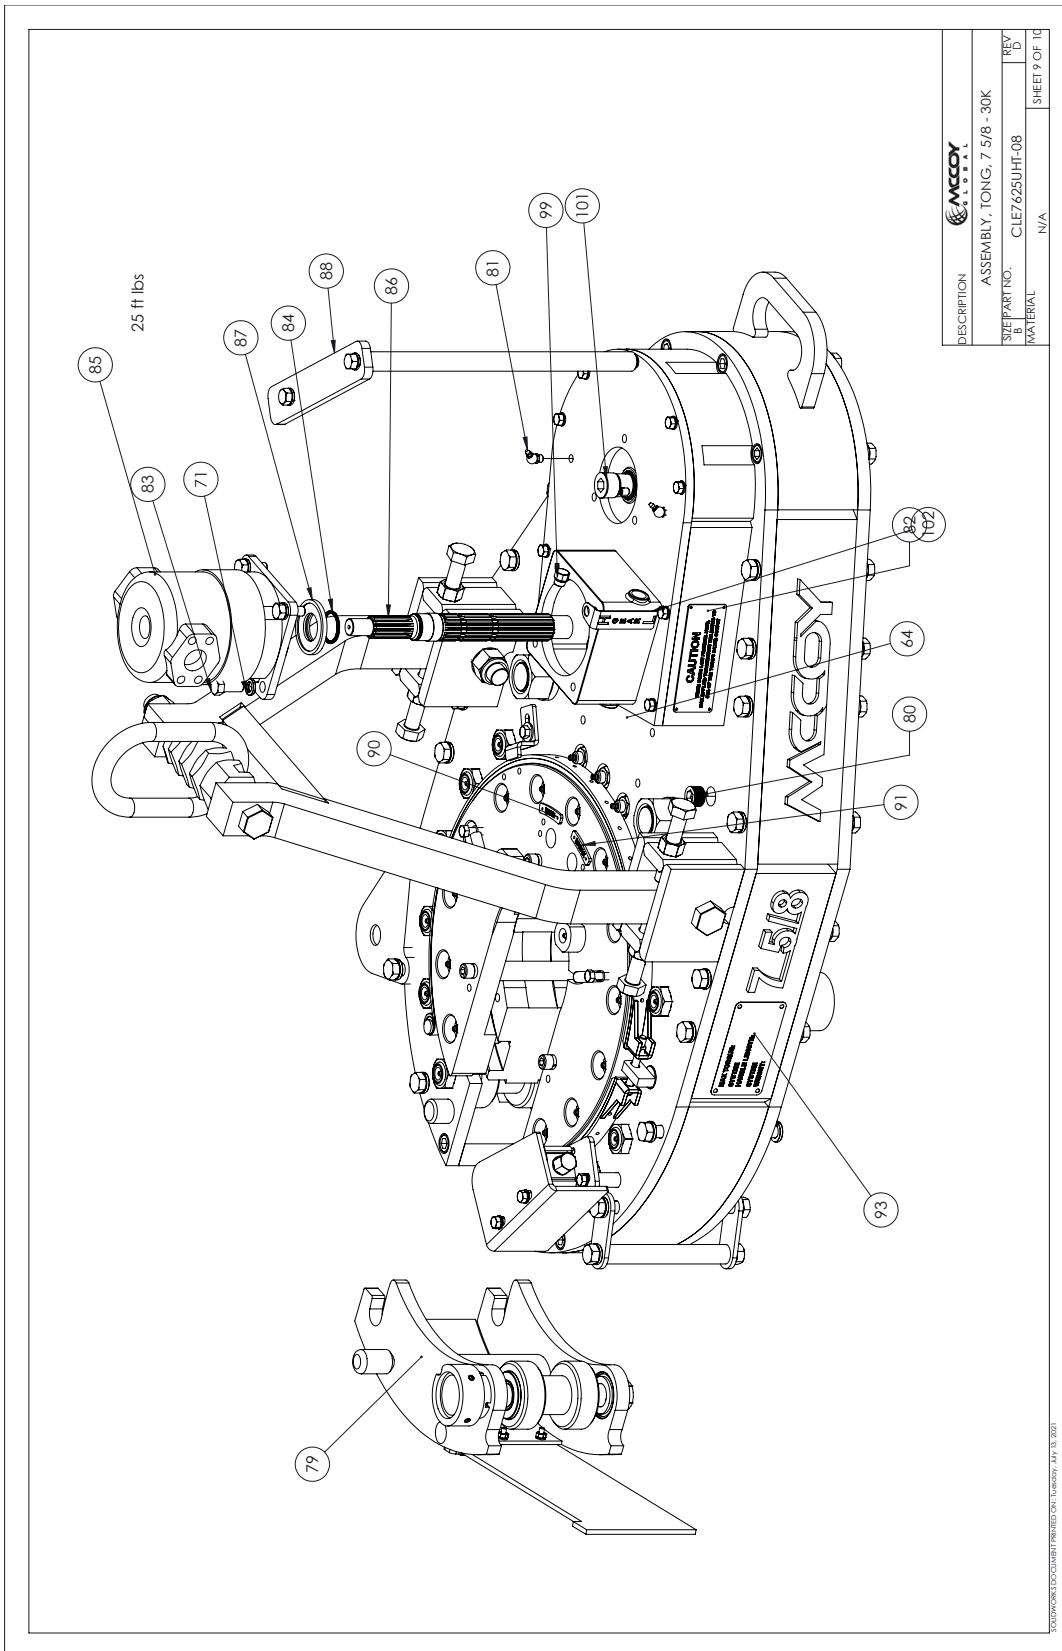

**Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K**

TORQUE TABLE (ft.lbs)		
COARSE THREADED SOCKET HEAD CAP SCREWS	DRY	LUBRICATED
1/4"	14	10
5/16"	28	21
3/8"	50	28
7/16"	81	61
1/2"	124	93
5/8"	238	178
3/4"	423	317
7/8"	682	512
1"	1022	767
COARSE THREADED HEX HEAD CAP SCREWS	DRY	LUBRICATED
1/4"	13	11
5/16"	28	23
3/8"	46	37
7/16"	75	60
1/2"	115	92
9/16"	165	132
5/8"	225	180
3/4"	370	296
7/8"	591	473
1"	893	715

NOTE:  
USE ABOVE BOLT TORQUE CHART UNLESS OTHERWISE SPECIFIED

DESCRIPTION	ASSEMBLY, TONG, 7 5/8 - 30K
SIZE/PART NO.	CLE7625UHT-08
MATERIAL	N/A
REV	1
DATE	
SHEET	10 OF 10

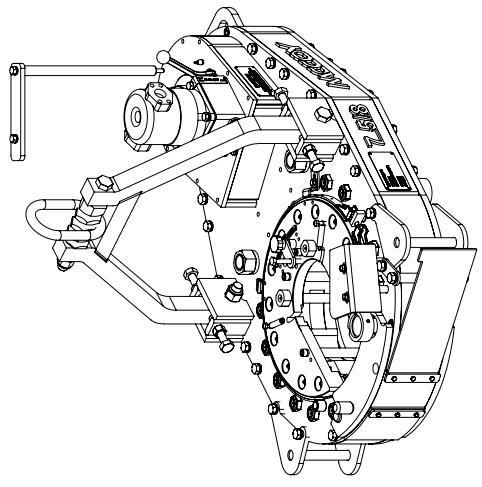
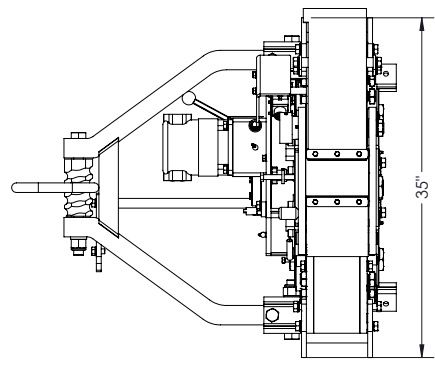
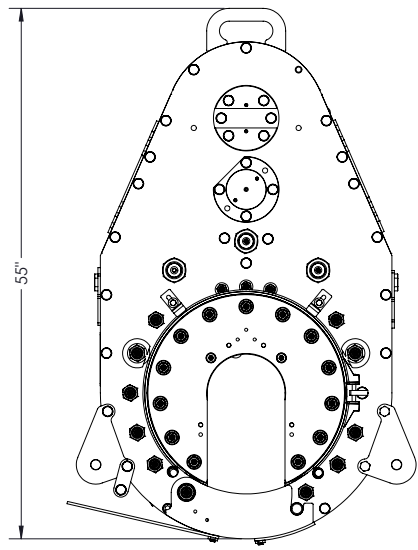
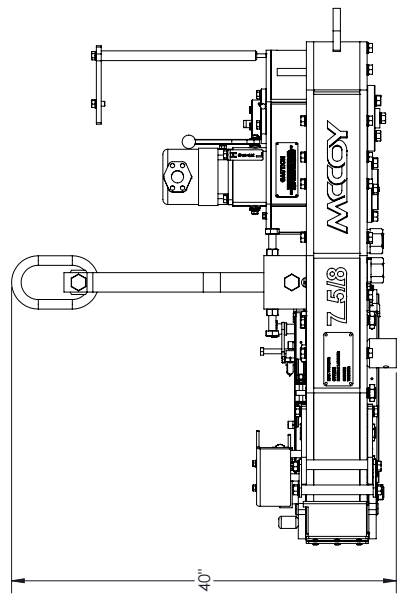


Illustration 7.2: CLE7625UHT-08 ASSEMBLY, TONG, 7 5/8 - 30K

ITEM	WITH SHIPPING PLATE/QTY.	P/N	DESCRIPTION
1	1	51075	PLATE, MOUNTING, ENCODER
2	1	55144	COUPLING, ENCODER, MALE
3	1	1034	SCREW, SET. #10-32, 1/4" STEEL, ZINC
4	4	1276-B	MACHINE SCREW, SLOTTED HEAD, BRASS, 6-32 X 1/2
5	1	40034	PLATE, COVER
6	2	1040-A	SCREW, SOCKET HEAD CAP, 3/8" - 16, 3/4", STEEL
7	1	1101	NUT, HEX HEAD, 1/2-13
8	1	51031	MOUNT, COUPLING, ENCODER
9	2	MDC1002515	WASHER, NORD-LOCK, 3/8", .65 OD, MCMMASTER: 91074A131

ENCODER SHOWN FOR REFERENCE

ASSEMBLY WITH ENCODER FOR REFERENCE

UNLESS OTHERWISE SPECIFIED:

- 1. DIMENSIONS ARE IN INCHES
- 2. TOLERANCES ARE:
- FRAC TIONAL ± .016
- DECIMAL ± .005
- HOLES ± .005
- 3. FINISHES ARE: PLATE - LOT 10000
- 4. UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE TO BE TAKEN TO THE CENTER OF THE PART.
- 5. USE ENGLISH LETTERS, DENOTED BY "K".
- 6. DIMENSIONS TO SURFACE UNLESS OTHERWISE SPECIFIED.
- 7. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED.
- 8. DIMENSIONS TO SURFACE UNLESS OTHERWISE SPECIFIED.
- 9. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED.
- 10. INTERPRET DRAWING PER ASME Y14.5-2009

REVISIONS

REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
A	13-0908	REMOVED 55143	SM	12/26/13
B	20-0098	ADDED (2) MDC1002515	J. KELLY	8/6/2020

CRITICAL COMPONENT: NO

PROPRIETARY STATEMENT

THIS DOCUMENT IS THE PROPERTY OF MCCOY GLOBAL CORPORATION AND IS TO BE KEPT CONFIDENTIAL. IT IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED HEREIN. IT IS TO BE KEPT IN A SECURE LOCATION AND NOT TO BE DISCLOSED, COPIED, OR REPRODUCED IN ANY FORM, WITHOUT THE EXPRESS WRITTEN CONSENT OF MCCOY GLOBAL CORPORATION.

DRAWN: SCOTT L.

CHECKED: NM

APPROVED: DSB

THIRD ANGLE PROJECTION

RATINGS: IF APPLICABLE

DESCRIPTION

ASSEMBLY, ENCODER

SIZE | PART NO. | REV

A | 55142 | B

MATERIAL | WEIGHT | LBS.

N/A | 5.2

SHEET 1 OF 1


  

RELEASED FOR PRODUCTION

SOLIDWORKS DOCUMENT PRINTED ON: Wednesday, November 3, 2021

Illustration 7.3: 55142 ASSEMBLY, ENCODER

ITEM	QTY.	P/N	DESCRIPTION
1	1	14044	PIN, LOCKING
2	1	76127	PLATE, KEY, LOCKING PIN
3	1	DK-28	KNOB, FLUTED (DK-28) 1 3/4, 3/8-16 X 3/4
4	1	X2-45	SCREW, HEX. 1/2-13, 4 1/2, STEEL, GR8

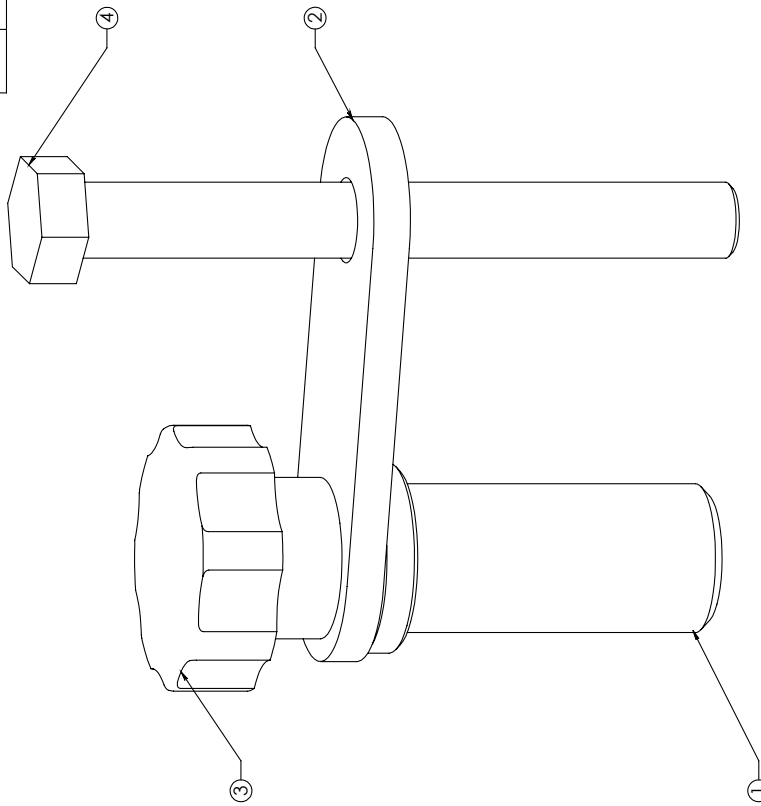

REVISION	ECO NUMBER	ECO DESCRIPTION	INITIAL RELEASE	ECO COMPLETED BY	ECO COMPLETED DATE
A	N/A			N/A	N/A

**REVISIONS**

THE FOLLOWING INFORMATION IS PROPRIETARY AND IS TO BE KEPT CONFIDENTIAL. THIS INFORMATION IS NOT TO BE USED FOR REPRODUCTION OR DISTRIBUTION WITHOUT THE EXPRESS WRITTEN CONSENT OF MCCOY GLOBAL.	
UNLESS OTHERWISE SPECIFIED: 1. DIMENSIONS ARE IN INCHES 2. TOLERANCES ARE FRACTIONAL 1/16 3. HOLE FITS ARE H7/g6 4. RADIUS (R) AND CHAMFER (C) DIMENSIONS ARE TO BE SHOWN WITH DIMENSION LINES 5. MACHINED FLEET RATCH SHALL BE 1/32 6. ALL DIMENSIONS SHALL BE TO CENTER UNLESS NOTED OTHERWISE 7. THIS INSPECTION REQUIRED 8. INTERPRET DRAWING PER ASME Y14.5-2009	PROPIETARY STATEMENT DRAWN C. MUS 7/26/2005 CHECKED DDT APPROVED DANB. THIRD ANGLE PROJECTION WEIGHT 2 LBS.
DESCRIPTION	ASSEMBLY, PIN
SIZE/PART NO.	14216
MATERIAL	N/A


**RELEASED FOR PRODUCTION**

SOLIDWORKS DOCUMENT PRINTED ON: Friday, August 28, 2015

**Illustration 7.4: 14216 ASSEMBLY, PIN**



ITEM	QTY.	P/N	DESCRIPTION
1	1	1001	FITTING, GREASE, 1/8 NPT
2	3	1151	WASHER, LOCK, 5/8, STEEL, GR8
3	3	1160	SCREW, HEX, 5/8-11, 2, STEEL, GR8
4	1	1222	NUT, HEX, 1 1/2-12, STEEL, GR08
5	1	1223	WASHER, LOCK, 1 1/2, STEEL, GR5
6	1	1905	BEARING, CR
7	2	1926	RING, SNAP, RR-433
8	1	1946	RING, SNAP, 237
9	1	76049	GEAR, IDLER
10	1	76051-01	SHAFT, GEAR, IDLER

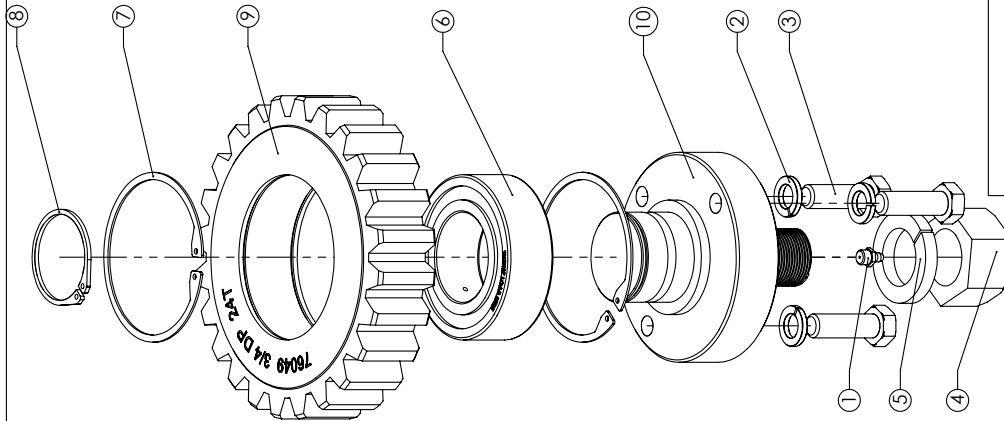

REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
1	ECN13-0160	VIEW UPDATED	SK	2013

UNLESS OTHERWISE SPECIFIED: 1. DIMENSIONS ARE IN INCHES 2. DIMENSIONS ARE IN MILLIMETERS 3. ANGULAR ± 1/16 4. TWO PLACE DECIMAL ± 0.02 5. SURFACE FINISH: 32 RMS 6. HOLE FINISH: 125 RMS 7. REMOVE BURRS & SHARP EDGES WITH 8. MACHINED SURFACE SHALL BE .02 9. ALL DIMENSIONS UNLESS OTHERWISE SPECIFIED 10. HOLE POSITION TOLERANCE: .010 11. INTERFERE TOLERANCES PER ASME Y14.5-2009	<b>PROPRIETARY STATEMENT</b> THIS DOCUMENT IS THE PROPERTY OF MCCOY GLOBAL. IT IS TO BE USED FOR THE PURPOSES SPECIFIED AND IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM, WITHOUT THE WRITTEN PERMISSION OF MCCOY GLOBAL.	
DRAWN	CLAYTON CLAXTON	7/20/2004
CHECKED	DDT	
APPROVED	DAN BANGERT	
THIRD ANGLE PROJECTION		
WEIGHT	36	LBS.



DESCRIPTION	ASSEMBLY, GEAR
SIZE/PART NO.	76410
MATERIAL	N/A
REV	1
SHEET	1 OF 1

RELEASED FOR PRODUCTION

SOLIDWORKS DOCUMENT PRINTED ON: Friday, May 22, 2013

Illustration 7.5: 76410 ASSEMBLY, GEAR

ITEM	QTY	P/N	DESCRIPTION
1	1	55025-B	ROLLER, DUMBELL
2	2	55191	BUSHING, DUMBELL ROLLER

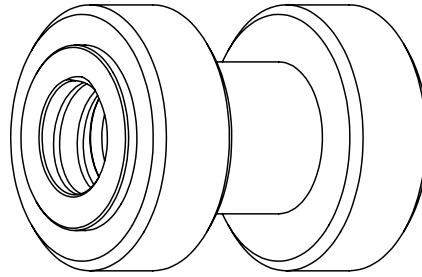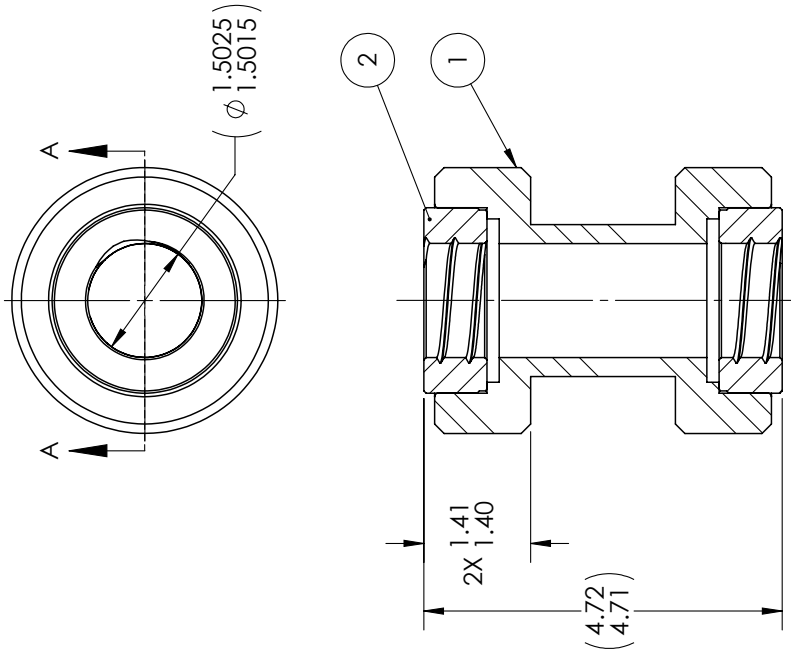

SECTION A-A

REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
1	ECN13-0450	SEE ECN13-0450 DOCUMENT	K. HALIKE	06/21/2013


UNLESS OTHERWISE SPECIFIED:		PROPRIETARY STATEMENT THE INFORMATION CONTAINED HEREIN IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE AND IS TO BE CONTAINED IN THE INFORMATION SYSTEMS AND IS NOT TO BE DISSEMINATED OUTSIDE THE COMPANY WITHOUT THE EXPRESS WRITTEN CONSENT OF MCCOY CORPORATION.	
DRAWN	MELISSA BUDDEN	3/16/12	DESCRIPTION ASSEMBLY, BUSHING, ROLLER SIZE/PART NO. 55191-01 MATERIAL N/A
CHECKED	JB	3/16/12	
APPROVED	JB	3/16/12	
THIRD ANGLE PROJECTION		WEIGHT	6.3 LBS.

RELEASED FOR PRODUCTION

SOLIDWORKS DOCUMENT PRINTED ON: Tuesday, April 26, 2015

Illustration 7.6: 55191-01 ASSEMBLY, BUSHING, ROLLER

ITEM	QTY.	P/N	DESCRIPTION
1	1	55123	GEAR, IDLER
2	2	1909	BEARING, RADIAL BALL, MRC105KSF
3	1	1949	RING, SNAP, INTERNAL, N5000-187

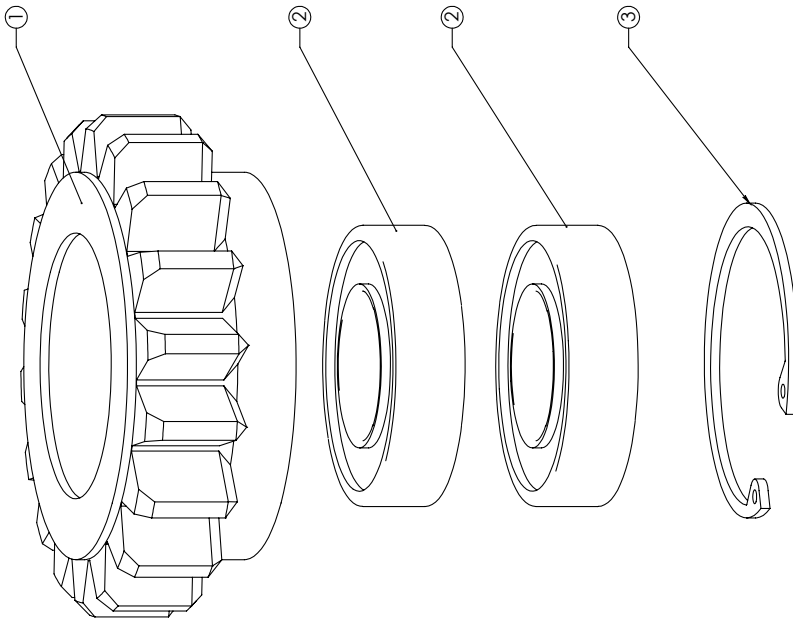

REVISION	TECO NUMBER	TECO DESCRIPTION	TECO COMPLETED BY	TECO COMPLETED DATE
1	ECN13-0140	BOM UPDATED	SK	2013

UNLESS OTHERWISE SPECIFIED:		PROPRIETARY STATEMENT THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF MCCOY GLOBAL AND IS TO BE KEPT CONFIDENTIAL. THIS INFORMATION IS NOT TO BE USED FOR ANY OTHER PURPOSES WITHOUT THE EXPRESS WRITTEN CONSENT OF MCCOY GLOBAL.	
DRAWN	NING MALATHONG	07/19/2005	DESCRIPTION
CHECKED	DDT		ASSEMBLY, IDLER, HIGH GEAR
APPROVED	DAN BANGERT		SIZE PART NO.
			A
			55123-ASY
			REV
			1
			MATERIAL
			N/A
			WEIGHT
			2
			LBS.
			THIRD ANGLE PROJECTION



RELEASED FOR PRODUCTION

SOLIDWORKS DOCUMENT PRINTED ON: Wednesday, May 08, 2019

Illustration 7.7: 55123-ASY ASSEMBLY, IDLER, HIGH GEAR



ITEM	QTY.	P/N	DESCRIPTION
1	1	76128-02	WELDMENT, MOUNT, SWITCH
2	1	76123	PLATE, COVER, SWITCH
3	2	1027	WASHER, LOCK, 3/8, STEEL, GR8
4	2	1048	SCREW, HEX, 3/8 - 1.6, 1 1/4, STEEL, GR8

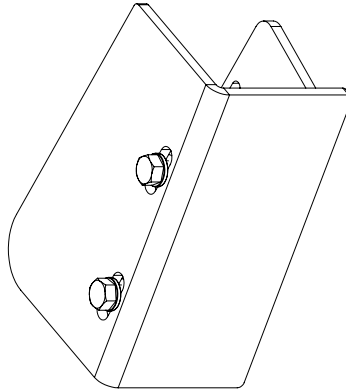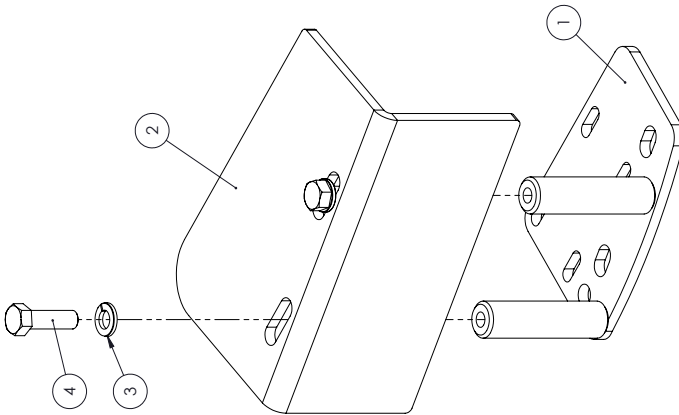

REVISION		ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED DATE
00	N/A		INITIAL RELEASE	N/A

REVISIONS		ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED DATE
01	N/A		INITIAL RELEASE	N/A


PROPERTY STABILITY		DESCRIPTION	
1	DATE	4/17/2013	ASSEMBLY, MOUNT, SENSOR
2	BY	8	SIZE PART NO. 76128-02A
3	CHECKED	8	MATERIAL N/A
4	APPROVED	8	WEIGHT 5.5 LBS.
5	IN PRODUCTION	8	

RELEASED FOR PRODUCTION

SCHEMATIC DOCUMENT PRINTED ON: Tuesday, April 26, 2015

**Illustration 7.9: 76128-02A ASSEMBLY, MOUNT, SENSOR**

ITEM	QTY.	P/N	DESCRIPTION
1	6	100	NUT, HEX, 1/4-20, GR8
2	6	101	WASHER, LOCK, 1/4, GR8
3	6	106	SCREW, HEX, 1/4-20, 1 1/4
4	2	1001	FITTING, GREASE, 1/8 NPT
5	2	1029	SCREW, SET, 3/8 - 16, 1/2, STEEL, GR08
6	2	1213	NUT, NYLOCK, 1 - 12, STEEL
7	2	1910	BEARING, SKF 1206
8	1	14150-02	GUARD, RUBBER
9	2	14151	STRIP, SUPPORT
10	1	14150-01	GUARD, RUBBER
11	1	55022-A	SHAFT, DUMBELL ROLLER
12	2	55024-A	WASHER, THRUST
13	1	55191-01	ASSEMBLY, BUSHING, ROLLER
14	1	55027-D	SPACER, ROLLER, DUMBELL
15	2	55125	BUSHING, DOOR
16	2	55192	SPACER, ROLLER, DUMBELL
17	1	76113-01	WELDMENT, DOOR, 7 5/8" UHT
18	1	76131	SLEEVE, DOOR, SWITCH

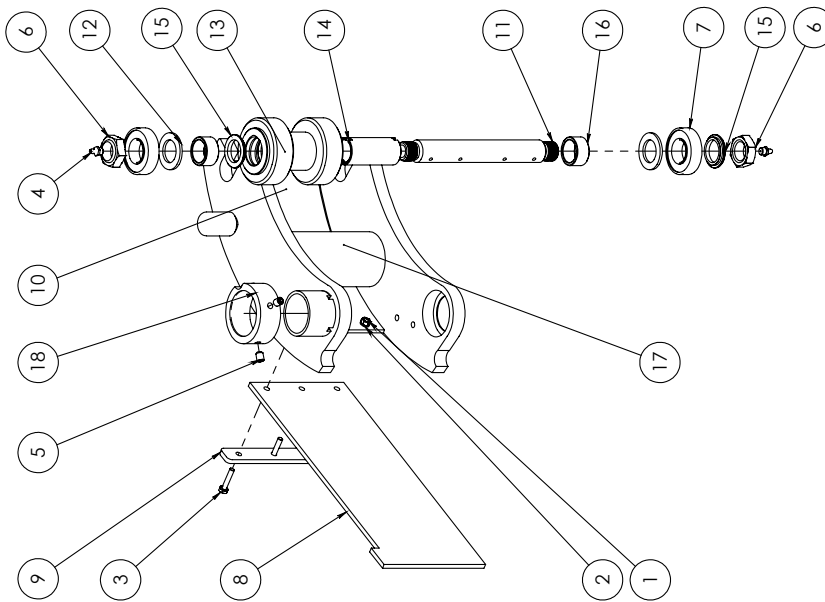

REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
1	7/27/05	REPLACED DUMBELL W/ SEVERE SER DUMBELL	CMW	7/27/2005
2	ECN12-0159	REPLACED (2) 55191 AND (1) 550-25-B W/ (1) 55191-01	MB	2012
A	16-0101	ADDED ITEM #15 TO EXPLODED VIEW, FIXED BALLOONS	C. JOHNSON	May 9, 2016

UNLESS OTHERWISE SPECIFIED:	PROPRIETARY STATEMENT
1. DIMENSIONS ARE IN INCHES	THIS DOCUMENT IS THE PROPERTY OF MCCOY GLOBAL CORPORATION AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM, WITHOUT THE WRITTEN PERMISSION OF MCCOY GLOBAL CORPORATION.
2. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
3. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
4. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
5. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
6. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
7. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
8. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
9. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
10. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
11. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
12. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
13. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
14. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
15. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
16. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
17. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED
18. DIMENSIONS ARE IN MILLIMETERS	UNLESS OTHERWISE SPECIFIED

DRAWN	CLAYTON CLAXTON	8/9/2006
CHECKED	DDT	
APPROVED	DAN BANGERT	
THIRD ANGLE PROJECTION	WEIGHT	54.1792 LBS.

DESCRIPTION	ASSEMBLY, DOOR
SIZE/PART NO.	76460-02
MATERIAL	N/A

RELEASED FOR PRODUCTION

SOLIDWORKS DOCUMENT PRINTED ON: Thursday, June 09, 2016

Illustration 7.10: 76460-02 ASSEMBLY, DOOR

ITEM	QTY.	P/N	DESCRIPTION
1	1	76122	WELDMENT, BRACKET, BAIL
2	1	73117	ROLLER, BAIL, ADJUSTMENT
3	1	73118	LINK, BAIL
4	1	73126	SCREW, HEX, 1-8, 12, STEEL, GR8, ZINC
5	2	73127	SCREW, HEX, 1-8, 5 1/2, STEEL, GR8, ZINC
6	3	1224-B	NUT, NYLOCK, 1-8
7	3	1218	LOCKWASHER, 1

**B**


**PULL TEST NOTES:**

- 1) PULL TEST RIGID BAIL TO 7,000 LBS AND HOLD FOR 5 MINUTES
- 2) VISUALLY INSPECT ALL SURFACES AFTER PULL TEST
- 3) MPI ALL WELDS, HOLES, AND BENDS AFTER PULL TEST
- 4) PULL TEST THE CORRESPONDING TOP PLATE WELDMENT AS APPLICABLE

**B**

**NOTE: MPI REQUIREMENTS**

- 1) VISUALLY INSPECT AND MT PER ASTM E709 BEFORE AND AFTER TEST
- 2) THE FOLLOWING ACCEPTANCE CRITERIA SHALL APPLY:
  - A) LINEAR INDICATIONS (MAJOR DIMENSION AT LEAST 3 TIMES MINOR DIMENSION)
    - IN BASE METAL: NO RELEVANT LINEAR INDICATIONS WITH A MAJOR DIMENSION EQUAL TO OR GREATER THAN 3/16" (4.7mm);
    - IN WELDS: NO RELEVANT LINEAR INDICATIONS ARE ACCEPTABLE.
  - B) ROUNDED INDICATIONS
    - IN BASE METAL: NO RELEVANT INDICATION WITH MAJOR DIMENSION EQUAL TO OR GREATER THAN 3/16" (4.7MM);
    - IN WELDS: NO ROUNDED INDICATIONS WITH A MAJOR DIMENSION GREATER THAN 1/8" (3.2MM).
  - C) NO MORE THAN 10 RELEVANT INDICATIONS IN ANY CONTINUOUS 6 SQ.IN (40 SQ.CM) AREA.
  - D) NO MORE THAN 3 RELEVANT INDICATIONS IN A LINE SEPARATED BY LESS THAN 1/16" (2mm) EDGE-TO-EDGE.
  - E) NO RELEVANT INDICATIONS IN PRESSURE-SEALING AREAS, IN THE ROOT AREA OF THREADS, OR IN THE STRESS-RELIEF FEATURES OF THREADED JOINTS.

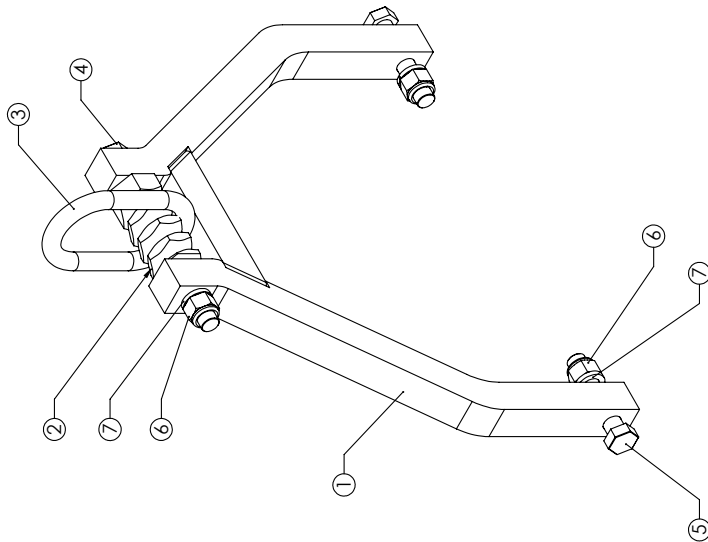

REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
2	ECN13-0116	BOM UPDATED	SK	2013
A	19-0281	ADDED PULL TEST NOTES; ADDED MPI REQUIREMENTS	J.WALKER	10/24/2019
B	19-0317	UPDATE PULL TEST AND MPI REQUIREMENTS	J.WALKER	12/5/2019


UNLESS OTHERWISE SPECIFIED:		PROPRIETARY STATEMENT	
1. DIMENSIONS ARE IN INCHES.	2. FINISH: UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS SHALL BE TO UNLESS OTHERWISE SPECIFIED.	THIS DOCUMENT IS THE PROPERTY OF MCCOY CORPORATION AND IS TO BE KEPT IN CONFIDENTIALITY. IT IS TO BE USED ONLY FOR THE EXPRESS PURPOSES OF THE PROJECT AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS WITHOUT THE WRITTEN CONSENT OF MCCOY CORPORATION.	
3. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	3. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	DRAWN	B. PEARCE/SWM
4. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	4. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	CHECKED	NM
5. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	5. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	APPROVED	DSB
6. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	6. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	THIRD ANGLE PROJECTION	WEIGHT 88 LBS.
7. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	7. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	DESCRIPTION	ASSEMBLY, RIGID, BAIL
8. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	8. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	SIZE (PART NO.)	76121
9. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	9. DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY.	MATERIAL	N/A

RELEASED FOR PRODUCTION

SOLIDWORKS DOCUMENT PRINTED ON: Friday, June 25, 2021

Illustration 7.11: 76121 ASSEMBLY, RIGID, BAIL

ITEM	QTY.	P/N	DESCRIPTION
1	2	1025	WASHER, FLAT, 3/8, STEEL, GR 8
2	2	1027	WASHER, LOCK, 3/8, STEEL
3	1	1030	SCREW, SET, 3/8 - 16, 1, STEEL, ZINC
4	2	1046	SCREW, HEX, 3/8 - 16, 3/4, STEEL, GR8
5	1	45072	WELDMENT, YOLK, SHIFTING
6	1	45092	BEARING, FLANGE, .752 OD X .626 ID X 1 LG
7	1	45142	HANDLE, YOKE, STRAIGHT
8	1	45143	SHAFT, SHIFT, GEAR
9	1	55071	KNOB, 3/8 - 16 THD
10	2	45106-A	BEARING, FLANGE, SPLIT

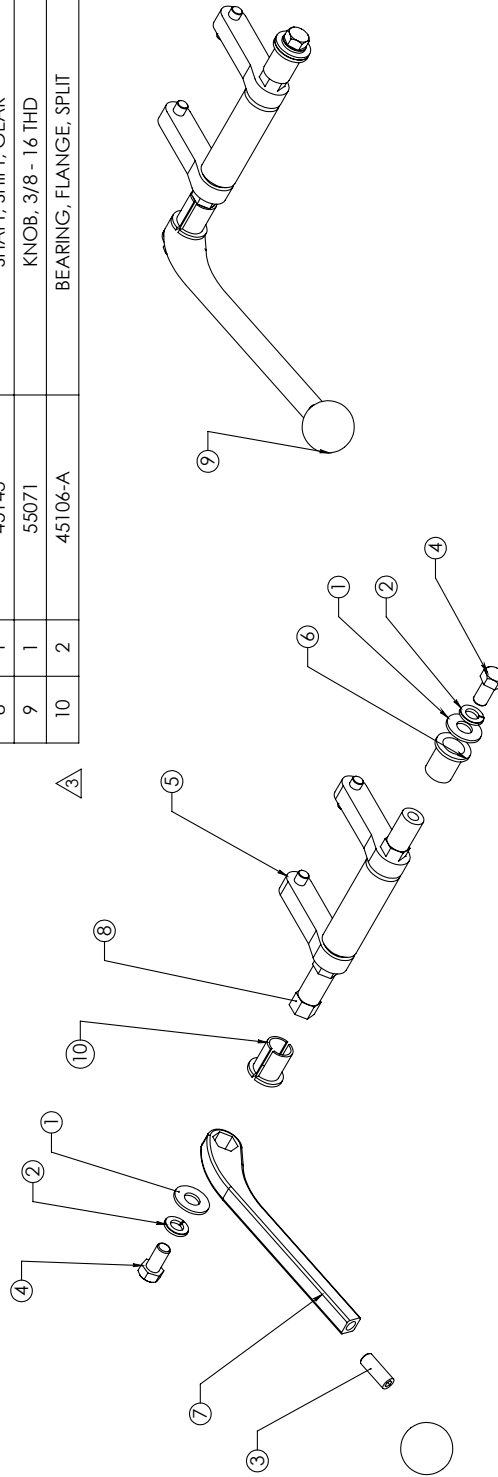

**NOTE: SEE MAIN ASSEMBLY DRAWING FOR HANDLE POSITION**

REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
4	ECN13-0116	BOM UPDATED	SK	2013

UNLESS OTHERWISE SPECIFIED:  
 1. DIMENSIONS ARE IN INCHES  
 2. TOLERANCES ARE:  
 FRACTIONS ± 1/16  
 DECIMALS ± 0.02  
 THREE PLACE DECIMALS ± 0.005  
 3. IDENTIFY PARTS AND MATERIALS USING SLOTTED DIMENSION LINES  
 4. REMOVE SHARP EDGES & CHAMFER EDGES WITH  
 5. MACHINES UNLESS OTHERWISE SPECIFIED  
 6. SMALLER RADIUS SHALL BE USED  
 7. ALL DIMENSIONS SHALL BE TO UNLESS OTHERWISE SPECIFIED  
 8. ALL DIMENSIONS SHALL BE TO UNLESS OTHERWISE SPECIFIED  
 9. MACHINES ON DIMENSIONS WITH PROJECTIONS  
 10. ALL DIMENSIONS SHALL BE TO UNLESS OTHERWISE SPECIFIED

CRITICAL COMPONENT: NO	RATINGS: IF APPLICABLE
PROPRIETARY STATEMENT THE DOCUMENT, CONFIDENTIAL, THIS INFORMATION MAY NOT BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM WITHOUT THE EXPRESS WRITTEN CONSENT OF MCCOY CORPORATION.	DESCRIPTION
DRAWN BARRETT PEARCE 03/28/2000	ASSEMBLY, SHIFT
CHECKED DDT	SIZE/PART NO. 45091
APPROVED DAN BANGERT	MATERIAL N/A
THIRD ANGLE PROJECTION	WEIGHT 3 LBS
	SHEET 1 OF 1

**Illustration 7.12: 45091 ASSEMBLY, SHIFT**



ITEM	QTY.	P/N	DESCRIPTION
1	1	1004	GREASE ZERT, 3/16" DRIVE
2	1	1150	JAM NUT, 5/8"-18
3	1	1151	WASHER, LOCK, 5/8, STEEL, GR8
4	1	1968	CAM FOLLOWER, W/ NEEDLE BEARING

REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
A	N/A	INITIAL RELEASE	N/A	N/A

**UNLESS OTHERWISE SPECIFIED:**

- 1. DIMENSIONS ARE IN INCHES
- 2. TOLERANCES UNLESS OTHERWISE SPECIFIED ARE:
- FRACTIONS: 1/16, 1/32, 1/64
- DECIMALS: 0.005, 0.010, 0.015, 0.020, 0.030, 0.040, 0.050, 0.060, 0.070, 0.080, 0.090, 0.100
- 3. UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE TO THE EXTENSION SURFACE UNLESS INDICATED OTHERWISE
- 4. DIMENSIONS TO SHARP EDGES UNLESS OTHERWISE SPECIFIED
- 5. UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE TO THE EXTENSION SURFACE UNLESS INDICATED OTHERWISE
- 6. UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE TO THE EXTENSION SURFACE UNLESS INDICATED OTHERWISE
- 7. DIMENSIONS TO THE EXTENSION SURFACE UNLESS OTHERWISE SPECIFIED
- 8. DIMENSIONS TO THE EXTENSION SURFACE UNLESS OTHERWISE SPECIFIED
- 9. DIMENSIONS TO THE EXTENSION SURFACE UNLESS OTHERWISE SPECIFIED

**PROPRIETARY STATEMENT**  
 THIS DOCUMENT CONTAINS CONFIDENTIAL INFORMATION AND IS UNCLASSIFIED AND PUBLIC RELEASE UNDER EXECUTIVE ORDER 13526, WHICH IS APPLICABLE TO ALL INFORMATION CONTAINED HEREIN UNLESS INDICATED OTHERWISE BY A WRITTEN STATEMENT FROM MCCOY CORPORATION.

DRAWN: NING MALATHONG 7/27/2005  
 CHECKED: DDT  
 APPROVED: DAN BANGERT

THIRD ANGLE PROJECTION

WEIGHT: 0 LBS.

DESCRIPTION: ASSEMBLY, CAM FOLLOWER  
 SIZE/PART NO.: 1968-ASY  
 MATERIAL: N/A

REV: A  
 SHEET 1 OF 1

**Illustration 7.13: 1968-ASY ASSEMBLY, CAM FOLLOWER**

ITEM	QTY.	P/N	DESCRIPTION
1	2	1151	WASHER, LOCK, 5/8, STEEL, GR8
2	2	1157	SCREW, HEX, 5/8-11 X 1 1/2, GR8
3	1	76603	POST, THREADED
4	2	76602	PLATE, TAB

REVISION	ECO NUMBER	ECO DESCRIPTION	INITIAL	RELEASE	ECO COMPLETED BY	ECO COMPLETED DATE
A	N/A				N/A	N/A

**UNLESS OTHERWISE SPECIFIED:**

- DIMENSIONS ARE IN INCHES
- FINISH: UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS SHALL BE TO THE UNFINISHED SURFACE UNLESS OTHERWISE SPECIFIED
- UNLESS OTHERWISE SPECIFIED, DIMENSIONS SHALL BE TO THE UNFINISHED SURFACE UNLESS OTHERWISE SPECIFIED
- UNLESS OTHERWISE SPECIFIED, DIMENSIONS SHALL BE TO THE UNFINISHED SURFACE UNLESS OTHERWISE SPECIFIED
- UNLESS OTHERWISE SPECIFIED, DIMENSIONS SHALL BE TO THE UNFINISHED SURFACE UNLESS OTHERWISE SPECIFIED
- UNLESS OTHERWISE SPECIFIED, DIMENSIONS SHALL BE TO THE UNFINISHED SURFACE UNLESS OTHERWISE SPECIFIED
- UNLESS OTHERWISE SPECIFIED, DIMENSIONS SHALL BE TO THE UNFINISHED SURFACE UNLESS OTHERWISE SPECIFIED
- UNLESS OTHERWISE SPECIFIED, DIMENSIONS SHALL BE TO THE UNFINISHED SURFACE UNLESS OTHERWISE SPECIFIED
- UNLESS OTHERWISE SPECIFIED, DIMENSIONS SHALL BE TO THE UNFINISHED SURFACE UNLESS OTHERWISE SPECIFIED
- UNLESS OTHERWISE SPECIFIED, DIMENSIONS SHALL BE TO THE UNFINISHED SURFACE UNLESS OTHERWISE SPECIFIED

<p><b>PROPRIETARY STATEMENT</b> THIS DOCUMENT IS THE PROPERTY OF MCCOY CORPORATION AND IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM, WITHOUT THE EXPRESS WRITTEN CONSENT OF MCCOY CORPORATION.</p> <p>DRAWN: BA RRETT PEARCE 1/25/2006                  CHECKED: N/A                  APPROVED: DSB                  THIRD ANGLE PROJECTION</p>	<p><b>DESCRIPTION</b> ASSEMBLY, RETAINER, DOOR</p> <p><b>SIZE</b> PART NO. 76600-01                  MATERIAL N/A</p> <p><b>WEIGHT</b> 3 LBS.</p>
--	---

SOLIDWORKS DOCUMENT PRINTED ON: Wednesday, April 29, 2015

**Illustration 7.14: 76600-01 ASSEMBLY, RETAINER, DOOR**

ITEM	QTY	P/N	DESCRIPTION
1	1	BUC8606-06	WELDMENT, BACKUP, BODY
2	1	BUC8607	WELDMENT, COVER, SIDE
3	1	BUC8608	WELDMENT, COVER, SIDE
4	1	BUC8620-01	ASSEMBLY, CENTER, JAW
5	2	BUC8623-01	ASSEMBLY, CYLINDER
6	2	BUCST7623	FITTING, BUSHING, 1/2 NPT
7	8	1001	FITTING, GREENS, STRAIGHT, 1/2 NPT
8	12	1046	SCREW, HEX, 3/8 - 16, 3/4
9	12	1027	WASHER, LOCK, 3/8, STEEL
10	2	1219	NUT, HEX, 1/2 - 13, 3/4
11	1	BUC7699	MANIFOLD, BACKUP
12	2	1460	FITTING, NIPPLE, HEX, 1/2 MNPT, 1/2 SK, 1/4 MNPT
13	1	BAC-SM25RCFF	GAUGE, 2 1/2 SK, 1/4 MNPT
14	2	BUC6310	WASHER, RUBBER
15	1	TAG-BACKUP-PRESSURE	TAG, BACKUP, PRESSURE
16	2	1626	FITTING, 1/2 NPT, 1/2 MJIC, FLOW, BACKUP, LOUD
17	1	BUC4509-08	WELDMENT, BRACKET, LOUD CELL
18	1	1103	LOCKWASHER, 1/2
19	1	1109	SCREW, HEX, 1/2 - 13, 3/4
20	4	1005192	PIN, CYLINDER, PACKING, BACKUP
21	4	PH-PIN 2	PIN, COTTER, 1/4, 2
22	3	1150-A	NUT, HEX, #6 - 32, BRASS
23	1	8PSON-S	FITTING, PLUG, 1/2 MORB
24	3	1150-C	SCREW, BUTTON, STCOT, #6 - 32, 1/2 BRASS
25	1	BUCST7627	VALVE, RELIEF, 1/2 PILOT OPR, FITTING, 1/2 MORB, 1/2 MJIC
26	1	1476	FITTING, 1/2 MORB, 1/2 MJIC, STRAIGHT
27	1	1023-C	SCREW, HEAD, 5/16 - 18 X 3
28	2	1023-A	NUT, HEX 5/16 - 18 GR8
29	2	1023-B	WASHER, LOCK, 5/16, GR8


REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
B	14-0743	UPDATED EXPLODED VIEW & DIMS ARE REPLACED P/N (BAC-SM25RCFF) WITH P/N (BAC-SM25RCFF)	S.CASTLE	2/19/2015
C	14-0743	REPLACED P/N (11) BUC8625-06 WITH P/N (11) BUC8625-06	J. HILTY	7/10/2015
D	14-0724	REPLACED (11) BUC8625-06 WITH (11) BUC8625-06 WITH (11) BUC8625-06	M. BUDEN	11/27/2018
E	14-0724	REPLACED (4) 315 & (4) 1218 W/ (4) 1005192 & (4) PH-PIN 2	M. BUDEN	12/10/2018
F	14-0130	VISUAL UPDATE	MCCOY GLOBAL	12/10/2018

**PROPERTY STATEMENT**  
 THIS DOCUMENT IS THE PROPERTY OF MCCOY GLOBAL. IT IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED. IT IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. ANY UNAUTHORIZED USE OF THIS DOCUMENT IS PROHIBITED. MCCOY GLOBAL IS NOT RESPONSIBLE FOR ANY DAMAGE TO PROPERTY OR PERSONS ARISING FROM THE USE OF THIS DOCUMENT. MCCOY GLOBAL, 14200 W. 14TH AVENUE, DENVER, CO 80202, USA. TEL: 303.440.1000. FAX: 303.440.1001. WWW.MCCOYGLOBAL.COM


**RELEASED FOR PRODUCTION**

3030700085 DOCUMENT PRINTED ON: Wednesday, December 12, 2018

Illustration 7.15: BUC8625-06 ASSEMBLY, BACKUP, 8625 CLINCHER, COMPRESSION

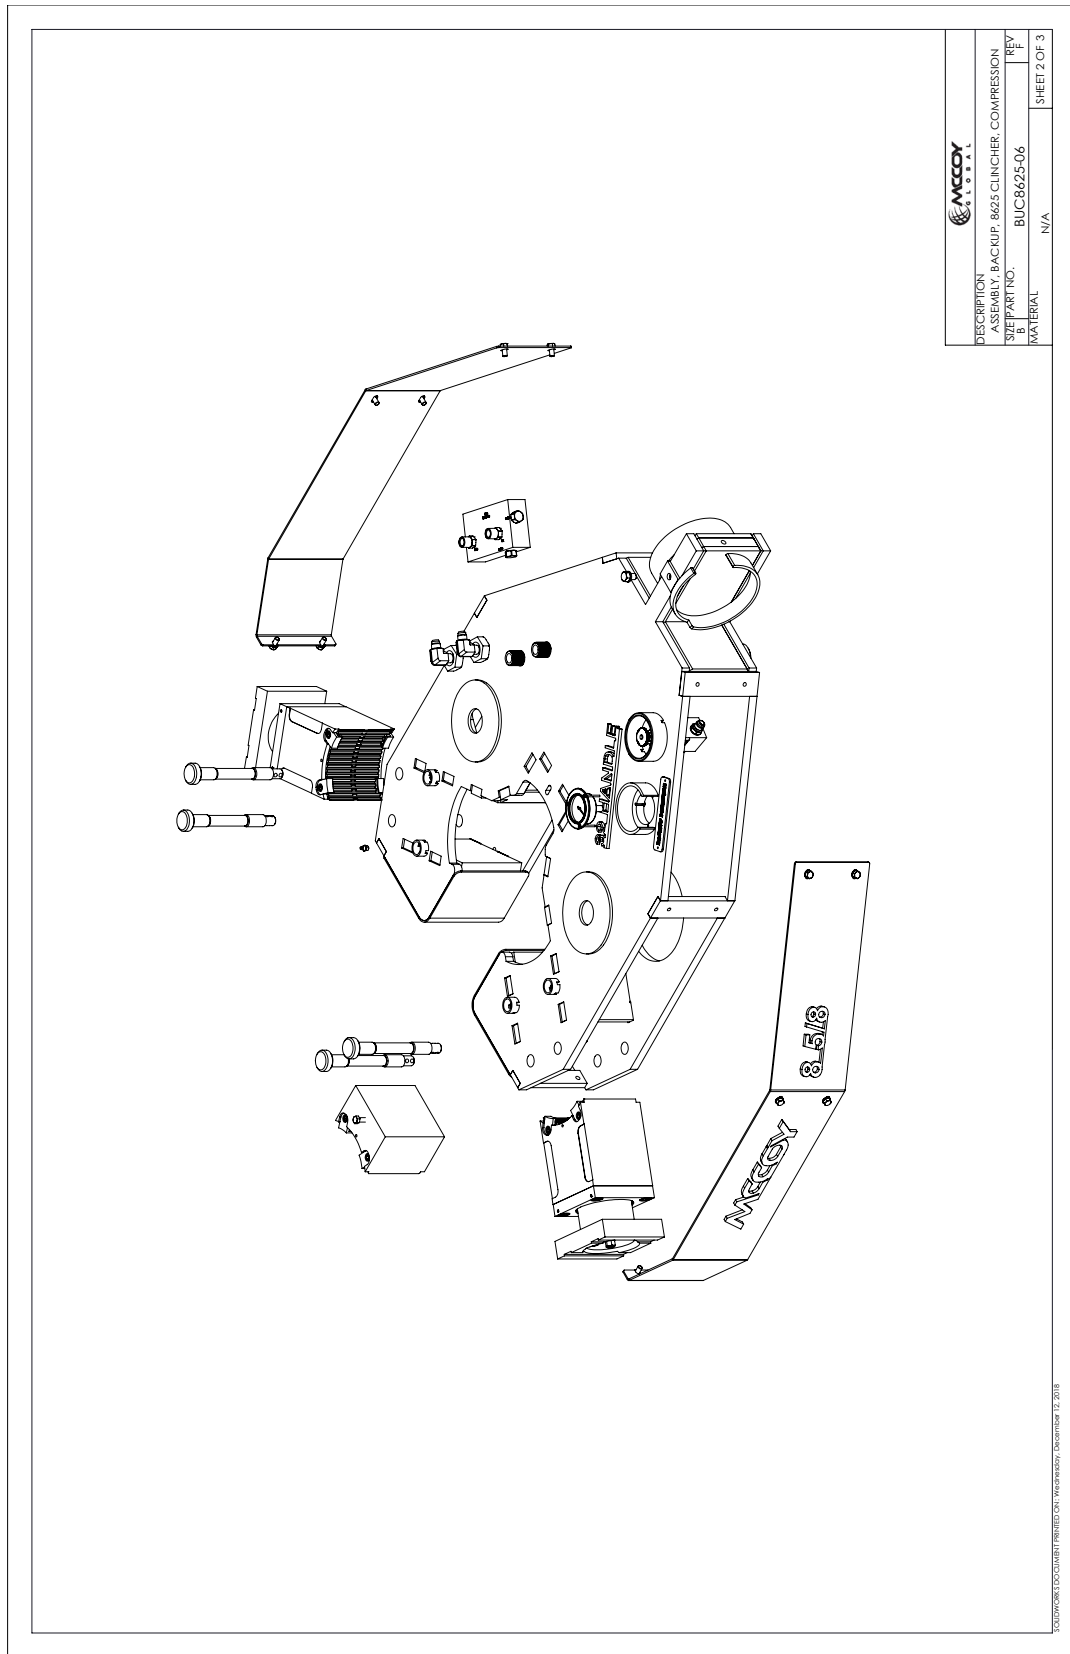

**Illustration 7.15: BUC8625-06 ASSEMBLY, BACKUP, 8625 CLINCHER, COMPRESSION**

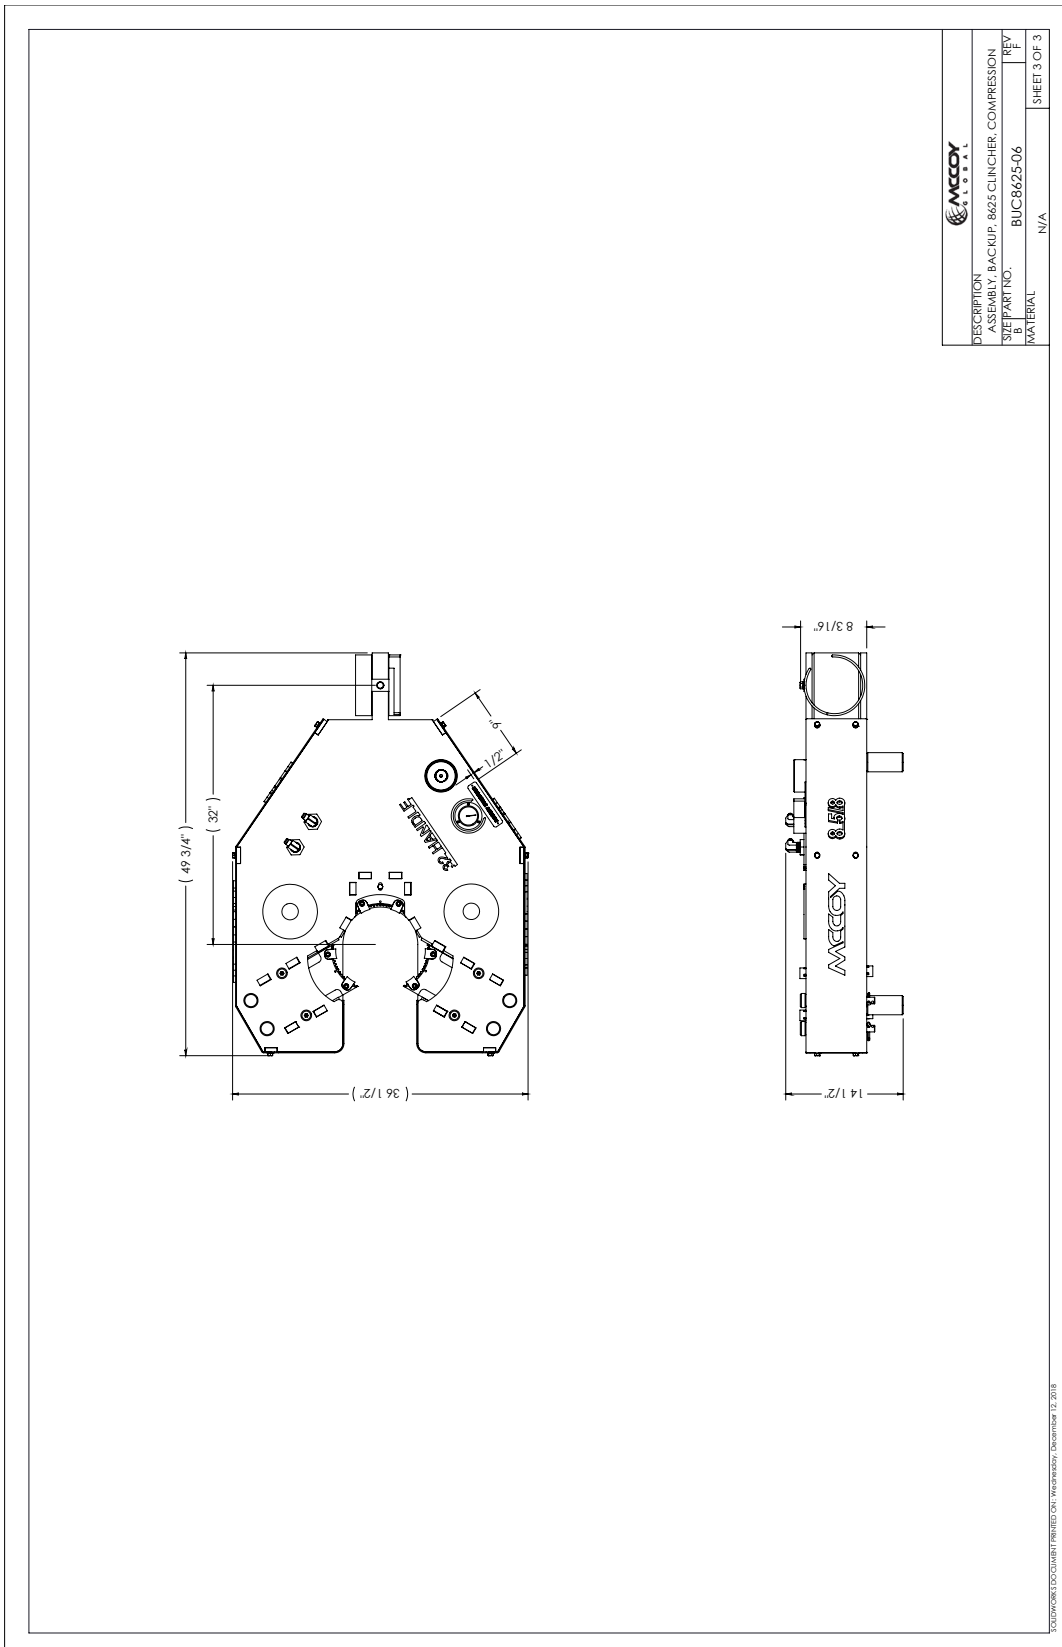

**Illustration 7.15: BUC8625-06 ASSEMBLY, BACKUP, 8625 CLINCHER, COMPRESSION**

ITEM	QTY.	P/N	DESCRIPTION	MATERIAL
1	1	BUC8619A	JAW, CENTER	4340
2	1	1049	SCREW, HEX, 3/8 - 16, 1 1/2, GR08	N/A
3	4	1040-A	SCREW, SOCKET HEAD CAP, 3/8 - 16, 3/4, STEEL, GR08	N/A
4	4	73064	CLIP, JAW	ASTM A514

REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
A	ECN13-0203	DRAWINGS UPDATED	K.HAIKIE	2/28/2013

UNLESS OTHERWISE SPECIFIED: 1. DIMENSIONS ARE IN INCHES 2. TOLERANCES ARE: FRACTIONS ± 1/16 DECIMALS ± 0.005 THREE PLACE DECIMALS ± 0.010 3. UNFINISHED SURFACES TO BE FINISHED TO 4. UNFINISHED SURFACES TO BE FINISHED WITH 5. UNFINISHED SURFACES TO BE FINISHED WITH 6. UNFINISHED SURFACES TO BE FINISHED WITH 7. UNFINISHED SURFACES TO BE FINISHED WITH 8. UNFINISHED SURFACES TO BE FINISHED WITH 9. INTERPRET DRAWINGS PER ASME Y14.5-2009		PROPRIETARY STATEMENT THIS DOCUMENT AND ALL INFORMATION AND IS CONSIDERED CONFIDENTIAL. THIS INFORMATION MAY NOT BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE EXPRESS WRITTEN CONSENT OF MCCOY CORPORATION.
DRAWN L. CHILDRESS 6/11/2004 CHECKED DDT APPROVED D. BANGERT THIRD ANGLE PROJECTION WEIGHT 36 LBS.	DESCRIPTION ASSEMBLY, CENTER, JAW SIZE PART NO. BUC8620-01 MATERIAL N/A	REV A SHEET 1 OF 1

RELEASED FOR PRODUCTION

SOLIDWORKS DOCUMENT PRINTED ON: Friday, June 10, 2016

**Illustration 7.16: BUC8620-01 ASSEMBLY, CENTER, JAW**

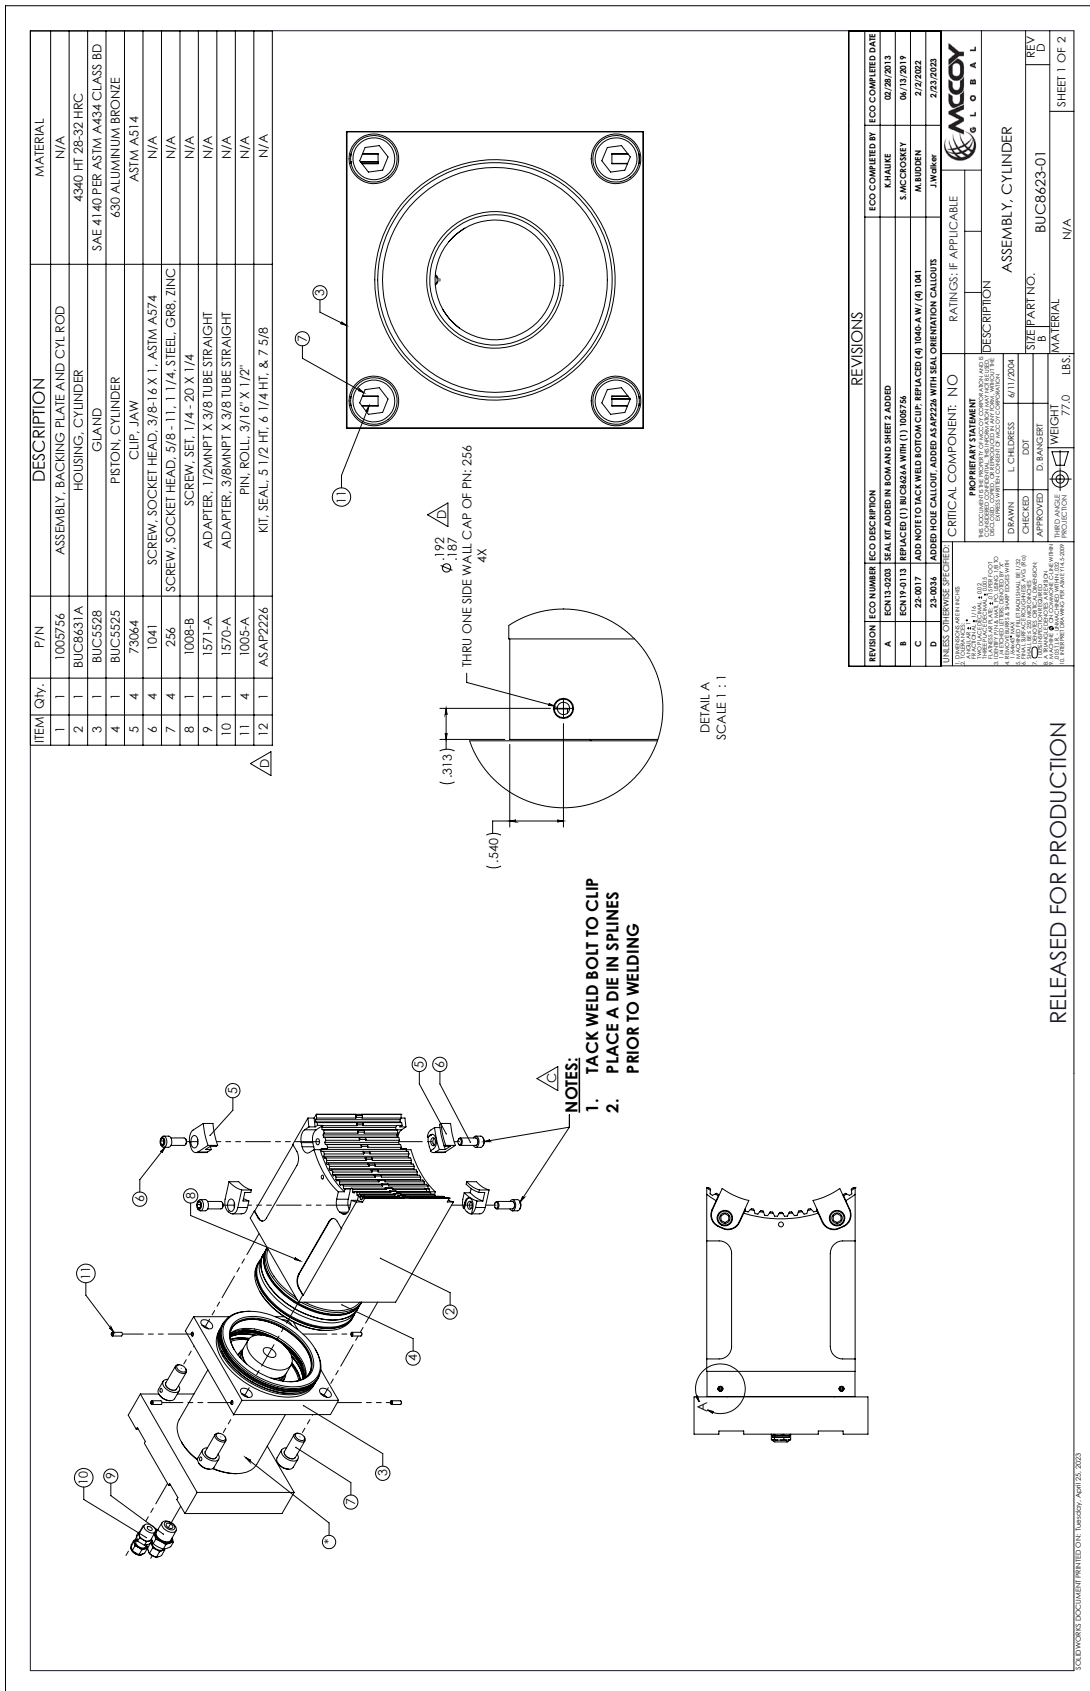


Illustration 7.17: BUC8623-01 ASSEMBLY, CYLINDER

ITEM	QTY.	P/N	DESCRIPTION
1	1	BUC7600-01	ASSEMBLY, HANGER
2	2	BUC7670-02	ASSEMBLY, LEG
3	9	1151	LOCKWASHER, 5/8, STEEL, GR8
4	7	204	SCREW, CAP, HEX HEAD 5/8-11 X 3 GR8
5	2	1158	SCREW, HEX, 5/8 - 11, 1 3/4, STEEL, GR08

REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
00	ECN13-0215	SEE ECN 13-0215	J. SUBRAMANIAN	7/5/2013
A	18-0124	ADD (9) 1151 & (7) 204 & (2) 1158	M. BUDDEN	11/27/2018

**UNLESS OTHERWISE SPECIFIED:**

1. DIMENSIONS ARE IN INCHES
2. DIMENSIONS ARE IN MILLIMETERS
3. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE TO BE TAKEN FROM THE DIMENSION LINE
4. DIMENSIONS TO SURFACE UNLESS OTHERWISE SPECIFIED
5. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED
6. DIMENSIONS TO EDGE UNLESS OTHERWISE SPECIFIED
7. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED
8. DIMENSIONS TO SURFACE UNLESS OTHERWISE SPECIFIED
9. DIMENSIONS TO CENTER UNLESS OTHERWISE SPECIFIED

**PROPRIETARY STATEMENT**  
 THIS DOCUMENT IS THE PROPERTY OF MCCOY CORPORATION AND IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM WITHOUT THE EXPRESS WRITTEN CONSENT OF MCCOY CORPORATION

DRAWN	M. LANDRY	8/3/2006	REV
CHECKED	NM	8/3/2006	A
APPROVED	DSB	8/3/2006	REV
THIRD ANGLE PROJECTION	WEIGHT	338.6 LBS.	A

**DESCRIPTION**  
 ASSEMBLY, KIT, MOUNTING


**SIZE / PART NO.**  
 MK7600-05

**MATERIAL**  
 N/A

SHEET 1 OF 2

Illustration 7.18: MK7600-05 KIT, MOUNTING



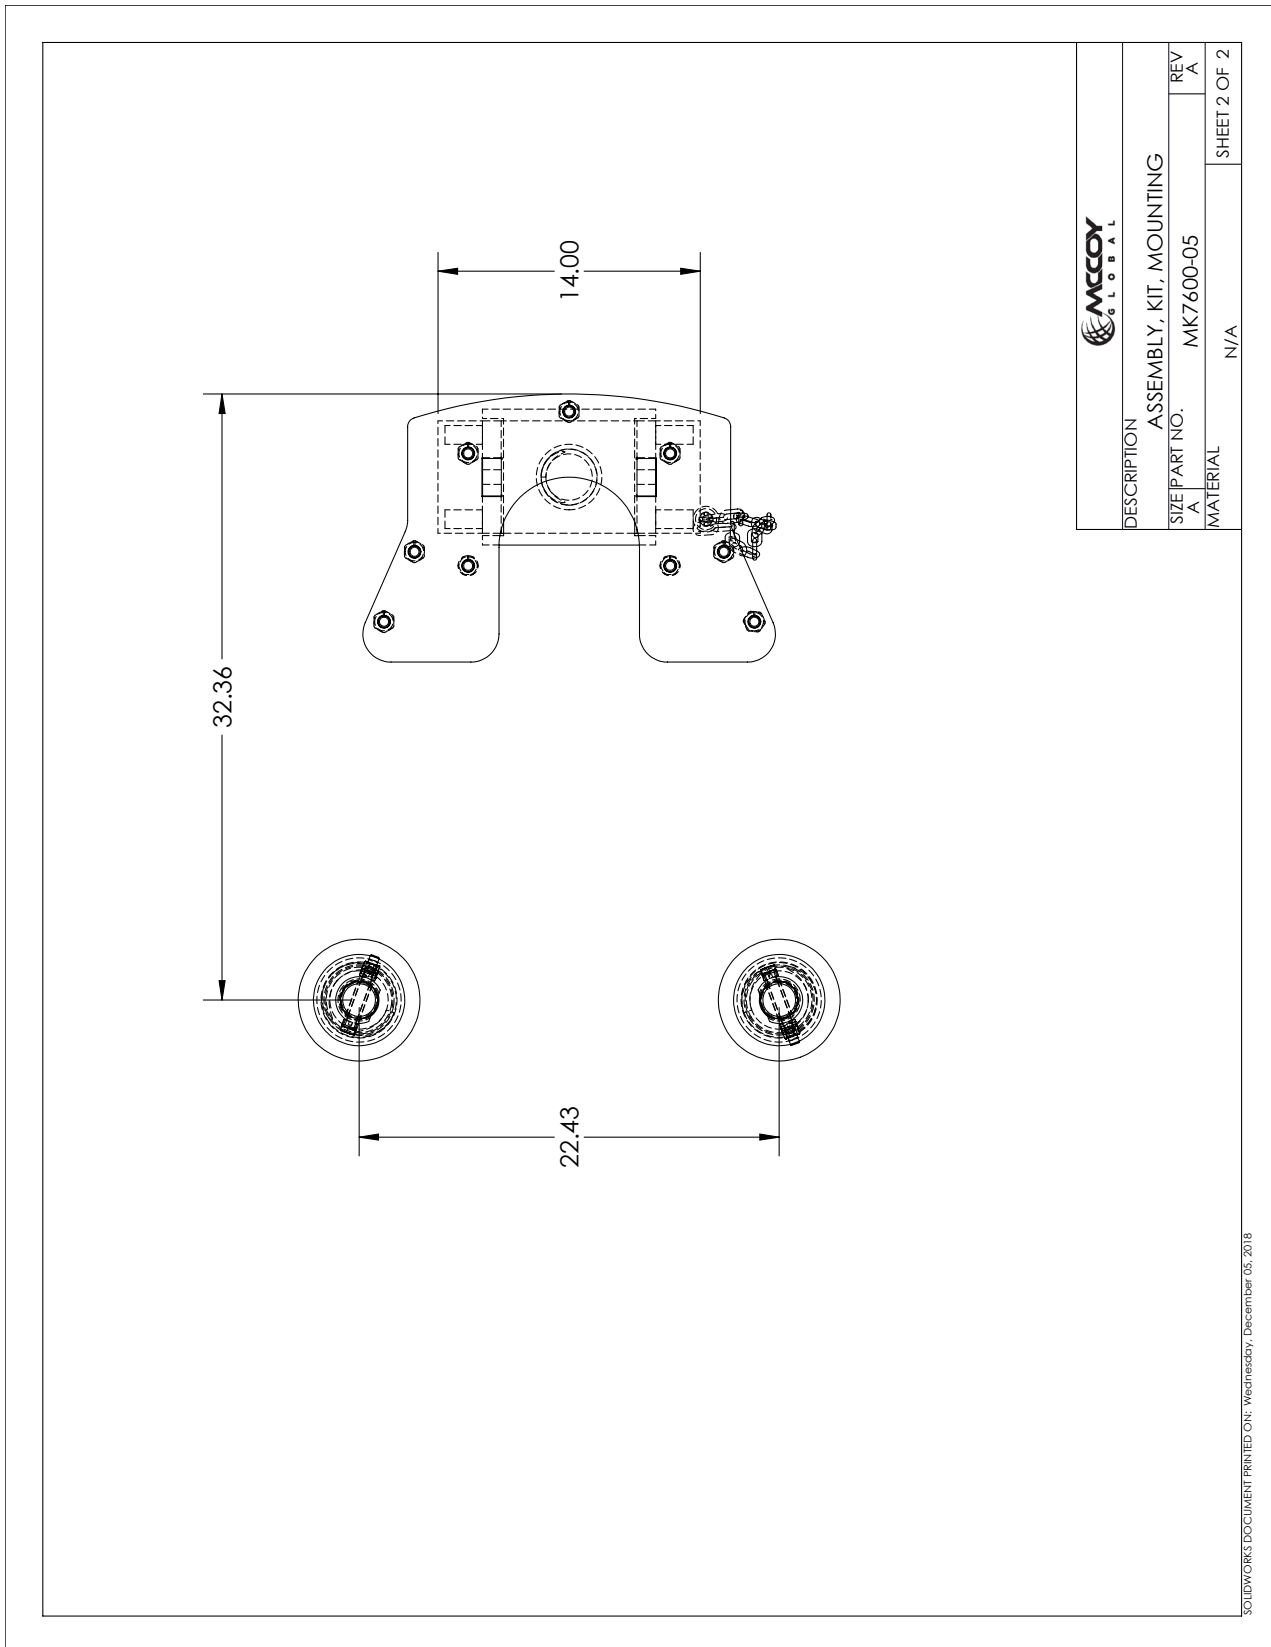

SOLIDWORKS DOCUMENT PRINTED ON: Wednesday, December 05, 2018

**Illustration 7.18: MK7600-05 KIT, MOUNTING**

ITEM	QTY.	P/N	DESCRIPTION
1	1	BUC4516-B	WELDMENT, CAP, SPRING
2	1	BUC4516-P	PIN, RETAINER, SPRING
3	1	BUC5515	SPRING, COMPRESSION
4	1	BUC7670-S1	WELDMENT, LEG
5	1	BUC5571	WELDMENT, CAP, SPRING
6	2	1101	NUT, HEX HEAD, 1/2-13
7	2	1103	WASHER, LOCK, 1/2
8	1	1121	SCREW, HEX, 1/2-13, 4, STEEL, GR8
9	1	76180	WELDMENT, STOP
10	1	1120	SCREW, HEX HEAD, 1/2-13 X 3 1/2 GR8

REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COMPLETED BY	ECO COMPLETED DATE
00	ECN13-0218	SEE ECN13-0218	J SUBRAMANIAN	7/5/2013

**REVISIONS**

<b>PROPRIETARY STATEMENT</b> THIS DOCUMENT IS THE PROPERTY OF MCCOY CORPORATION AND IS TO BE KEPT CONFIDENTIAL. IT IS TO BE RETURNED TO MCCOY CORPORATION IMMEDIATELY UPON REQUEST. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN CONSENT OF MCCOY CORPORATION.	<b>DESCRIPTION</b> ASSEMBLY, LEG	<b>SIZE PART NO.</b> A BUC7670-02	<b>REV</b> 00
<b>DRAWN</b> MARIA LANDRY 08/03/2006	<b>CHECKED</b> NM	<b>WEIGHT</b> 39.1 LBS.	<b>SHEET 1 OF 1</b>
<b>APPROVED</b> DSB	<b>THIRD ANGLE PROJECTION</b>		



**RELEASED FOR PRODUCTION**

SOLIDWORKS DOCUMENT PRINTED ON: Monday, January 25, 2016

**Illustration 7.19: BUC7670-02 ASSEMBLY, LEG**

ITEM	HIGHEST POSITION/QTY.	P/N	DESCRIPTION
1	1	BUC4511	SPRING, COMPRESSION
2	2	BUC5512	WELDMENT, COMPRESSION, PLATE
3	1	BUC7608-01	WELDMENT, HANGER

2

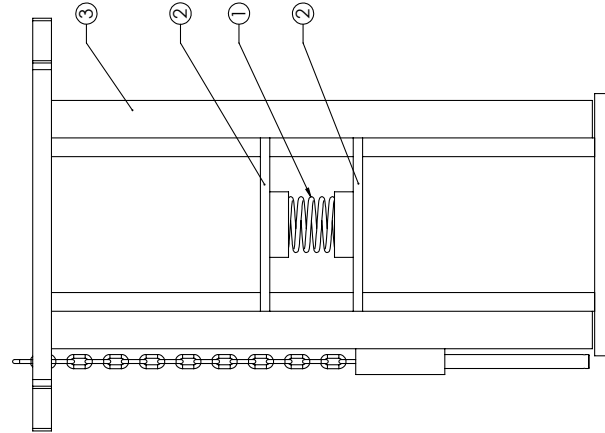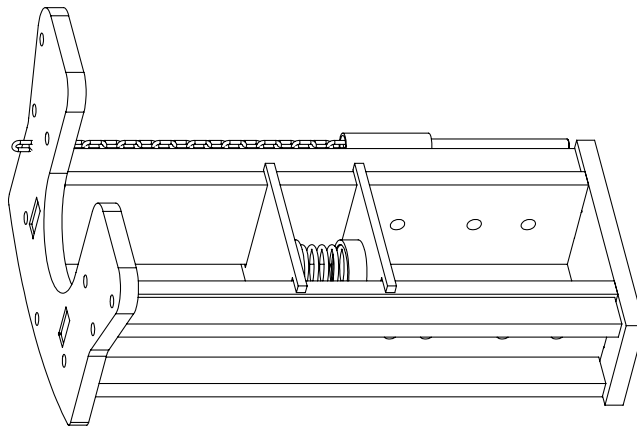

REVISION	ECO NUMBER	ECO DESCRIPTION	INITIAL	RELEASE	ECO COMPLETED BY	ECO COMPLETED DATE
A	N/A				N/A	N/A

**UNLESS OTHERWISE SPECIFIED:**  
 1. DIMENSIONS ARE IN INCHES  
 2. DIMENSIONS IN PARENTHESIS ARE FOR REFERENCE ONLY  
 3. DIMENSIONS IN SQUARE BRACKETS ARE FOR REFERENCE ONLY  
 4. 0.02  
 5. 1/8 ETCH (LETTERS, DIGITS) BY 0.015  
 6. 1/8 MAX PER SIDE SHALL BE 1/32  
 7. 1/8 MAX PER SIDE SHALL BE 1/32  
 8. A TRIANGLE INDICATES A REVISION  
 9. INTERPRET DRAWING PER ASME Y14.5-2009

**PROPRIETARY STATEMENT**  
 THIS DOCUMENT IS THE PROPERTY OF MCCOY CORPORATION AND IS TO BE USED ONLY FOR THE PURPOSES AND TIME PERIOD SPECIFIED HEREIN. IT IS TO BE KEPT IN CONFIDENTIALITY AND NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE EXPRESS WRITTEN CONSENT OF MCCOY CORPORATION.

DRAWN	MARIA LANDRY	2/17/2012
CHECKED	NM	ERRRRL
APPROVED	DAN BANGERRR	Approved

DESCRIPTION: ASSEMBLY, HANGER  
 PART NO.: BUC7600-01  
 WEIGHT: 260.1 LBS.  
 MATERIAL: N/A

REVISIONS

RELEASED FOR PRODUCTION

SOLIDWORKS DOCUMENT PRINTED ON: Tuesday, April 28, 2015

Illustration 7.20: BUC7600-01 ASSEMBLY, HANGER

ITEM QTY	P/N	DESCRIPTION	ITEM QTY	P/N	DESCRIPTION	ITEM QTY	P/N	DESCRIPTION	ITEM QTY	P/N	DESCRIPTION
1	2	DVG35-DA8	38	4	WASHER, FLAT, 3/8, STEEL, GR 8	69	1	FITTING, 1/4 FNPT, 1/4 MNPT, ELBOW	1	1449	FITTING, 1/4 FNPT, 1/4 MNPT, ELBOW
2	1	DVG35-MA8	39	1025	WASHER, LOCK, 3/8, STEEL, GR 8	70	1	PLATE, GUIDE, HOSE	1	76119A	WELDMENT, VALVE, MOUNT
3	1	DVG35-TR99	40	1024	NUT, HEX, 3/8 - 16, STEEL, GR08	71	1	NUT, HEX HEAD, 1/2-13	2	76800	NUT, HEX HEAD, 1/2-13
4	1	DVG35-A980	41	86960	TAG, BULKHEAD	72	2	SCREW, HEX, 3/8 - 16, 1/2, GR08	2	1101	ASSEMBLY, HOSE
5	1	DVG35-HMRV	42	PN20-02500	FITTING, 1/4 MNPT, 1/4 MNPT, 2.5, STRAIGHT, SCH 80	73	2	ASSEMBLY, HOSE	2	1049	ASSEMBLY, HOSE
6	1	1718	43	16DTX-S	ADAPTER, 1 FNPT X 1/4 MNPT, 4	74	1	GAUGE, 2 1/2, 5K, 1/4 MNPT	1	H16-0132-FJJC	NUT, HEX, #6 - 32, BRASS
7	1	1431-C	44	PN16-4000	FITTING, 1/4 MNPT, 1/4 MNPT, 2.5, STRAIGHT, SCH 80	75	1	HOSE ASSEMBLY, 1/4 IN X 15.5 IN	1	H16-0132-FJJC	WELDMENT, GUARD
8	1	16-1F50G-S	45	PN16-2500	FITTING, 1/4 MNPT, 1/4 MNPT, 1.5, STRAIGHT, SCH 80	76	1	CE-PRESSUREMNT-BTM	1	BAC-5M25RCFF	SCREW, HEX, 1/2 - 13, 3/4, STEEL, GR08
9	2	8-CC50X-S	46	PN16-CH	FITTING, 1 FNPT, 1 FJIC, STRAIGHT	77	3	BRACKET, GAUGE, PRESSURE	1	1150-A	SCREW, HEX, 1/2 - 13, 3/4, STEEL, GR08
10	2	16-8F50G-S	47	16G6X	SCREW, HEX, 5/8-11, 2, STEEL, GR 8	78	1	FITTING, 1/4 FNPT, 1/4 MNPT, 1/74	1	1653	FITTING, 1/4 FNPT, 1/4 M JIC, ELBOW
11	2	16-8F50G-S	48	1151	WASHER, LOCK, 5/8, STEEL, GR 8	79	1	FITTING, 1/4 FNPT, 1/4 MNPT, 1/74	1	1650-C02	SCREW, PAN HEAD, 6-32, 1/2, BRASS
12	1	CM4565	49	16-20CTX	FITTING, 1/4 FNPT, 1/4 MNPT, 1/74	80	1	ASSEMBLY, HOSE	2	1109	ASSEMBLY, HOSE
13	5	1576	50	20F6X	FITTING, 1/4 FNPT, 1/4 MNPT, 1/74	81	2	ASSEMBLY, HOSE	1	1653	ASSEMBLY, HOSE
14	1	1451	51	1470	FITTING, 1/4 FNPT, 1/4 MNPT, 1/74	82	1	ASSEMBLY, HOSE	1	H20-0122-FJJB	ASSEMBLY, HOSE
15	1	1460	52	1616-B	FITTING, 1/4 FNPT, 1/4 MNPT, 1/74	83	3	ASSEMBLY, HOSE	1	H4-0079-FJFJ	ASSEMBLY, HOSE
16	1	08-9062	53	1616-B	FITTING, 1/4 FNPT, 1/4 MNPT, 1/74	84	1	ASSEMBLY, HOSE	1	H4-0578-FJJB	ASSEMBLY, HOSE
17	1	20-1F50G-S	54	1616-B	FITTING, 1/4 FNPT, 1/4 MNPT, 1/74	85	1	ASSEMBLY, HOSE	1	H4-0615-FJFJ	ASSEMBLY, HOSE
18	1	1454	55	1655	FITTING, 1/4 FNPT, 1/4 MNPT, 45	86	1	ASSEMBLY, HOSE	1	H4-0615-FJFJ	ASSEMBLY, HOSE
19	1	16-4F50G-S	56	1446	FITTING, QD, 1/4 M	87	1	ASSEMBLY, HOSE	1	H4-0615-FJFJ	ASSEMBLY, HOSE
20	1	1587	57	1443	CAP, QUICK DISCONNECT, 1/4 M						
21	3	A35-VI 526K-8	58	1604	FITTING, 1 MNPT, 1 FNPT, 45						
22	1	20-C50X-S	59	1441	FITTING, 1 MALE, QUICK DISCONNECT						
23	4	1122	60	1442	CAP, QUICK DISCONNECT, 1						
24	9	1103	61	16C6X-S	FITTING, 1 FJIC, 1 M JIC, ELBOW						
25	2	16F50X-S	62	16F650X-S	FITTING, 1 MORB, 1 FJIC, STRAIGHT						
26	1	1449-O	63	02-9216	FITTING, 1/4 CD61, 1/4 M JIC, ELBOW						
27	1	1456	64	02-9217	FITTING, 1/4, CD61, SPLIT FLANGE						
28	3	16C50X-S	65	86052	CARTRIDGE, LOGIC ELEMENT						
29	1	1471-L	66	4-4-6-550X-S	FITTING, 3/8 MORB, 1/4 M JIC, 1/4 M JIC, TEE						
30	1	VA35-TAG-1	67	101-0727	MANIFOLD, 1/4 M JIC, SAFETY DOOR						
31	1	VA35-TAG-3	68	X2-79	SCREW, HEX, 1/2-13, 5, STEEL, GR08						
32	1	VA35-TAG-2									
33	1	76900									
34	1	86950									
35	1	2070									
36	1	20-CCCTX									
37	4	1047									

Illustration 7.21: VP7625UHT-335SAE ASSEMBLY, VALVE PACKAGE, DVG35

**VALVE PACKAGE SPECIFICATIONS**

**FUNCTIONS: (3)  
TONG, BACKUP, LIFT CYLINDER**


**CONNECTIONS:  
PRESSURE: 1" MALE WING-TYPE QUICK DISCONNECT  
RETURN: 1 1/4" MALE WING-TYPE QUICK DISCONNECT**

**INCLUDES DUMP VALVE AND LOGIC VALVE  
SOLENOID SOLD SEPARATELY  
DOOR SWITCH INCLUDED WITH TONG**


REVISION	ECO NUMBER	ECO DESCRIPTION	ECO COVERED BY	ECO COMPLETED DATE
A	16-0016	REPLACED (1) BAC-5M25RCFF W/ BAC 525RCFF	J. WALKER	3/6/2015
UNLESS OTHERWISE SPECIFIED:				
1. DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				
2. FINISHES ARE AS SHOWN UNLESS OTHERWISE SPECIFIED.				
3. MATERIALS ARE TO BE AS SHOWN UNLESS OTHERWISE SPECIFIED.				
4. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
5. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
6. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
7. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
8. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
9. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
10. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
11. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
12. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
13. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
14. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
15. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
16. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
17. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
18. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
19. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
20. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
21. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
22. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
23. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
24. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
25. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
26. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
27. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
28. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
29. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
30. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
31. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
32. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
33. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
34. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
35. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
36. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				
37. ALL DIMENSIONS ARE TO UNLESS OTHERWISE SPECIFIED.				

RELEASED FOR PRODUCTION




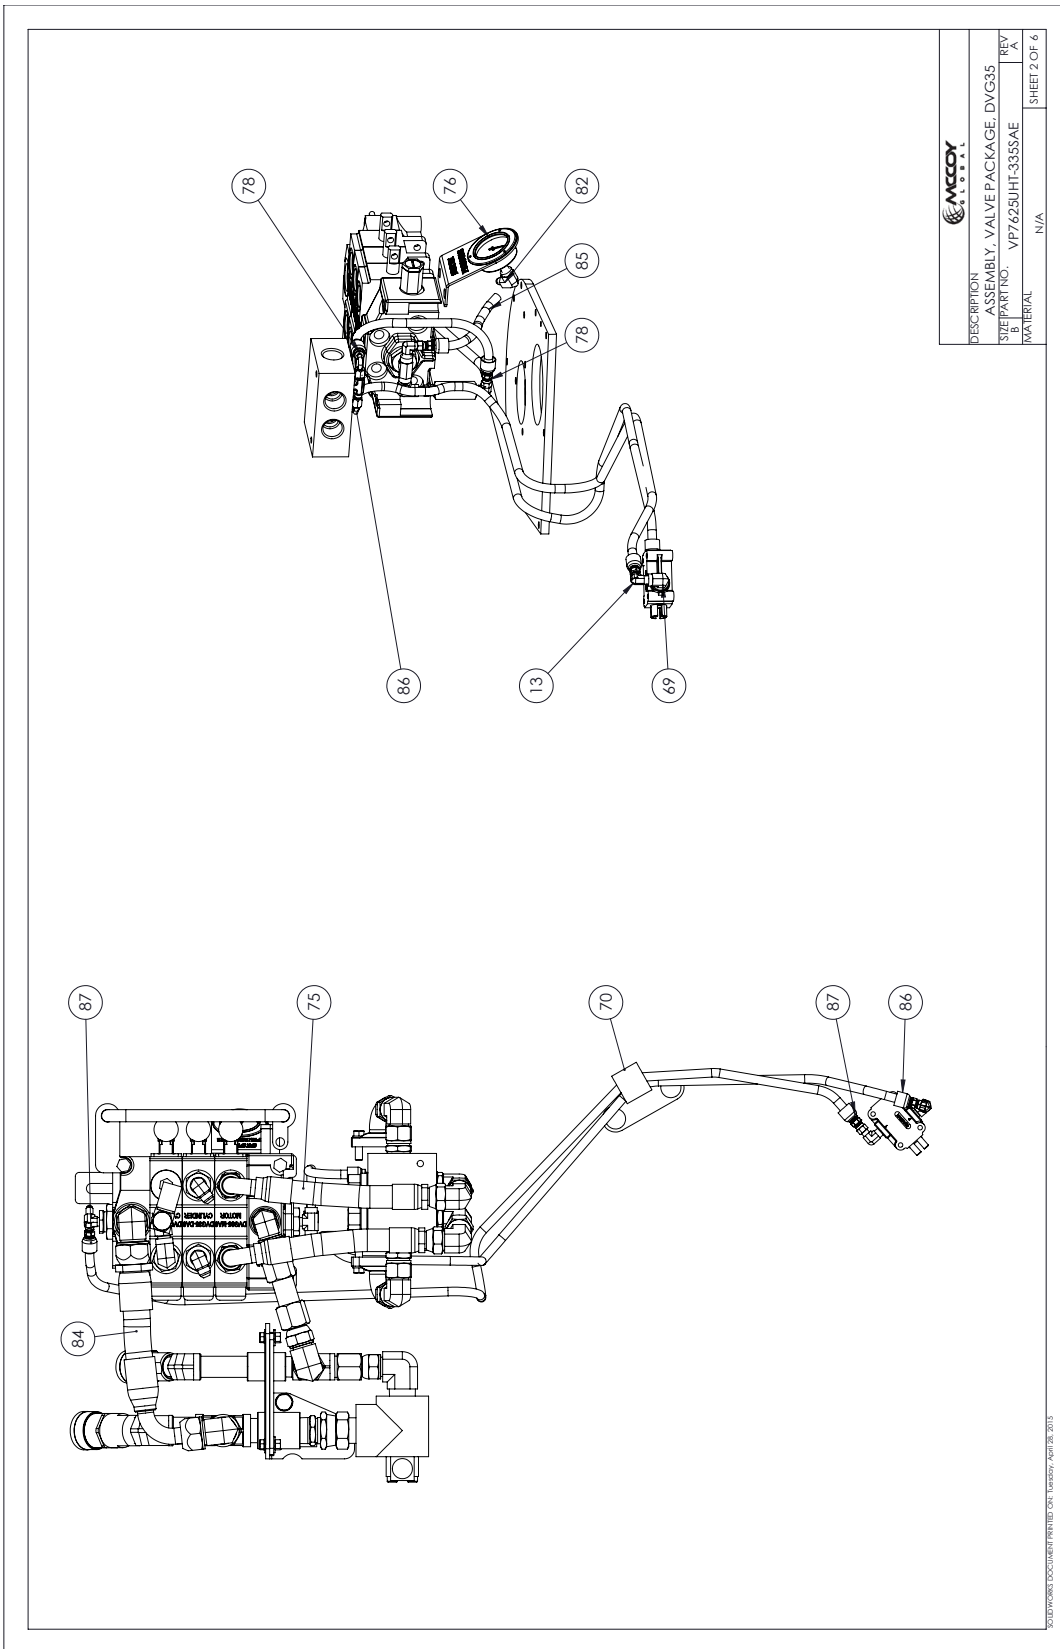


**Illustration 7.21: VP7625UHT-335SAE ASSEMBLY, VALVE PACKAGE, DVG35**

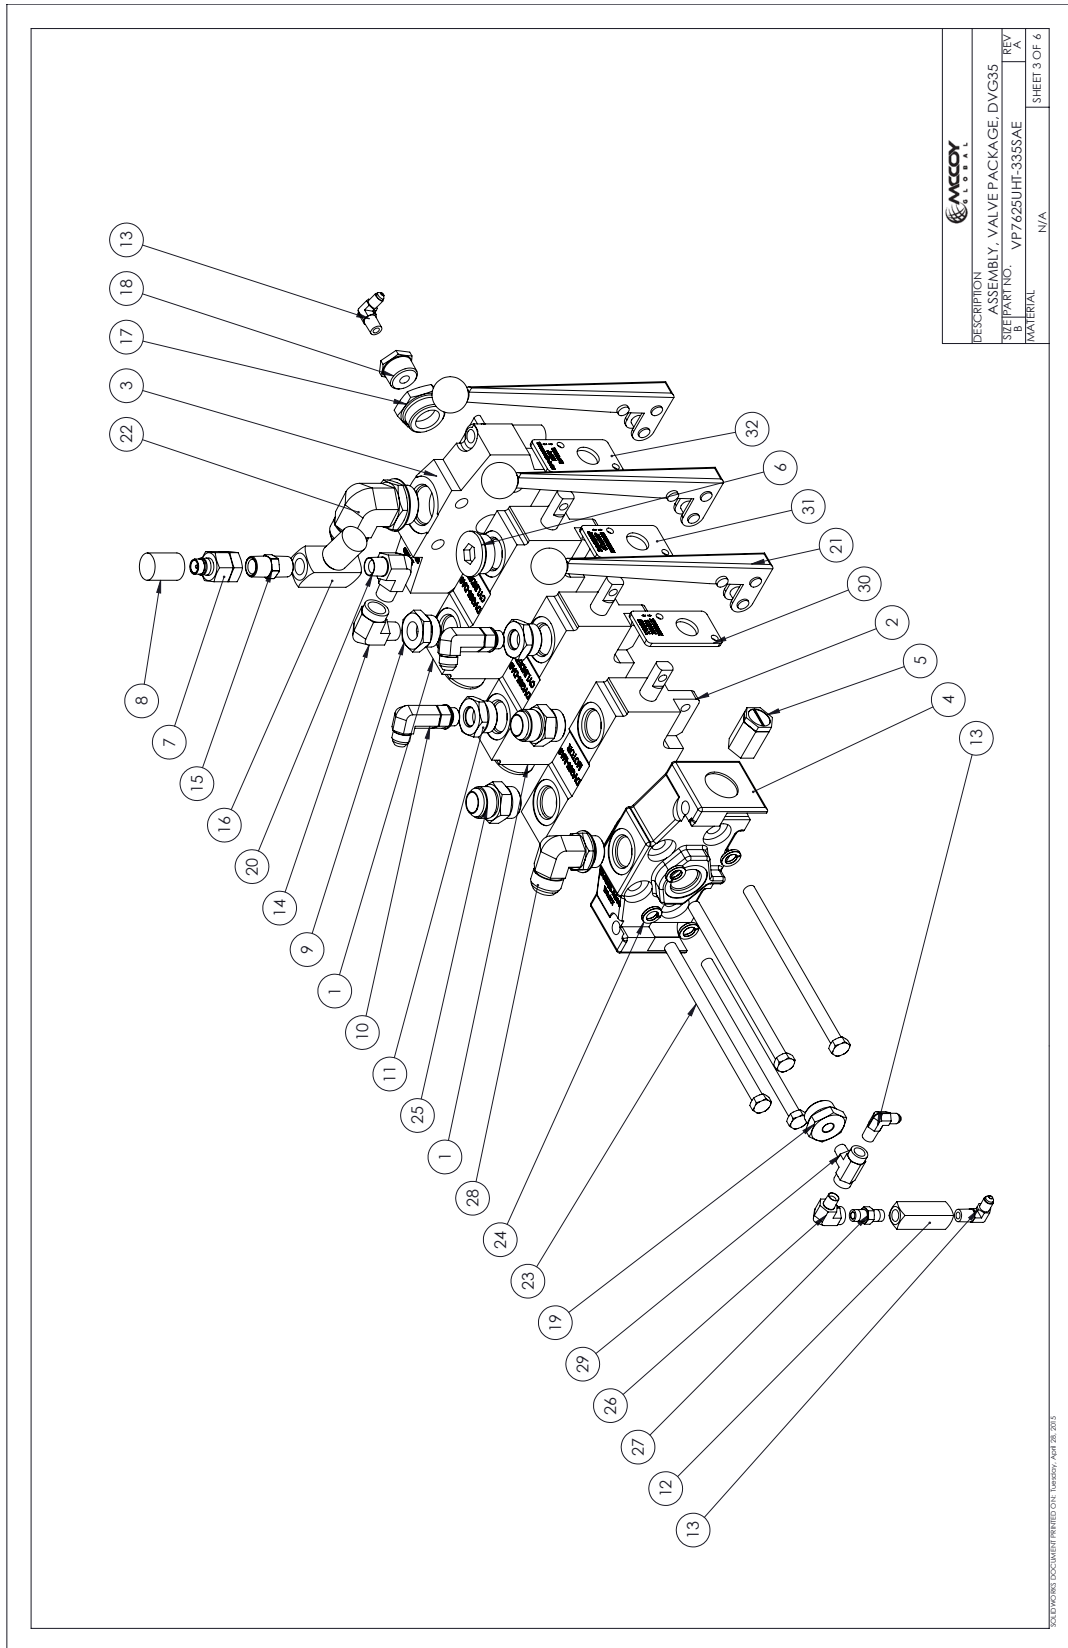

**Illustration 7.21: VP7625UHT-335SAE ASSEMBLY, VALVE PACKAGE, DVG35**

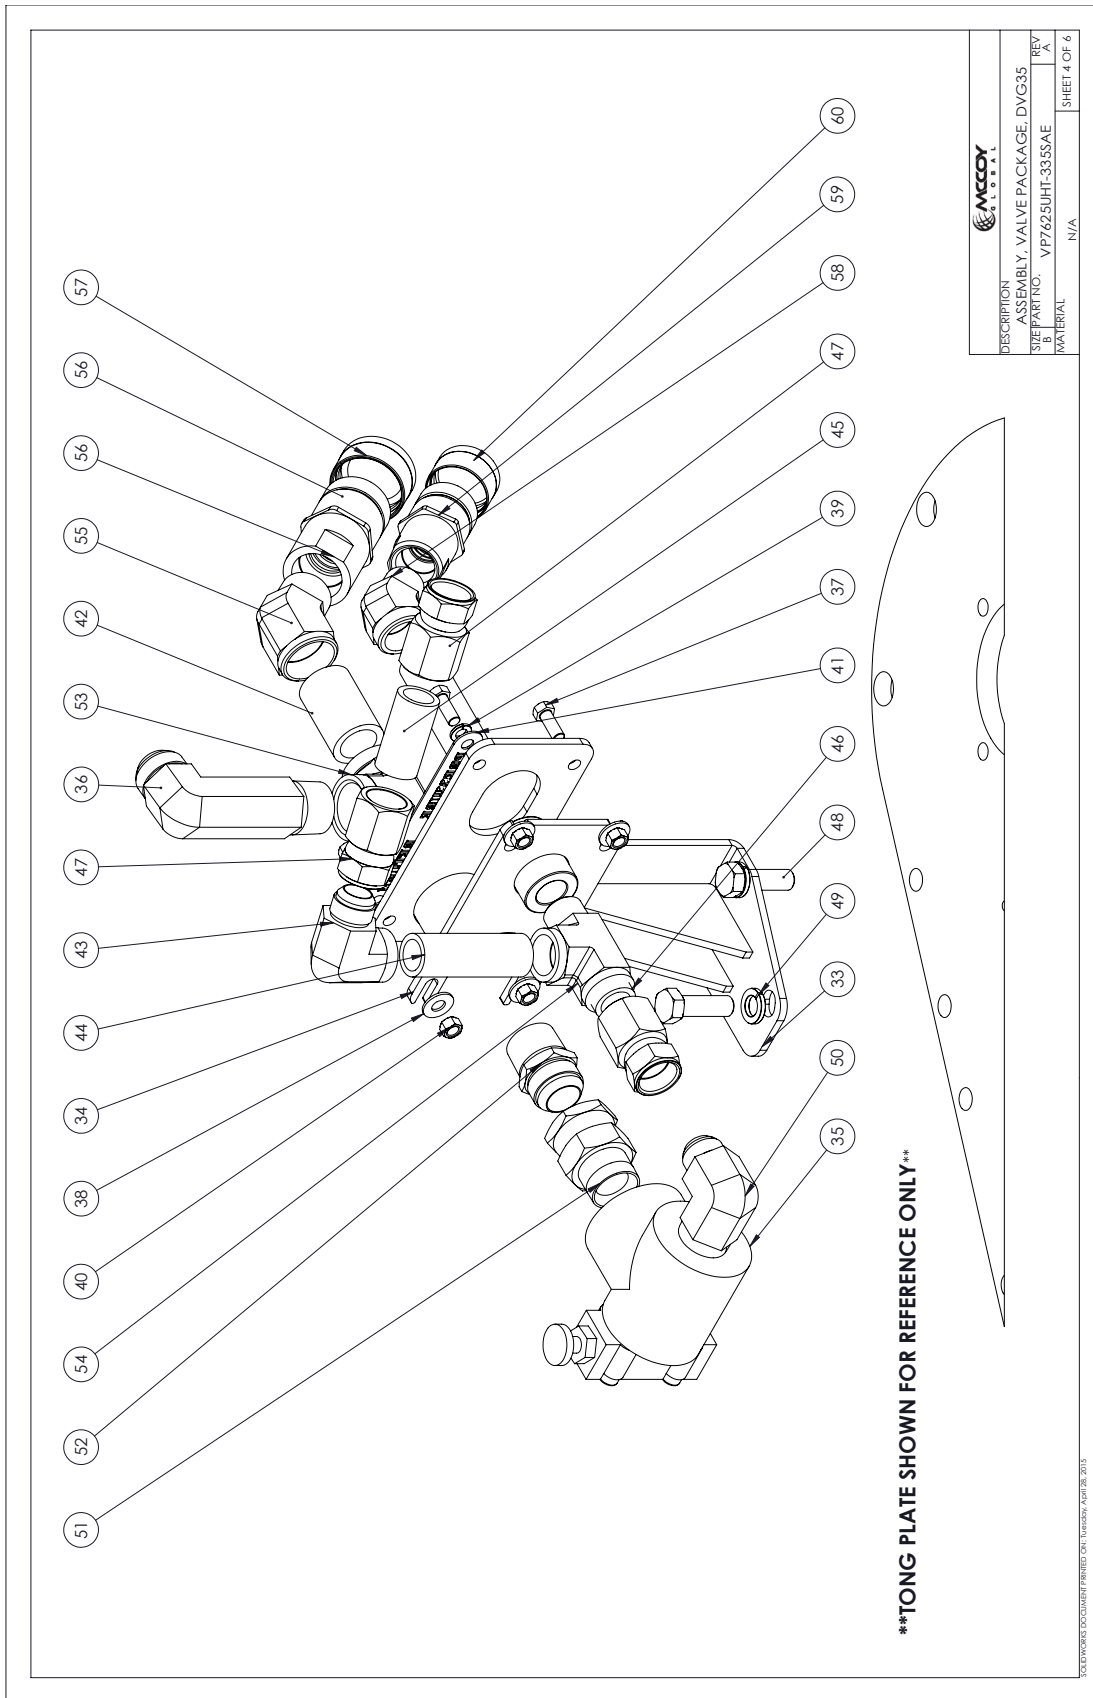


**Illustration 7.21: VP7625UHT-335SAE ASSEMBLY, VALVE PACKAGE, DVG35**

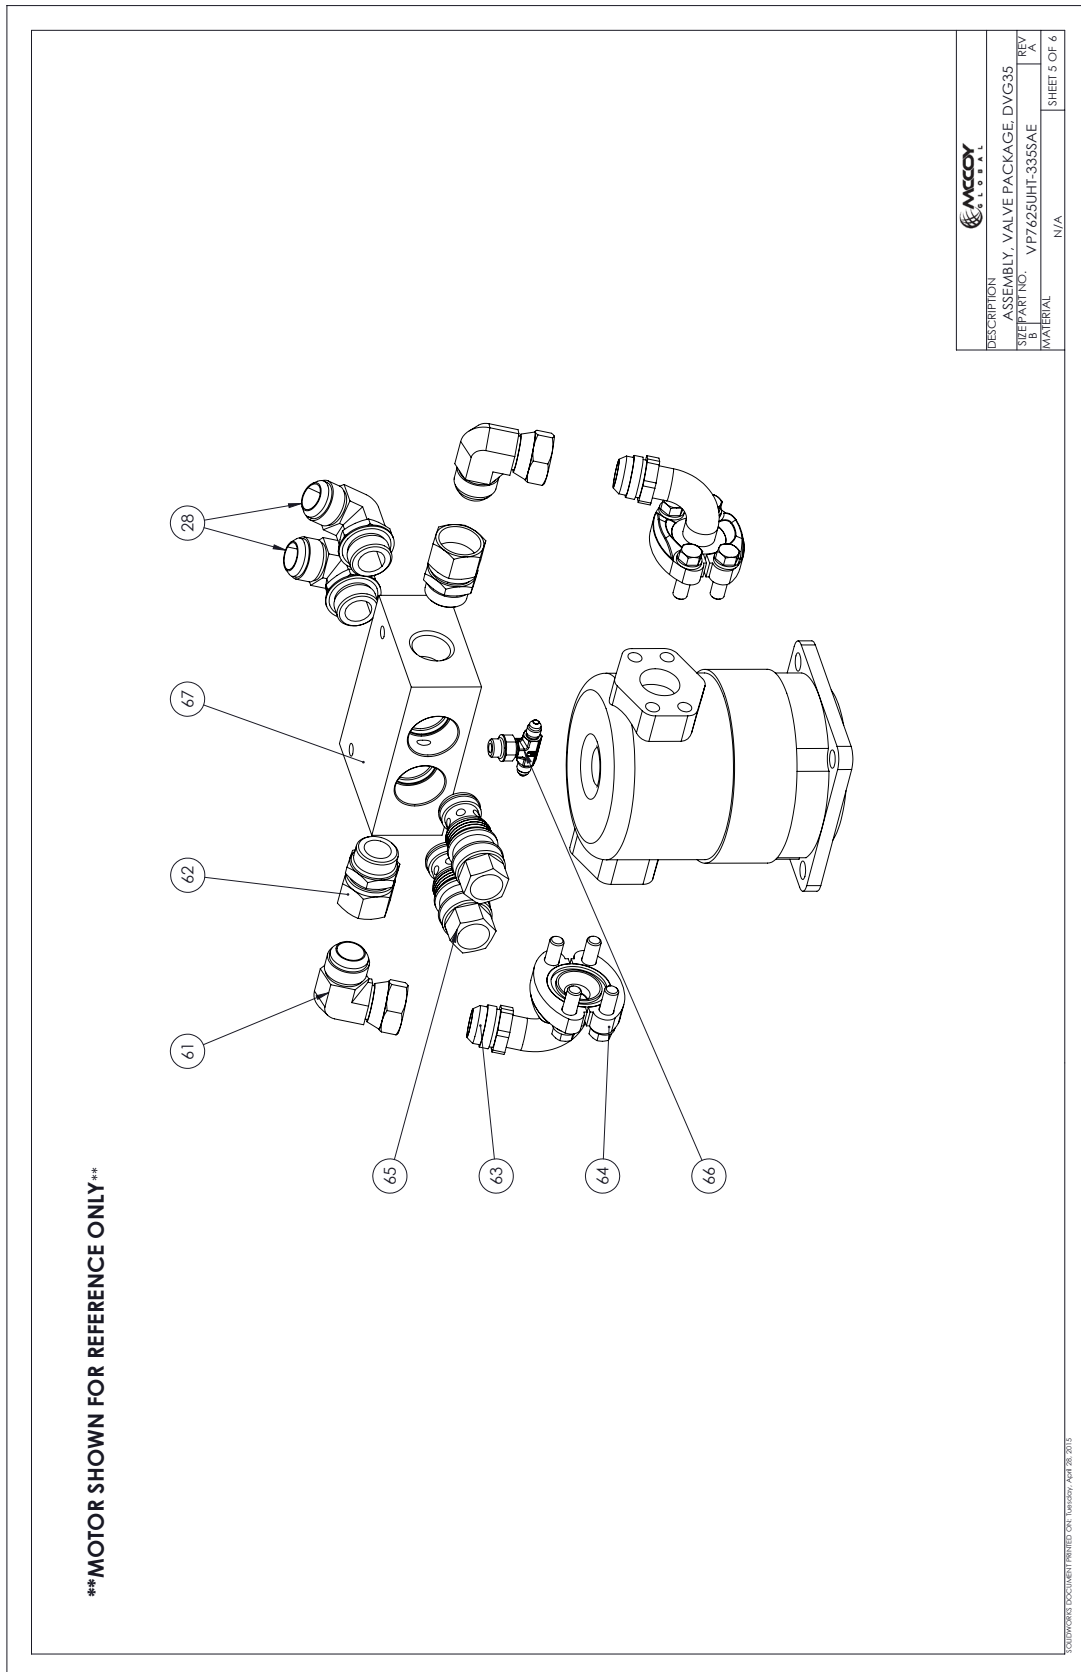

**Illustration 7.21: VP7625UHT-335SAE ASSEMBLY, VALVE PACKAGE, DVG35**



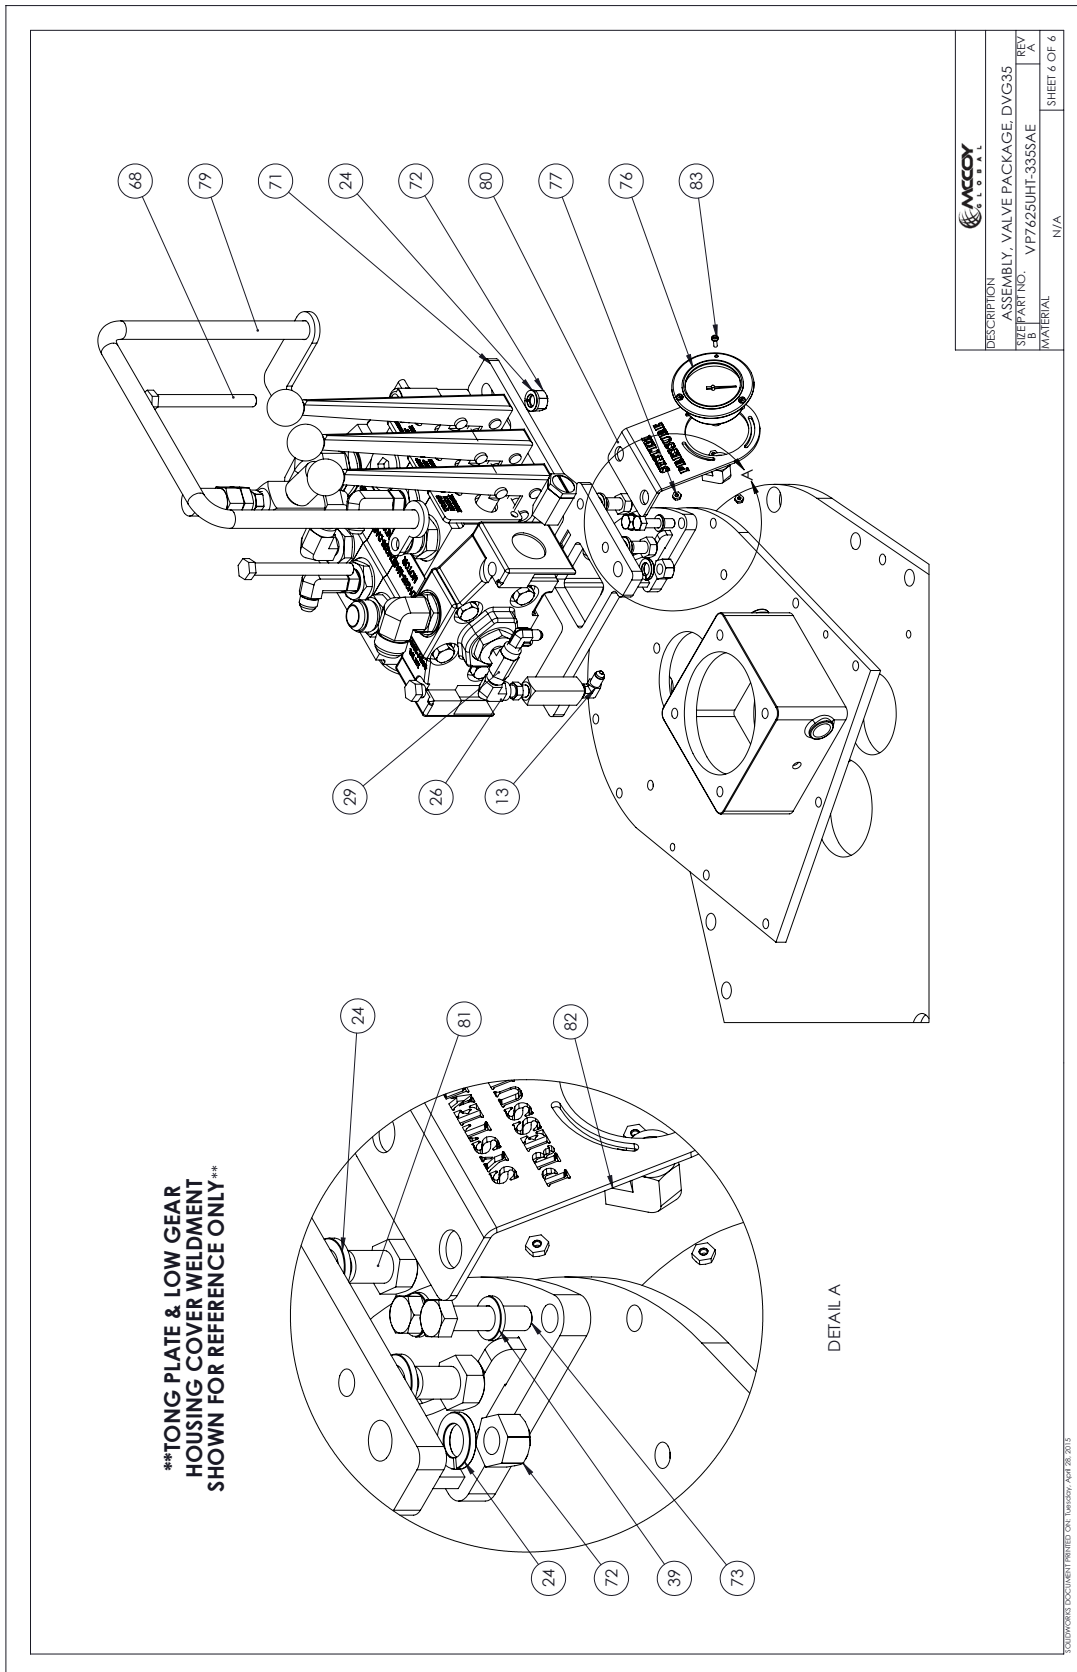

**Illustration 7.22: VP7625UHT-335SAE ASSEMBLY, VALVE PACKAGE, DVG35**



**This page intentionally  
left blank**



## SECTION 8: TORQUE/TURNS MANAGEMENT

---



**This page intentionally  
left blank**

**8.0 BASIC TORQUE MEASUREMENT**

Basic torque measurements are performed using a simple hydraulic measurement system. A hydraulic load cell connects to a calibrated torque gauge through a reinforced flexible hydraulic hose. The torque gauge is factory-calibrated to display accurate torque measurements for a tong or tong and backup assembly with a particular arm length. The arm length is a measurement from the centre of the pipe or casing to the centre of the force being applied to the load cell.

Two load cell options are available. A tension load cell is typically used with a suspended stand-alone tong. This application requires that the load cell be attached to the rear of the tong as part of the restraint line that opposes the force generated when the tong makes up or breaks out a joint. A compression load cell is used in a tong and backup assembly, and is typically located on the rear of the backup between the backup and a stationary frame. The load cell must be located in the centre of the compression force vector generated between the backup and the frame.

Hydraulic force generated by a load cell is transmitted to the torque gauge via a reinforced flexible hydraulic line. The hydraulic force is displayed as torque in units of Ft.-Lbs. The torque gauge has a red “peak torque” indicator that tracks with the torque gauge needle to the point of highest torque, and remains at the point of highest torque until manually reset. Note that every model of tong and tong and backup assembly has a unique arm length, and the torque gauge must be calibrated for that arm length. Torque gauges that are not calibrated for the arm length of the tool in service will not display correct torque. To ensure correct torque measurement, ensure the arm length or “handle” as displayed on the torque gauge matches the arm length of the tool in service as listed on the specifications page of the technical manual.

Torque gauges and load cells are supplied as a matched calibrated pair. Substituting one or the other will render the calibration inaccurate even if the actual model numbers appear to be identical. The serial numbers of matching load cell and torque gauges are clearly identified on the calibration certificate. Should the accuracy of torque measurements come into question, the need to replace either component arises, the pair should be returned to the factory for recalibration before placing into service.

## ⚠ CAUTION

**TORQUE GAUGES AND LOAD CELLS ARE FACTORY-SUPPLIED AS MATCHED CALIBRATED PAIRS. IF REPLACING EITHER COMPONENT THE LOAD CELL AND TORQUE GAUGE MUST BE RETURNED TO THE FACTORY FOR RE-CALIBRATION BEFORE PLACED INTO SERVICE.**

The table below lists the individual components of the torque measurement system. For accurate torque measurement, use only the parts supplied/listed below.

Item	Part Number
Encoder	60-0068(100)
Encoder Mount	55142
Load Cell	SM30-32-C

## NOTICE

**THE TORQUE GAUGE USED IS FULLY DEPENDANT UPON THE ARM LENGTH AND TORQUE RANGE OF THE EQUIPMENT IN USE. THE PART NUMBERS LISTED IN THE FOLLOWING TABLE ARE CORRECT FOR ACCURATELY MEASURING TORQUE USING THE EQUIPMENT FOR WHICH THIS MANUAL IS SUPPLIED.**

## NOTICE

**LOAD CELLS ARE NOT USER SERVICEABLE. DAMAGED TORQUE MEASUREMENT COMPONENTS MUST BE RETURNED TO THE FACTORY FOR REPAIR AND RE-CALIBRATION.**

## 8.1 TROUBLESHOOTING

Under normal operating conditions, and with proper maintenance, the torque gauge and load cell system are designed to give lasting trouble-free performance. Faulty indication on the gauge will very often define a fault within the gauge.

**NOTICE**

**IF TROUBLESHOOTING REVEALS THAT THERE IS INSUFFICIENT FLUID IN THE SYSTEM, BEFORE RECHARGING, CHECK THAT ALL SYSTEM COMPONENTS ARE FREE FROM DAMAGE. THIS WILL ENSURE THAT FLUID LOSS WILL NOT CONTINUE AFTER RELOADING**

<b>1 SYMPTOM: NO INDICATION ON TORQUE GAUGE</b>	
<b>POSSIBLE PROBLEM</b>	<b>SOLUTION(S)</b>
Hydraulic hose is obstructed	Check hydraulic hose for kinks
	Replace hydraulic hose
Loss of hydraulic fluid	Recharge hydraulic fluid (see Section 8.2). NOTE: Ensure any breaches in the hydraulic system between the load cell and torque gauge are repaired to prevent further fluid loss.
Internal mechanism of torque gauge is damaged	Replace gauge
<b>2 SYMPTOM: GAUGE INDICATION UNEXPECTEDLY HIGH</b>	
<b>POSSIBLE PROBLEM</b>	<b>SOLUTION(S)</b>
Excessive hydraulic fluid	Completely drain hydraulic fluid from torque gauge/load cell system. Recharge following the procedure in Section 8.2
Internal mechanism of gauge is damaged	Replace gauge
Incorrect torque gauge in use (not part of the original torque gauge/load cell pair)	Replace gauge with gauge properly calibrated for the load cell in service
<b>3 SYMPTOM: GAUGE INDICATION UNEXPECTEDLY LOW</b>	
<b>POSSIBLE PROBLEM</b>	<b>SOLUTION(S)</b>
Insufficient hydraulic fluid	Recharge hydraulic fluid (see Section 8.2). NOTE: Ensure any breaches in the hydraulic system between the load cell and torque gauge are repaired to prevent further fluid loss
	Check hydraulic hose for kinks
Obstruction in hydraulic hose	Replace hydraulic hose
Snub line not at right-angle to tong handle	Check angle of snub line and correct if necessary
Internal mechanism of gauge is damaged	Replace gauge
Incorrect torque gauge in use (not part of the original torque gauge/load cell pair)	Replace gauge with gauge properly calibrated for the load cell in service
<b>4 SYMPTOM: GAUGE INDICATION IS ERRATIC OR SLUGGISH</b>	
<b>POSSIBLE PROBLEM</b>	<b>SOLUTION(S)</b>
Insufficient hydraulic fluid in torque measurement section	Recharge hydraulic fluid (see Section 8.2). NOTE: Ensure any breaches in the hydraulic system between the load cell and torque gauge are repaired to prevent further fluid loss
Loss of damping fluid in torque gauge	Top up or refill damping fluid (NOTE: Ensure leakage points in gauge are identified and repaired to prevent further loss of damping fluid)
Air bubbles in hydraulic fluid in the torque measurement system	Bleed air from load cell and torque gauge and top up fluid (if necessary) as per Section 8.2
Internal mechanism of gauge is damaged	Replace gauge

## 8.2 PERIODIC INSPECTION AND MAINTENANCE

**NOTICE**

**ONLY QUALIFIED, DESIGNATED PERSONNEL ARE PERMITTED TO PERFORM MAINTENANCE ON THE TORQUE MEASUREMENT SYSTEM.**

**8.2.1 Inspection**

The torque measurement system supplied with the equipment is designed and built to provide years of trouble-free service with minimum maintenance. Periodic inspections of the load cell, hydraulic lines and fittings are recommended in order to keep the system in top operating condition. A thorough inspection should be made at each rig-up.

**8.2.2 Fluid Recharge**

Recharge hydraulic system with W15/16 fluid through the check valve on the torque indicating gauge. Recharging must only be performed when there is no load on the load cell.

- a. Place the torque indicating gauge higher than the load cell. Remove the brass 1/4" cap from the fitting on the check valve on the top of the gauge.
- b. Connect the hand pump to the check valve fitting.
- c. Elevate the load cell so it is higher than the torque gauge and hand pump.

**⚠ CAUTION**

**UNCONTAINED SPILLAGE OF THE HYDRAULIC FLUID IN THIS SYSTEM MAY CONTRAVENE ESTABLISHED LOCAL ENVIRONMENTAL REGULATIONS. MCCOY GLOBAL HIGHLY RECOMMENDS PLACING THE LOAD CELL IN A CONTAINMENT BASIN BEFORE PROCEEDING WITH THE BLEEDING & REFILLING PROCESS.**

- d. Fill hand pump bowl with W15/16 hydraulic fluid.

**NOTICE**

**MAINTAIN GREATER-THAN-HALF FULL FLUID LEVEL IN THE HAND PUMP BOWL TO AVOID PUMPING AIR INTO THE SYSTEM. DO NOT ALLOW THE LEVEL TO FALL BELOW ONE-HALF FULL**

- e. Remove the vent plug screw and Stat-O-Seal to allow trapped air to escape.
- f. Pump fluid into the system until no more air is seen escaping from the vent port.
- g. Replace the vent plug screw and Stat-O-Seal and tighten securely.
- h. Remove load cell from containment vessel and wipe clean. Reclaim the hydraulic fluid (if it is clean) or dispose of all waste materials according to governmental or established environmental protection regulations.
- i. Disconnect the hand pump from the torque gauge.
- j. Replace the brass cap on the torque gauge check valve fitting.

**8.2.3 Repair And Calibration**

Return the load cell and indicator gauge to the authorized repair facility for repairs and calibration.



# McCoy Torque Turn System – MTT™

FOR POWER TONGS

## Leading-Edge Solutions for Optimal Performance

McCoy Global is transforming the industry with innovative technology solutions that enable our customers' success, delivering optimal operational efficiency and performance, while keeping people, assets and the environment safe

## INNOVATION

Innovative system and software from a technology leader

## EXPERTISE

20+ years of experience with thousands of torque monitoring systems in the field supporting customers' needs

## VERSATILITY

Adaptable for any tong, torque sub, bucking unit or calibration bar applications

## Applications

- » Monitor, control and analyze tubular connections make-up to ensure that all tubing and casing connections conform to manufacturer specifications
- » MTT system monitors torque, turns and rotation speed of any power tong in real-time


The system uses MTT software that interacts with external control hardware and allows user to easily specify make-up parameters, control the process and evaluate quality of each connection make-up. Standard software features provide torque/turn graphs, generate customized reports and offer the ability to review results from previous make-ups for further analysis and information.

## MTT System Components

MTT SYSTEM HARDWARE COMES STANDARD WITH:

1. **Display+ Ethernet Cable** (for Display options and specifications see page 3)
2. **MTT Controller Unit**
3. **Mini Junction Box with CT Cable**
4. **Dump Valve Assembly with Dump Valve Cable**
5. **Encoder with Encoder Cable**
6. **Cables included are: encoder, dump valve, network and power cables**
7. **Sensors: Namur proximity sensors** (see pages 5 and 6)

- » Load Cell must be selected separately, since various bucking unit models require a different type of load cell
- » 30-foot cable is included with each load cell ordered
- » McCoy offers a large selection of load cell options to choose from (see pages 5 and 6)

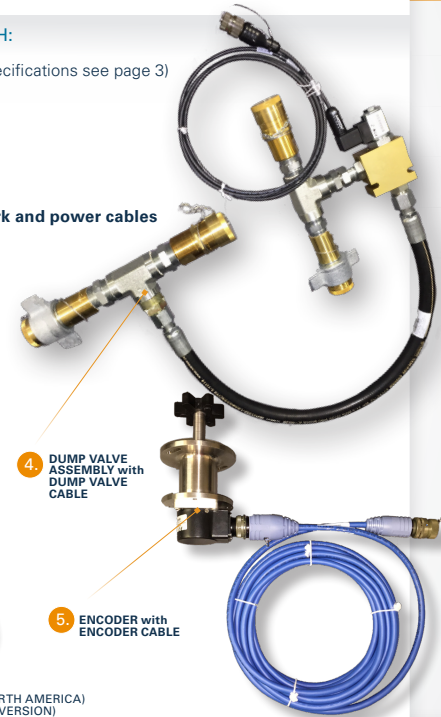

1. PANASONIC TOUGHBOOK with WIRELESS CONNECTION ETHERNET CABLE



2. TORQUE TURNS CONTROLLER

3. MINI JUNCTION BOX with CT CABLE



6. POWER CABLES  
CBL7123-F01A0101-005 (NORTH AMERICA)  
CBL7123-F01A0301-005 (CE VERSION)

4. DUMP VALVE ASSEMBLY with DUMP VALVE CABLE

5. ENCODER with ENCODER CABLE

Contact a McCoy sales representative today for a full presentation

[mccoyglobal.com/MTT](http://mccoyglobal.com/MTT) | [sales@mccoyglobal.com](mailto:sales@mccoyglobal.com) | 1



8.3 MCCOY TORQUE TURN SYSTEM - MTT (CONTINUED)



# Features and Benefits

MTT™ – McCoy TORQUE TURN SYSTEM FOR POWER TONGS



### VTR COMPATIBLE

MTT software can support Virtual Thread Rep™ technology

### TECHNICAL SUPPORT


24/7 Technical support is available as well as on site support

### SOFTWARE UPDATES

Free MTT Software updates are available on the VTR portal or by contacting McCoy Service Department

### Hardware Features and Benefits

- » Non-hazardous location, safe area system is the standard option
- » We also offer ATEX Zone 1 certified system with explosion-proof design that makes the system compliant for hazardous areas in all global regions, both on land and offshore
- » Controller and PCs are separate to overcome the short lifecycle of PCs allowing the System to be in service much longer
- » Controller with individual connections for easy direct sensor connections
- » Improvement in Architecture: Flexible sensor configuration, wired or wireless ethernet communication, control electronics separate from computer housing
- » Multiple sensor inputs allow for torque averaging/make/break operation from the same controller. No separate junction box needed.
- » Sensor/Cable Open Fault Detection, Output Short Protection

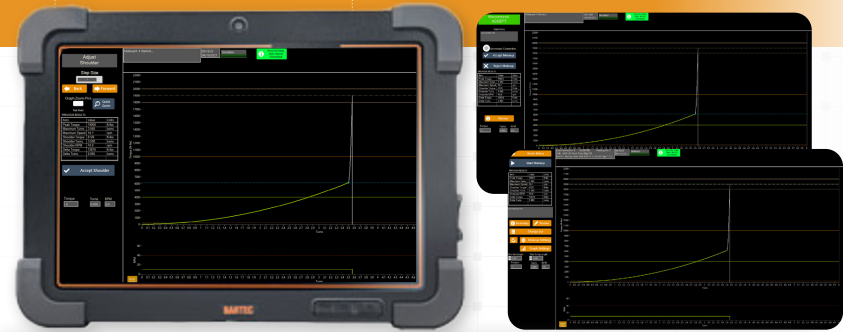

### Software Features and Benefits

#### Standard

- » Easy graphical report creation and "one step" PDF reporting system with customizable logo
- » Automatic descriptive comments with user override
- » Multiple joints review, graphic overlay
- » Graph zooms to maximize size to computer screen
- » Connection library – User customizable
- » Automatic "Start Recording" and "Dump Valve Release"
- » Adjustable Color Scheme
- » Shoulder slope calculation
- » User Mode – Administration and User Level 1 & 2 Access

### Optional

#### Specialized

- » Customizable components available on request
- » Accept or reject connection on delta turn/shoulder slope
- » RPM Graph can be added to make-up screen
- » Control speed during make-up
- » Custom zoom feature
- » Pressure test system
- » Multiple language capabilities

Contact a McCoy sales representative today for a full presentation

[mccoyglobal.com/MTT](http://mccoyglobal.com/MTT) | [sales@mccoyglobal.com](mailto:sales@mccoyglobal.com) | 2



## Virtual Thread Rep Technology Features

MTT™ – McCoy TORQUE TURN SYSTEM FOR POWER TONGS

### VTR STANDARD

is included with every MTT purchase  
(free of charge)

- » Unlimited Cloud Based Data Storage of all Job Data
- » Live Access to 'active' Jobs
- » Access to all historical Jobs from any Location – online
- » Access to Calibration info
- » Fleet (Asset) Management
- » Role Base Users access
- » Online Connection Library
- » MTT System Monitoring of Assets (on/off)

STANDARD **VIRTUAL**  
THREAD-REP

### VTR PREMIUM

Is a Subscription to software that enables MTT system  
to perform additional functions, like:

- » Remote control of LIVE job, including, but not limited to job editing, data interaction, hardware settings, communications to operator etc.
- » Online Ability to setup jobs
- » Ability to share LIVE Jobs and Completed Jobs to Other Organizations
- » Key Metrics (Job stats for machine / fleet / operator) – derived from data
- » Autonomous Evaluation of Graphs (Coming Soon)

PREMIUM **VIRTUAL**  
THREAD-REP

## 8.3 MCCOY TORQUE TURN SYSTEM - MTT (CONTINUED)



# Controller and System Specifications

MTT™ – McCoy TORQUE TURN SYSTEM FOR POWER TONGS

### Controller Specifications

- » Sampling Rate: Base Rate 500 Samples/Second
- » Torque Accuracy: Typically <0.5% Full Scale (not including Load Cell)
- » Turns Accuracy: +/- 1 pulse of turns counter
- » RPM Accuracy: Better than 0.25 RPM Error
- » Pressure Accuracy: Typically <1%
- » Response Time: Electronic Dump Valve Output Control:< 0.5 ms
- » Hydraulic dump valve: Typical 10 to 30 ms
- » Approvals: iec 61010 – safety evaluated ce/lvd/emc/rohs/fcc.emc
- » Power requirement: 100-240 V~, 50-60 Hz
- » Power consumption: 1.4a max @ 100V~, 0.87a max @240V~
- » Fcc – emc
- » Rated temperature: -30°C +50°C, -22°F +122°F
- » Altitude: 3048m
- » Maximum humidity: 95% - non-condensing
- » Protection: Nema 4, ip65
- » Communication options: Wi-Fi 802.11 b/g or Bluetooth LE, ethernet 10/100



### System Specifications

- » Area Rating: General purpose
- » Power Requirement: 100-240 V~, 0.87A MAX @240V~
- » Rated Temperature: -30-50°C, -22-122°F
- » Altitude: 3048M
- » Maximum Humidity: 95% – non-condensing
- » Protection: NEMA 4, IP65
- » Controller Size: (366 mm x 311 mm x 125 mm), (14.4" x 12.2" x 4.9")
- » Controller Weight: 7.1 kg, 15.8 lbs
- » Communication Options: WIFI 802.11 B/G, ethernet 10/100

### APPROVALS:

- » IEC 61010 – safety evaluated
- » FCC – EMC
- » CE 0 LVD/EMC/RoHS



Contact a McCoy sales representative today for a full presentation

[mccoyglobal.com/MTT](http://mccoyglobal.com/MTT) | [sales@mccoyglobal.com](mailto:sales@mccoyglobal.com) | 4

## 8.3 MCCOY TORQUE TURN SYSTEM - MTT (CONTINUED)



# Display Options and Specifications

MTT™ – McCoy TORQUE TURN SYSTEM FOR POWER TONGS

### TOUGHBOOK

Innovative system and software specifically designed for use with hydraulic power tongs



- » Screen Size: 10.1"
- » Intel Core i5 processor
- » RAM: 8GB
- » Hard Drive: 256GB
- » Native Resolution: 1920 x 1200
- » Monitor Features: Glove touch
- » Webcam Capability
- » Resolution (MP): 8 Megapixel (rear)
- » Resolution: 1080p (front)
- » Sunlight readable, Anti-glare, Anti-reflective
- » WIFI
- » Windows 10
- » 4 USB ports
- » Run Time, up to 8 hours on batteries with power supply built into the system
- » Battery Packs are designed to be hot swapped so you have no downtime even when not docked

### TABLET

ATEX certified when used with a tong and is non-ATEX when used with TTS sub, because of the RF modem (non-ATEX) that needs to be plugged in



- » Highly flexible industrial tablet PC with powerful Quad-Core processor for rough and hazardous environments
- » Ergonomic positioned high quality 1D/2D imager SE4500 from Zebra and RFID reader HF/NFC
- » Brilliant, high-resolution, bonded 10.1" touch LED display, sunlight readable, rain useable
- » High quality 5 MP camera
- » Integrated Bluetooth 4.1 LE, WLAN and optional LTE module
- » Unique expansion port for customer specific applications
- » Great number of accessories supporting productivity and operator safety
- » Industry Tablet PC 10.1" for Zone 0 or Zone 1 / Div. 1
- » Comes with a docking station and 2 spare batteries
- » -20°C +50°C (-4°F +122°F) degree temperature range
- » 1 USB port
- » 1 Micro SD card that can be used as a backup
- » Audio and microphone built-in
- » Windows 10
- » Screen Resolution 1920 x1200 with brightness of 700 nits
- » Run Time, up to 8 hours on batteries with power supply built into the system
- » Battery Packs are designed to be hot swapped so you have no downtime even when not docked

### SmartEX ZONE 1 ATEX COMPUTER

ATEX certified when used with both, TTS sub and a tong, because it does not require an external modem



- » Industrial designed 12-inch LCD display
- » Projected Capacitive Technology (PCT)
- » Multi Touch, Glove Friendly
- » Integrated RF Modem for direct communication to the TTS
- » External USB type 2.0 port via ROTA DR4 connector
- » Windows 10
- » Operating Temp: -40°C to +60°C (-40°F to +140°F)
- » Storage Temp: -40°C to +80°C (-40°F to +176°F)
- » Screen Resolution: XGA 1024x768
- » Weight < 33 lbs
- » Ingress Protection: IP66 / NEMA4X
- » ATEX Rating:
  - » II (2) GD Ex e mb ib [ib] IIC T4 Gb
  - » Ex tb IIIC T135°C Dc IP66
  - » Class I, Zone 1, AEx e ib mb [ib] IIC T4 Gb
  - » Class II, Zone 21 Ex tb [ibD]IIIC T135°C Db

Contact a McCoy sales representative today for a full presentation

[mccoyglobal.com/MTT](http://mccoyglobal.com/MTT) | [sales@mccoyglobal.com](mailto:sales@mccoyglobal.com) | 5



# Tong Mounted Tablet Option

MTT™ – McCoy TORQUE TURN SYSTEM FOR POWER TONGS

## Functions

Enables the Operator to perform two functions:

- » Operate the tong
- » Monitor torque and turns during connection make-up



## Display Mounting

- » Tablet would slide in or out easily for battery changes
- » Top would be hinged or fully removable
- » If there is a closable top us thumb screws to release the top these would need to be captive
- » Off the shelf articulating mount in either permanent mount with screws, a clamp mount or a magnetic mount
- » Custom tablet holder may or may not have a closable top

8.3 MCCOY TORQUE TURN SYSTEM - MTT (CONTINUED)




# Load Cell Options

MTT™ – McCoy TORQUE TURN SYSTEM FOR POWER TONGS

Part Number	Type	Form Factor	Description
MTT-OPT-470	Electronic	Clevis Pin	ASSEMBLY, 6k
MTT-OPT-471	Electronic	Clevis Pin	ASSEMBLY, 10k
MTT-OPT-472	Electronic	Load Cell	ASSEMBLY, 25k, PANCAKE
MTT-OPT-473	Electronic	Load Pin	ASSEMBLY, 25k, Size 50
MTT-OPT-474	Electronic	Load Cell	ASSEMBLY, 30k, BUTTON COMPRESSION
MTT-OPT-475	Electronic	Load Pin	ASSEMBLY, 50k
MTT-OPT-476	Electronic	Load Cell	ASSEMBLY, 20k, PANCAKE (RoHS)
MTT-OPT-477	Electronic	Load Cell	ASSEMBLY, 30k, PANCAKE (RoHS)
MTT-OPT-478	Electronic	Load Cell	ASSEMBLY, 50k, PANCAKE (RoHS)
MTT-OPT-479	Electronic	Clevis Pin	ASSEMBLY, Make/Break, 6k
MTT-OPT-480	Electronic	Clevis Pin	ASSEMBLY, Make/Break, 10k
MTT-OPT-481	Electronic	Load Pin	ASSEMBLY, Make/Break, 25k, size 50
MTT-OPT-482	Electronic	Load Pin	ASSEMBLY, Make/Break, 25k
MTT-OPT-483	Electronic	Load Pin	ASSEMBLY, Make/Break, 50k
MTT-OPT-484	Electronic	Load Cell	ASSEMBLY, Make/Break, 30k, BUTTON COMPRESSION
MTT-OPT-485	Electronic	Load Cell	ASSEMBLY, Make/Break, 30k, PANCAKE (RoHS)
MTT-OPT-486	Electronic	Load Cell	ASSEMBLY, Make/Break, PANCAKE (RoHS)
MTT-OPT-487	Electronic	Load Pin	ASSEMBLY, Averaging, 50k



- ELECTRONIC LOAD CELL OPTIONS**  
10 FT Cable (INCLUDED IN OPTION CODE)
- MTT-OPT-410 (ASSY, MTT, LOAD CELL, 30K, TENSION)
  - MTT-OPT-411 (ASSY, MTT, LOAD CELL, 10K, TENSION)
  - MTT-OPT-412 (ASSY, MTT, LOAD CELL, 20K, TENSION)
  - MTT-OPT-440 (ASSY, MTT, LOAD CELL, 10K, PANCAKE)
  - MTT-OPT-442 (ASSY, MTT, LOAD CELL, 15K, PANCAKE)
  - MTT-OPT-441 (ASSY, MTT, LOAD CELL, 20K, PANCAKE)
  - MTT-OPT-443 (ASSY, MTT, LOAD CELL, 35K, PANCAKE)

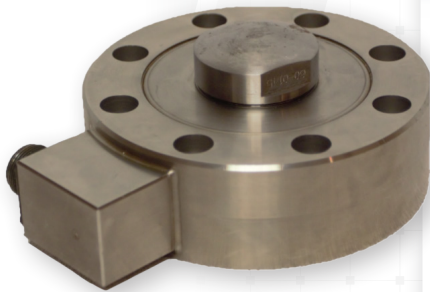

**Notes:**

- » Load Cell is not included in the system
- » A 30-foot cable is included with each load cell

**Namur Proximity Sensors**

- » Namur proximity sensors must be ATEX Zone 1 rated. The part numbers below are pre-approved for use with the ATEX MTT system.

Contact McCoy Global if other sensors are required.

- MTT-OPT-370 ASSEMBLY, NAMUR 8MM, 3M Cable
- MTT-OPT-402 ASSEMBLY, NAMUR 18MM, 3M Cable

**SERVICES AVAILABLE**

- 24/7 phone and online Technical Support
- Virtual Support Service
- On-Rig Support Service
- Calibration Services
- 12 Month Guaranteed Warranty

Contact a McCoy sales representative today for a full presentation



8.3 MCCOY TORQUE TURN SYSTEM - MTT (CONTINUED)




# Load Cell Options

MTT™ – McCoy TORQUE TURN SYSTEM FOR POWER TONGS

Part Number	Type	Form Factor	Description
MTT-OPT-407	Electronic	Load Cell	ASSEMBLY, 10k compression
MTT-OPT-401	Electronic	Load Cell	ASSEMBLY, 20k compression
MTT-OPT-402	Electronic	Load Cell	ASSEMBLY, 35k compression
MTT-OPT-403	Electronic	Load Cell	ASSEMBLY, 15k compression
MTT-OPT-406	Electronic	Tension Link	ASSEMBLY, 30k tension
MTT-OPT-408	Electronic	Tension Link	ASSEMBLY, 10k tension
MTT-OPT-409	Electronic	Tension Link	ASSEMBLY, 20k tension
MTT-OPT-490	Hydraulic	Tension Link	ASSEMBLY, tension (4.08 sq in.)- 3k psi
MTT-OPT-497	Hydraulic	Load Cell	ASSEMBLY, compression (6.44 sq in.)- 3k psi
MTT-OPT-491	Hydraulic	Tension Link	ASSEMBLY, tension (6.53 sq in.)- 3k psi
MTT-OPT-492	Hydraulic	Tension Link	ASSEMBLY, tension (6.53 sq in.)- 3k psi
MTT-OPT-493	Hydraulic	Tension Link	ASSEMBLY, tension (10.8 sq in.)- 3k psi
MTT-OPT-494	Hydraulic	Load Cell	ASSEMBLY, compression (12 sq in.)- 3k psi
MTT-OPT-495	Hydraulic	Load Cell	ASSEMBLY, compression (16.1 sq in.)- 3k psi
MTT-OPT-496	Hydraulic	Load Cell	ASSEMBLY, compression (25.00 sq in.)- 3k psi
MTT-OPT-413	Hydraulic	Tension Link	ASSEMBLY, tension (4.08 sq in.)- 5k psi
MTT-OPT-414	Hydraulic	Tension Link	ASSEMBLY, tension (6.53 sq in.)- 5k psi
MTT-OPT-415	Hydraulic	Tension Link	ASSEMBLY, tension (10.8 sq in.)- 5k psi

### HYDRAULIC LOAD CELL OPTIONS 10 FT Cable (INCLUDED IN OPTION CODE)

- MTT-OPT-490 (ASSY, MTT, TENSION (4.08 SQ IN.)- 3k PSI)
- MTT-OPT-497 (ASSY, MTT, COMPRESSION (6.44 SQ IN.)- 3k PSI)
- MTT-OPT-491 (ASSY, MTT, TENSION (6.53 SQ IN.)- 3k PSI)
- MTT-OPT-492 (ASSY, MTT, COMPRESSION (8.00 SQ IN.)- 3k PSI)
- MTT-OPT-493 (ASSY, MTT, TENSION (10.8 SQ IN.)- 3k PSI)
- MTT-OPT-494 (ASSY, MTT, COMPRESSION (12 SQ IN.)- 3k PSI)
- MTT-OPT-495 (ASSY, MTT, COMPRESSION (16.1 SQ IN.)- 3k PSI)
- MTT-OPT-496 (ASSY, MTT, COMPRESSION (25.00 SQ IN.)- 3k PSI)
- MTT-OPT-413 (ASSY, MTT, TENSION (4.08 SQ IN.)- 5k PSI)
- MTT-OPT-414 (ASSY, MTT, TENSION (6.53 SQ IN.)- 5k PSI)
- MTT-OPT-415 (ASSY, MTT, TENSION (10.8 SQ IN.)- 5k PSI)

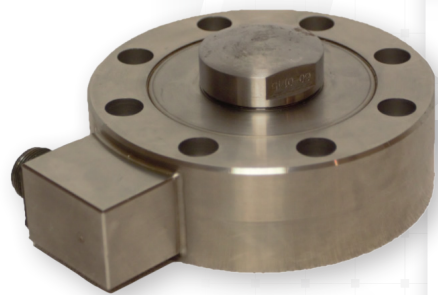

#### Notes:

- » Load Cell is not included in the system
- » A 30-foot cable is included with each load cell

#### Namur Proximity Sensors

- » Namur proximity sensors must be ATEX Zone 1 rated. The part numbers below are pre-approved for use with the ATEX MTT system.

Contact McCoy Global if other sensors are required.  
 MTT-OPT-370 ASSEMBLY, NAMUR 8MM, 3M Cable  
 MTT-OPT-402 ASSEMBLY, NAMUR 18MM, 3M Cable

#### SERVICES AVAILABLE

- 24/7 phone and online Technical Support
- Virtual Support Service
- On-Rig Support Service
- Calibration Services
- 12 Month Guaranteed Warranty

Contact a McCoy sales representative today for a full presentation



**This page intentionally  
left blank**