


# CLINCHER<sup>®</sup>

TECHNICAL MANUAL

## RP6016-01

16" (40.6cm) 50K ft-lbs  
Continuously Rotating Bucking Unit

- Specifications
- Operation
- Maintenance
- Assemblies

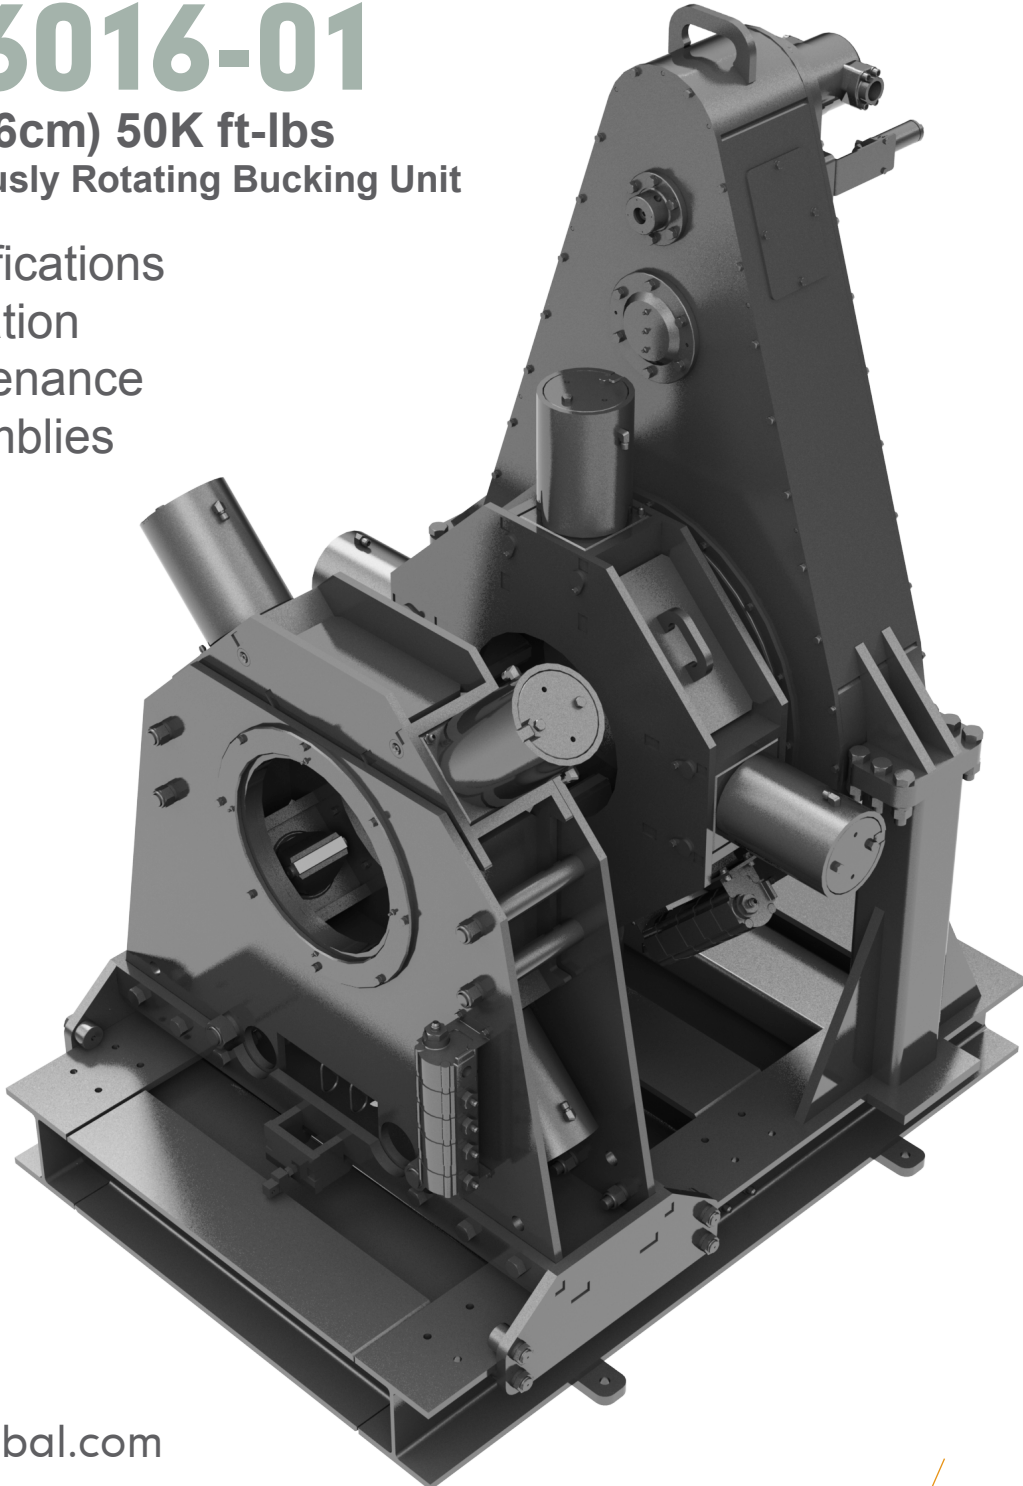

[mccoysglobal.com](http://mccoysglobal.com)

©2010 McCoy Corporation. All rights reserved.  
Published by McCoy Corporation, Technical Publications Department  
4225 Hwy 90 East • Broussard, LA USA 70518

**MCCOY**  
MOVING GLOBAL ENERGY FORWARD

*© Copyright 2010-2012 McCoy Corporation, including its wholly owned subsidiaries, ("McCoy"), all rights reserved. This document is the property of McCoy and is supplied as reference information for users of our products. This document and the contents within are considered confidential information, not to be disclosed, copied, transmitted, transcribed in any form, or stored on any type of data storage media without the express written consent of McCoy.*

*McCoy has made every effort to ensure the information contained in this document is accurate and current. This manual is intended to provide equipment operation and safety instructions for your equipment. However, McCoy does not warrant or guarantee that the information is either complete or accurate in every respect and the user of the manual should consult with its McCoy sales representative for any clarifications and updates.*

*The user of the manual shall protect, indemnify, and hold harmless McCoy and its directors, officers, employees, and agents from and against all liability for personal injury, death, or property damage resulting directly or indirectly from the use of the information contained in this manual.*

*Observance of all descriptions, information and instructions set out in this manual is the full responsibility of the user. This manual is intended for guidance and informational purposes and must be used in association with adequate training and on-the-job supervision to provide safe and effective equipment use.*

*It is the responsibility of the user to conform to all regulations and requirements issued by an authority or agency which may affect the operation, safety or equipment integrity, that may overrule the content of this documentation.*

*The user will acknowledge and obey any general legal or other mandatory regulation in force relating to accident prevention, safety, and equipment integrity.*

## Table of Contents

<b>Section I</b> .....	
General Description .....	2
Safety Guidelines .....	2
<b>Section II</b> .....	
Installation .....	2
Start Up .....	2
<b>Section III</b> .....	
Operation .....	2
Make-up .....	2
Break-out .....	2
<b>Section IV</b> .....	
Maintenance .....	3
Daily .....	3
Monthly .....	3
Annually .....	3
<b>Section V</b> .....	
Hydraulic Power Unit .....	3
<b>Section VI</b> .....	
Specifications .....	3
Electric Motor .....	3
Hydraulic Oil .....	3
Chucking Capacity .....	3
Torque Capacity .....	3
Lubrication Specifications .....	4
<b>Section VII</b> .....	
Bucking Unit Hydraulic Schematic .....	5
Control Console Hydraulic Schematic .....	6
Control Console Electric Schematic .....	7
Electric Proportional Schematic .....	8
Power Unit Hydraulic Schematic .....	9
<b>Section VIII</b> .....	
Assembly Drawings .....	11
<b>Section IX</b> .....	
Troubleshooting .....	47

## **SECTION I**

### **GENERAL DESCRIPTION:**

Your **CLINCHER®** Bucking Unit is a rugged, self-contained, continuously rotating unit designed to accurately make-up or break-out the threaded connections on tubular components such as oil and gas well drilling tools, casing, tubing, and similar equipment. The unit will accurately make-up and break-out thread connections without damage to the thread.

### **Recommended Safety Guidelines**

The safety guidelines that follow are recommended by McCoy Drilling & Completions, and are in no way intended to supersede the specific health and safety regulations and guidelines of our client's workplace. Workplace rules and regulations are the responsibility of the client.

#### **A. Work Apparel**

To ensure employee safety, it is recommended that the following PPE (Personal Protective Equipment) be worn when using and working around hydraulic equipment:

##### **1. Eye Protection (safety glasses)**

To avoid risk of eye damage due to:

- fracture/failure of die inserts under load
- fracture/failure of tool under load
- failure of hydraulic hose or component under pressure

##### **2. Ear Protection (ear plugs)**

To prevent hearing damage due to:

- electric motor and hydraulic systems noise
- sudden and loud noises that may occur during the work process

##### **3. Head Protection (hard hat)**

To reduce danger due to:

- overhead cranes and hooks
- fracture/failure of die inserts under load
- fracture/failure of tool under load

##### **4. Hand Protection (leather gloves)**

To avoid danger due to:

- metal slivers on the tool or dies produced during the work process
- chemicals used during the work process
- failure of hydraulic hose or components under pressure

##### **5. Foot Protection (steel-toed boots)**

To prevent injury due to:

- falling or rolling work pieces

## **SECTION II**

### **INSTALLATION:**

1. Inspect unit carefully for shipping damage or missing parts.
2. Position unit on a fairly flat and level floor leaving sufficient clearance on both ends to allow the insertion and removal of the longest tools expected to be serviced.
3. Anchor the unit in place.
4. Clean hydraulic hoses and quick disconnects.
5. Attach all hoses that connect the control console to the Bucking Unit.
6. Fill hydraulic reservoir with recommended hydraulic fluid filtered using 3 micron filter system. Filler cap/breather is accessible on left side of unit. Level indicator may be viewed through a window in front.
7. Verify suction valve is open if present.

8. Fill pump case with filtered hydraulic oil before connecting power.
9. **CAUTION:** Check that main power supply matches name plate rating on motor in control console. Use of an incompatible power source will result in equipment damage and will void warranty.
10. Connect power supply.
11. Check motor rotation by jogging start/stop switch quickly. Reference the rotation plaque attached to the power unit. If rotation is incorrect, switch any two-phase wires at motor starter.

### **START UP:**

1. Ensure both pressure relief valves are fully rotated counter-clockwise to reduce pressure to minimum.
2. Start motor and check for oil leaks in console. Hold back Backup Clamp Cylinder control lever in Open/Retract position and adjust Clamp Pressure Control until system pressure reads 1,000 psi. Cycle all valves fully several times to completely purge all air from the system.
3. Check Bucking Unit and Hydraulic Power Unit for leaks.
4. Check reservoir for proper fluid levels. Add filtered hydraulic fluid if level is below sight glass when all cylinders are extended. Fill until fluid level reaches midpoint in sight glass. If fluid level is below sight glass level, unit will not operate.

## **SECTION III**

### **OPERATION**

The E-Stop is located on the control console, and must be pulled out for the unit to operate. Locate the start button on the motor starter. Push to start main drive motor.

1. Start the motor.
2. Move Tong Make Up / Break Out lever in either direction until the power tong completes a rotation.
3. Hold Tailstock Clamp / Unclamp lever in the Unclamp position and adjust Clamp Pressure Control until system pressure reads 1,000 psi. Cycle all levers fully several times to completely purge all air from the system.
4. Position work-piece near center of Headstock, shift the Tailstock Clamp / Unclamp lever to the Clamp position. Tailstock Clamp / Unclamp control lever must be left in the 'Clamp' position while work-piece is in machine.
5. Position Tailstock as close as possible to tong, allowing required space for thread travel. **CAUTION:** If adequate space is not left to accommodate thread travel, the backup will contact the tong, potentially damaging the equipment or tubular connection. Such damage is not covered by the warranty.
6. Shift Headstock Clamp / Unclamp lever into Clamp position.
7. Using Tong Make Up / Break Out control lever, apply make-up or break-out torque, then rotate headstock.

### **MAKE-UP**

When making up connections, set relief valve to proper setting before rotating headstock.

### **BREAK-OUT**

Set relief valve to proper setting before rotating headstock.

## SECTION IV

### MAINTENANCE

#### DAILY:

1. With all clamp cylinders fully extended, check hydraulic reservoir oil level on sight glass on front of console. Fill with filtered hydraulic fluid if needed until level reaches midpoint on sight glass.
2. Inspect die inserts. Clear any debris from around clamp cylinders.

#### WEEKLY:



1. Remove dies and inspect jaw retainer bolt torque. Torque should be set to 180 ft-lbs.

#### MONTHLY:

1. Grease fittings.

#### ANNUALLY (or following any system repair):

1. Drain and clean hydraulic reservoir. Analyze contamination / quality status of hydraulic oil (with the use of an analysis kit or by other third party means). Filter / replace oil as required.
2. Remove and clean suction strainer.
3. Refill reservoir with new filtered hydraulic oil.

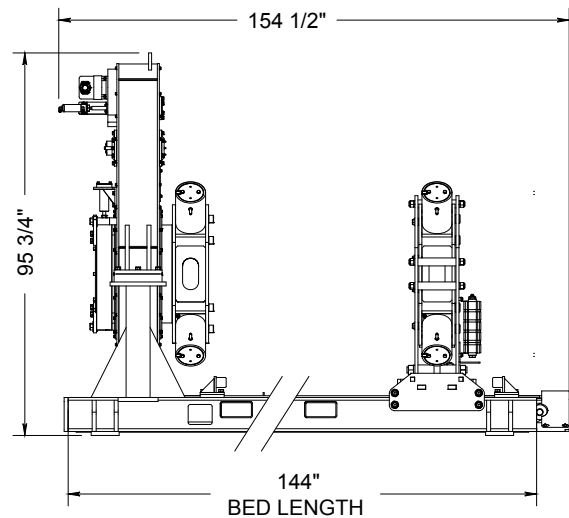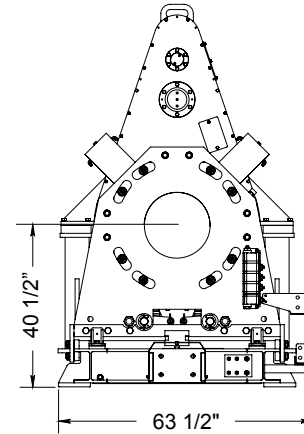

## SECTION V

### HYDRAULIC POWER UNIT

The hydraulic power unit incorporates a number of pressure control and relief valves. These valves are correctly adjusted and set prior to shipment from our factory.

**CAUTION:** Adjusting internal relief valves or pump compensator settings will void warranty.

## SECTION VI

### SPECIFICATIONS

#### Console / Power Unit:

Electric Motor:	50 Horsepower, 480 Volt, 3 phase, 60 Hertz
Hydraulic Oil:	AW-68
Hyd. Oil Capacity:	90 gal.
Overall Length:	41 1/2"
Overall Width:	85"
Overall Height:	52"
Weight (approx.):	3,000 lbs.

#### Bucking Unit:



Max. Torque:	50,000 ft-lbs
Handle Length:	24"
Overall Length:	154 1/2"
Overall Width:	63 1/2"
Overall Height:	95 3/4"
Weight (approx.):	10,645 lbs.

### CHUCKING CAPACITIES

2-3/8" to 15 1/2" Diameter

### TORQUE CAPACITY

Make-up 50,000 foot pounds / Break-out 50,000 foot pounds

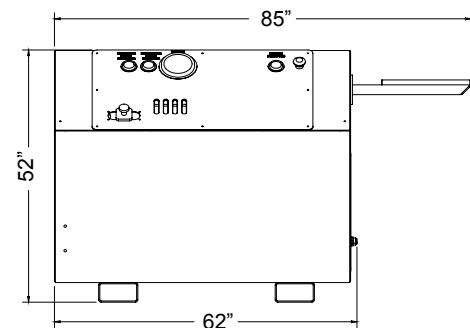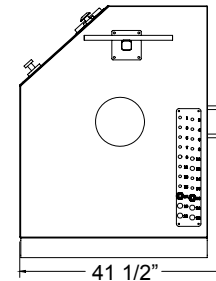

# LUBRICATION SPECIFICATIONS

*Use an EP synthetic grease that meets or exceeds the following specifications:  
(Used in tong case)*


*Use an EP synthetic grease that meets or exceeds the following specifications:  
(Used as bearing grease)*

Type	High Temp MP	Type	N/A
NLGI Consistency Grade	1	NLGI Consistency Grade	2
Color	Medium Green	Color	Blue
Lithium Complex Soap, wt%	Non Soap	Lithium Complex Soap, wt%	14
Serv. Temperature	0 Deg. F – 450 Deg. F	Serv. Temperature	N/A
Base Oil Viscosity: @ 100° F @ 200° F	1300 SUS 89 SUS	Base Oil Viscosity: @ 40°C, cSt @ 100°C, cSt	150 14.5
Viscosity Index	77	Viscosity Index	N/A
Penetration, dmm Worked ASTM D 217	325-340	Penetration, dmm Worked, 60X ASTM D 217	280
Dropping Point, °F ASTM D 566	500 ±	Dropping Point, °F ASTM D 2265	450+
Rust Protection, 5% SSW	N/A	Rust Protection, 5% SSW ASTM D 5969	Pass
Water Washout %wt loss @ 175°F	N/A	Water Washout %wt loss @ 175°F ASTM D 1264	6.8
Timken, OK Load, lbs	50	Timken, OK Load, lbs ASTM D 2509	45
Bomb Oxidation 100 hrs @ 210°F, psi drop	N/A	Bomb Oxidation 100 hrs @ 210°F, psi drop ASTM D 942	5 max
Applications	High & Low Speed Bearings, Wheel Bearings, Pumps, Gears, Lubrication	Applications	Industrial application where a high temperature/multipurpose extreme pressure grease is needed, Trailers


***Use a premium quality hydraulic fluid that meets or exceeds the following specifications:***

Humble Hydraulic H	68
ISO Viscosity Grade	68
Base Oil Viscosity: cSt @ 40°C @ 100°C	65.0 8.5
Viscosity Index – ASTM D 2270	95
Pour Point – ASTM D 97	-9
Flash Point – ASTM D 92 C(°F)	222 (432)
Demulsibility – ASTM D 1401	41/39/0 (20)
Vickers 104C (IP281)	Pass
Vickers M-2950-S	Quality Level
Vickers I-286-S	Quality Level
TOST – ASTM D 943	2000+

### CLINCHER® RP Bucking Unit with Single Speed Motor & Two Speed Gearbox

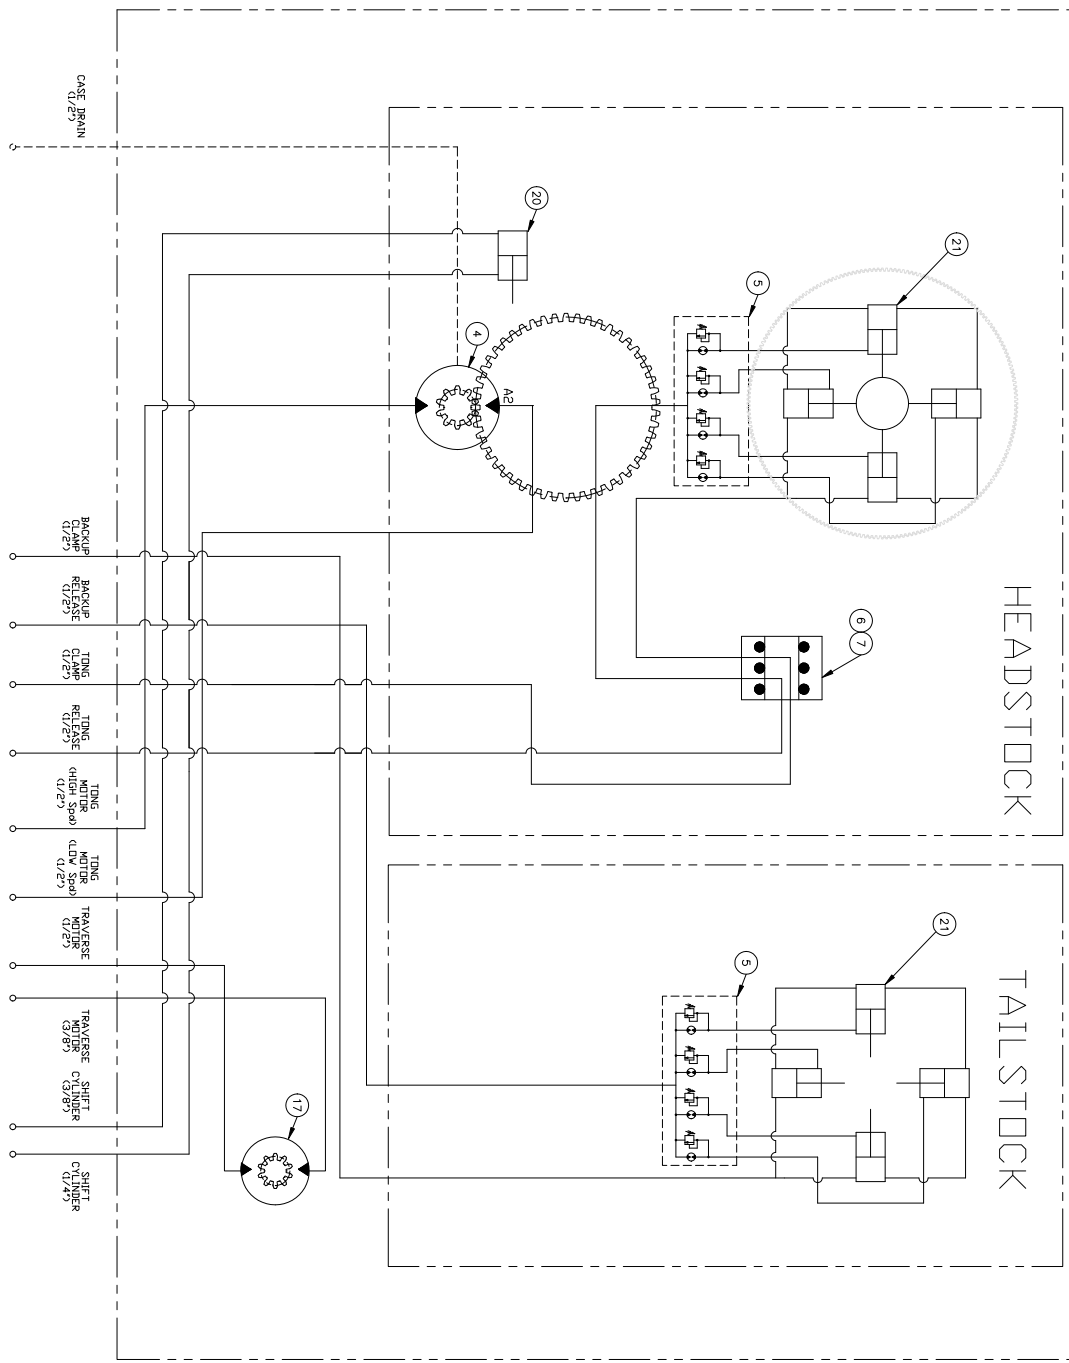


ITEM NO.	QTY.	DESCRIPTION	PART NUMBER
1	3	3/2 VALVE CONTROLS	157BXXX
2	2	SHUTTLE VALVE	LSV-61-N
4	1	HYDRAULIC MOTOR, SINGLE	235-6500
5	2	FLOW DIVIDER	330-6500
6	1	HYDRAULIC SWIVEL	228-6500-165
7	3	ROTARY SEALS (3 PCS = 1 SFT)	238-6500
8	2	RELIEF VALVE	R1E02-2912-A1
9	1	6" PRESSURE GAUGE, 0-3000	132-6500
10	1	DUMP VALVE SOLENOID VALVE, NOR., CLOSED	148-6500
12	1	AIR PRESSURE GAUGE	149-6500
14	1	AIR VALVE	146-6500
16	1	AIR W/FLTR	147-6500
17	1	TRAVERSE MOTOR (OPTIONAL)	143-6500
20	1	AIR CYLINDER W/ GEAR SHIFT	234-6500
21	8	CLAMP CYLINDER	400-3000-1

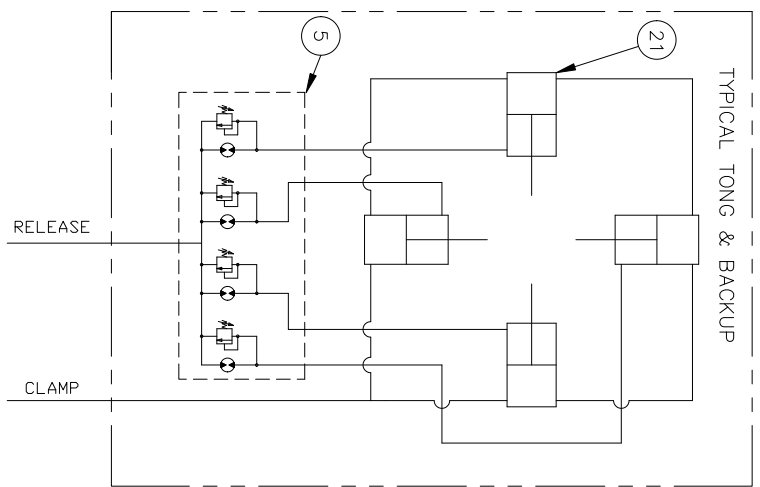


### Bucking Unit Hydraulic Schematic

# Control Console Hydraulic Schematic

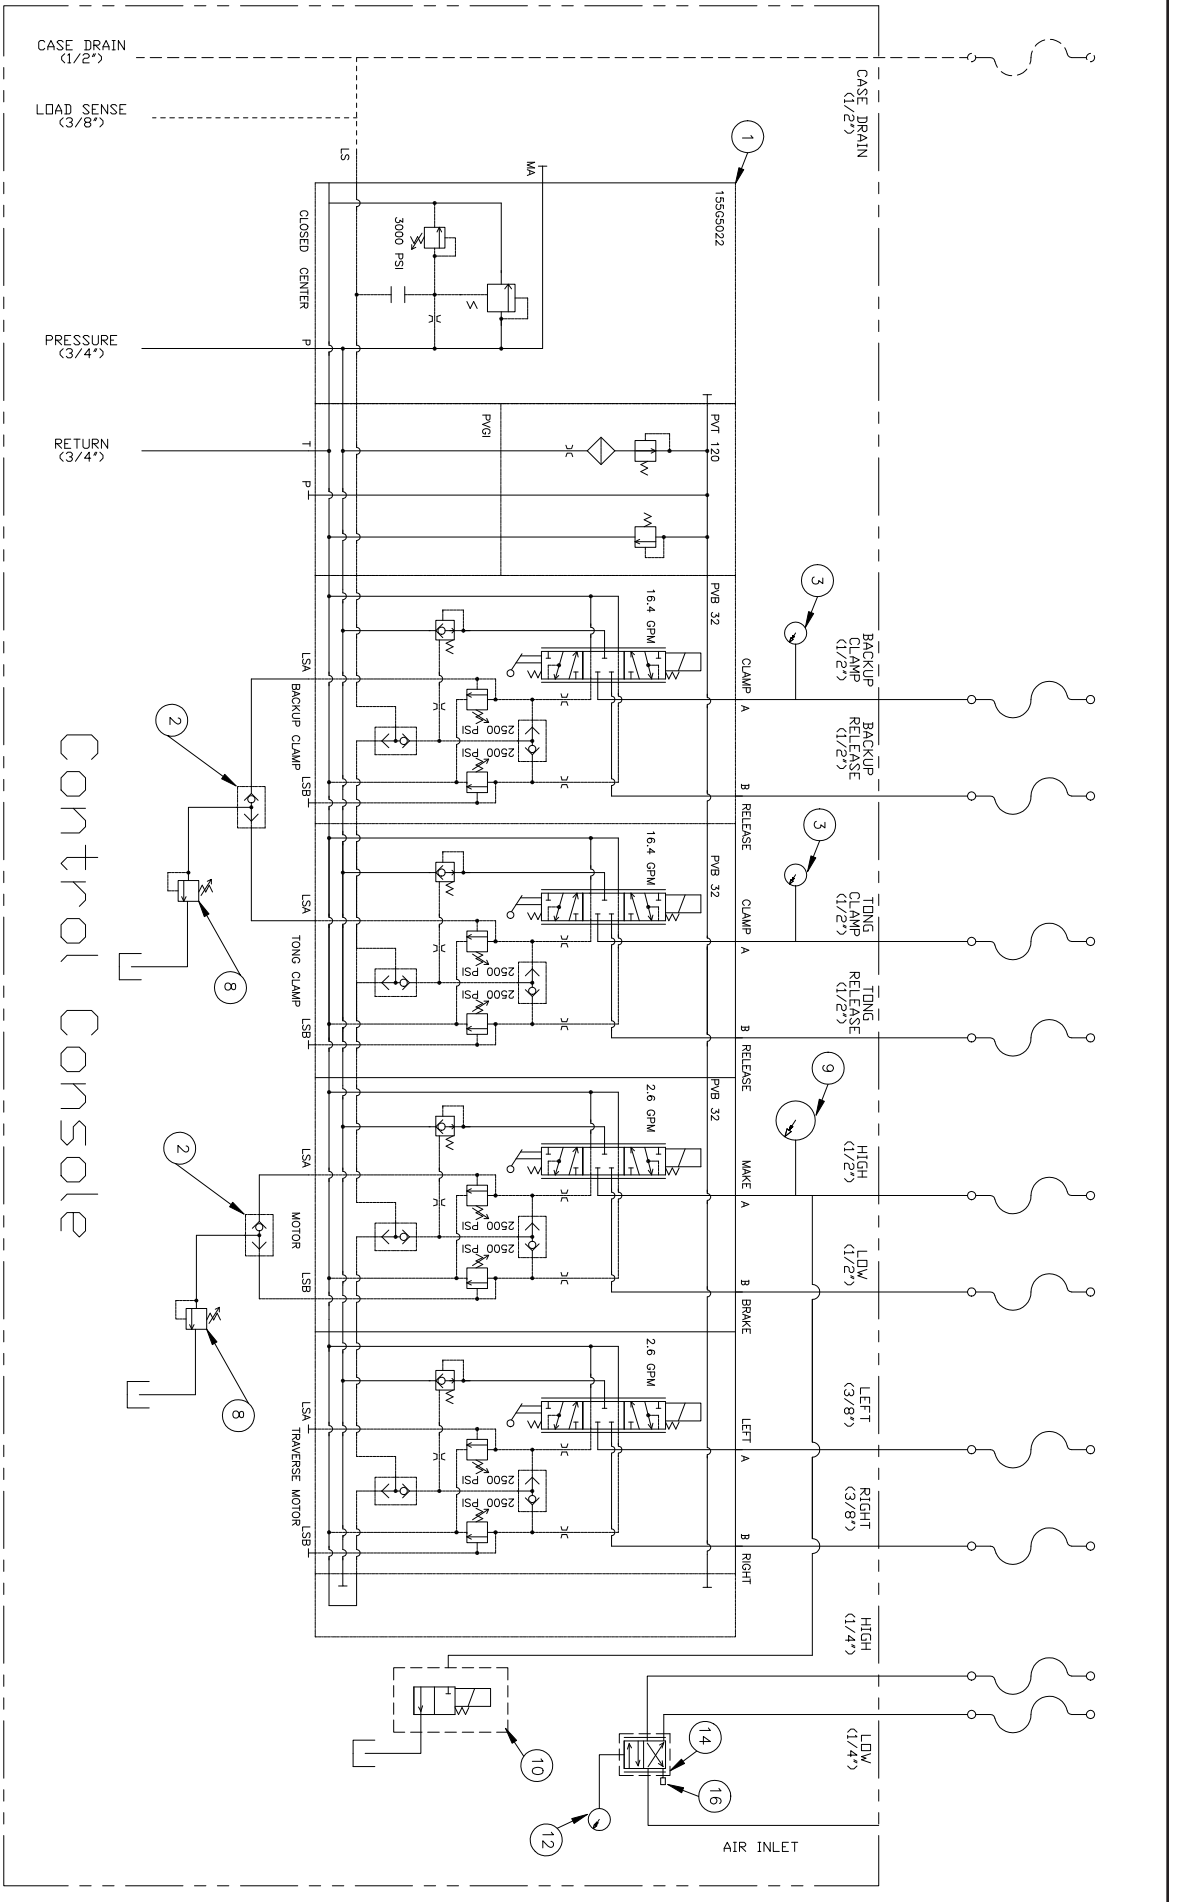




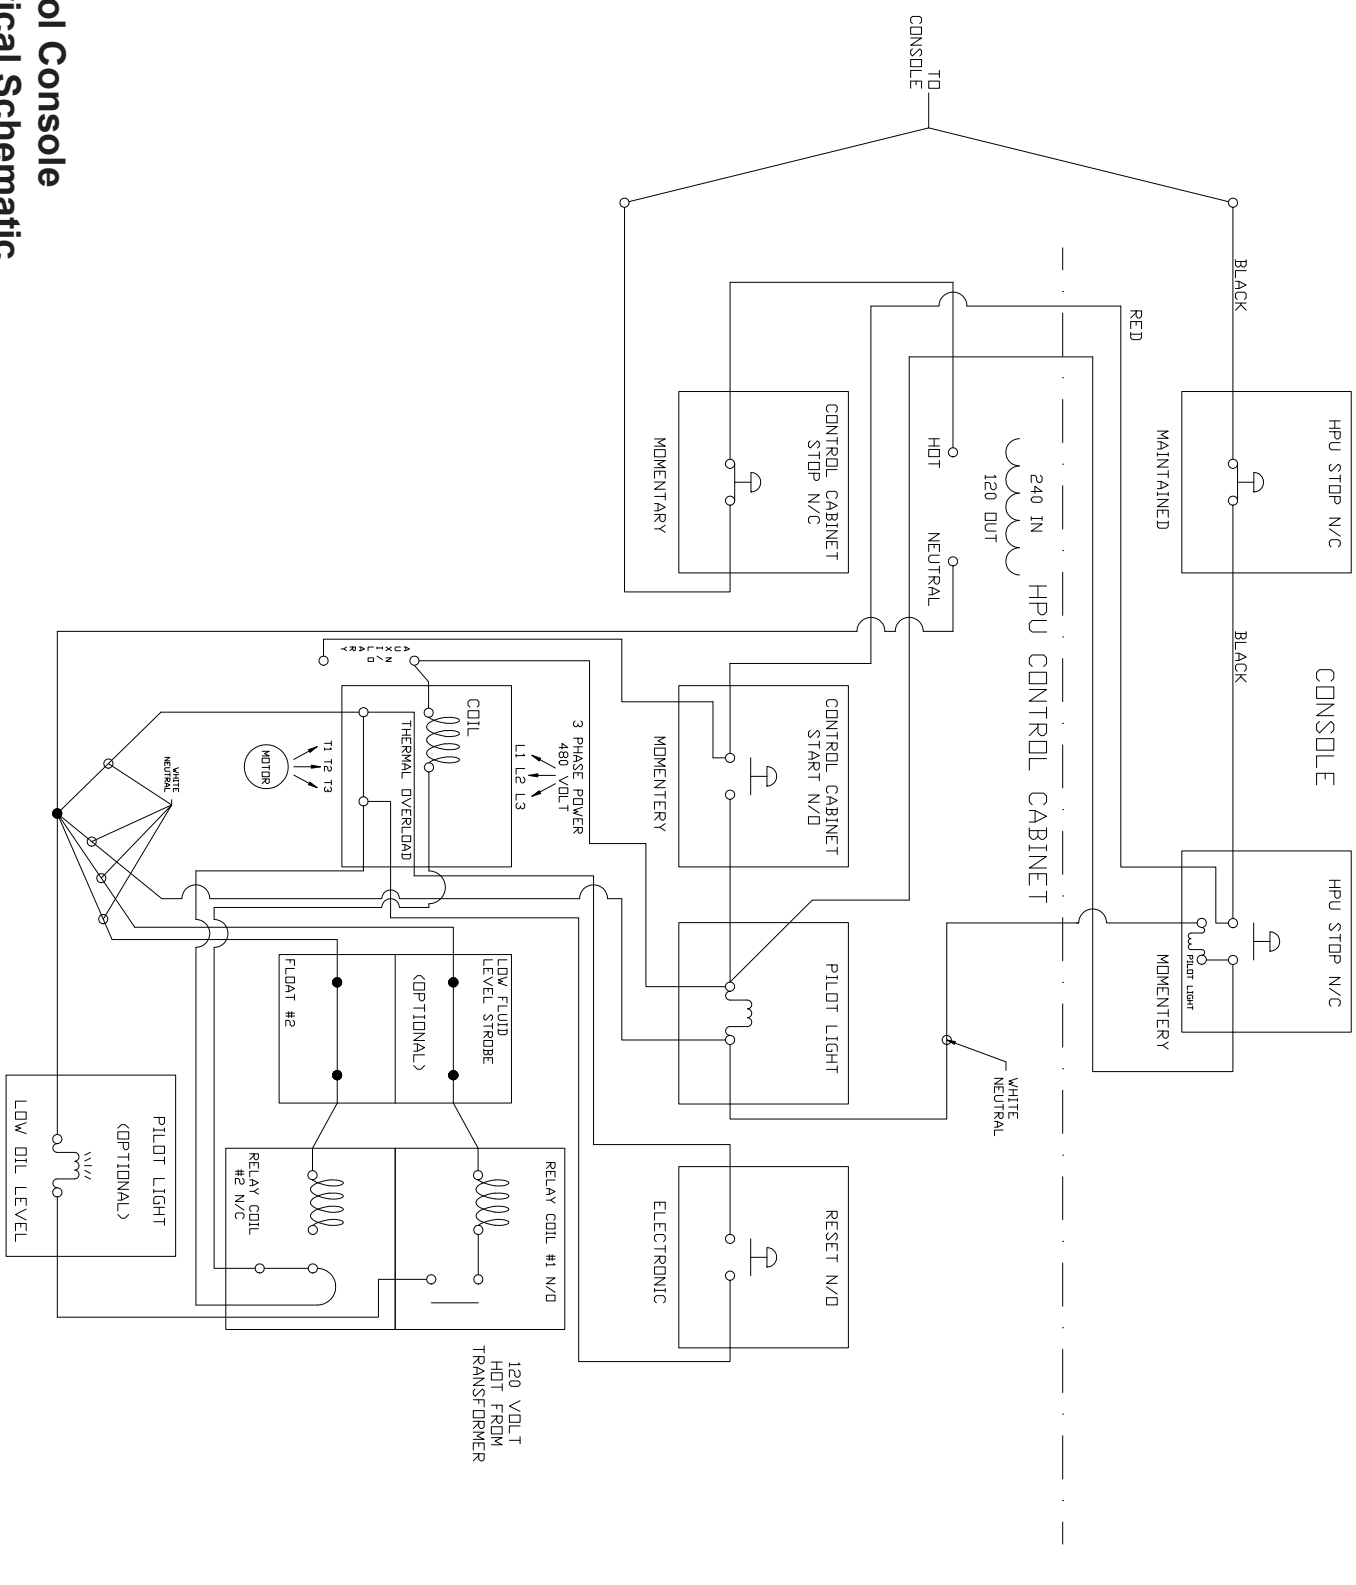


**Control Console  
Electrical Schematic**

# Electric Proportional Schematic

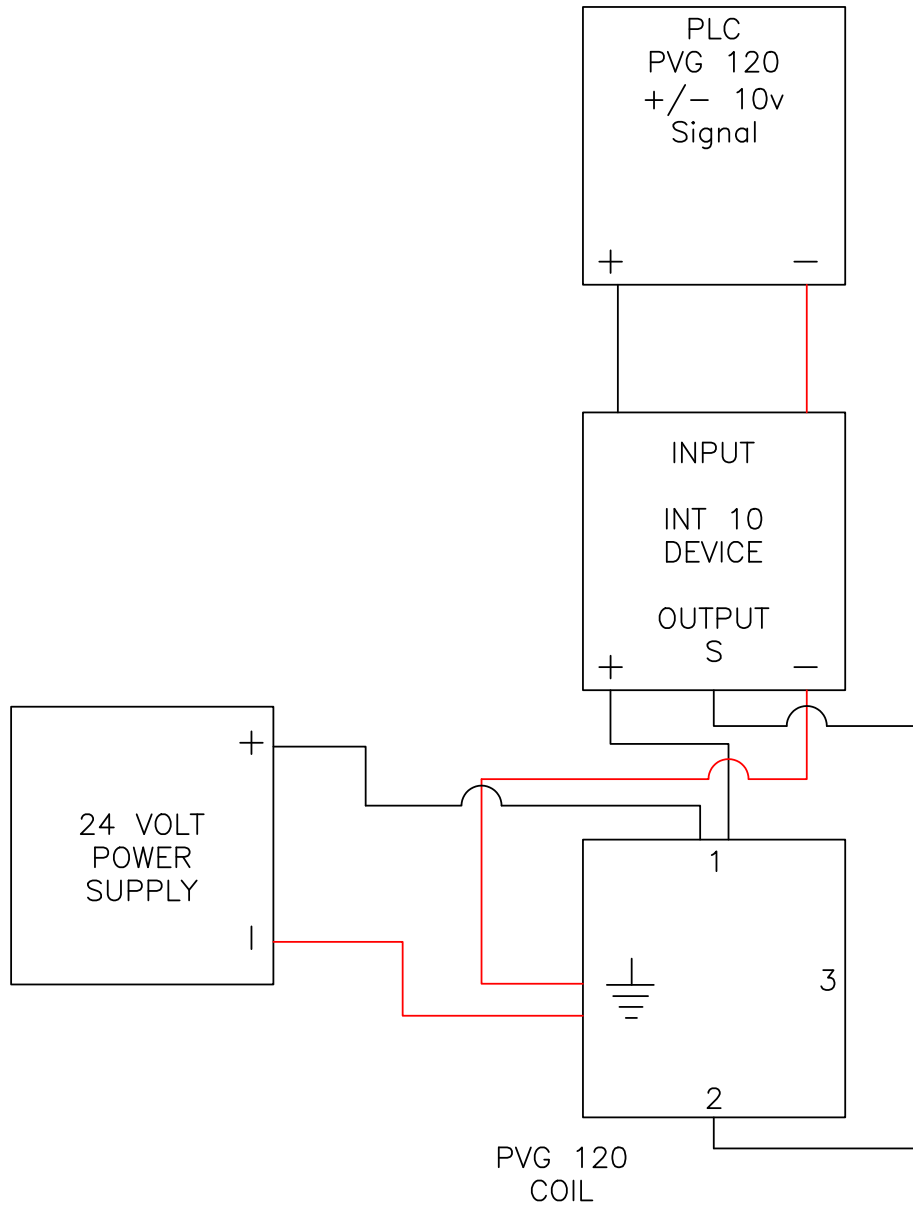

ITEM NO.	QTY.	DESCRIPTION	PART NUMBER	LOCATION
3	2	2-1/2" PRESSURE GAUGE, 0-3000	133-6500	CONSOLE/POWER UNIT
11	1	ELECTRIC MOTOR	PU5060-S1	CONSOLE/POWER UNIT
13	1	SUCTION STRAINER	SS-2-100-3	CONSOLE/POWER UNIT
15	1	HYDRAULIC PUMP	7003638	CONSOLE/POWER UNIT
18	1	FILTER HEAD	P563268	CONSOLE/POWER UNIT
19	1	FILTER ELEMENT	P562207	CONSOLE/POWER UNIT

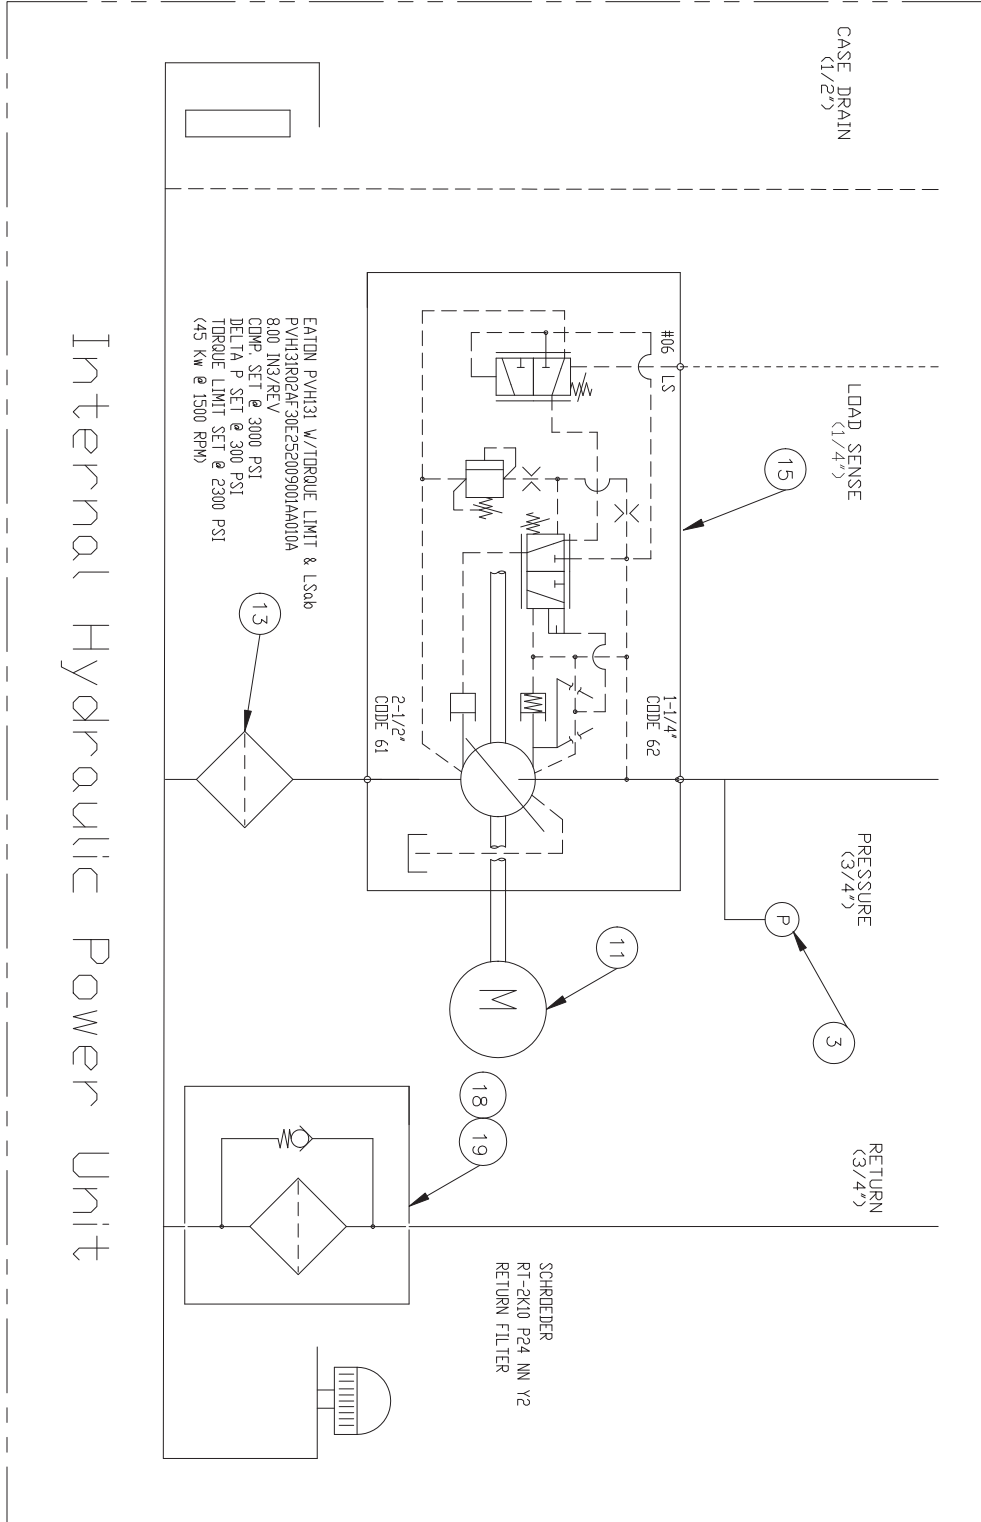

Internal Hydraulic Power Unit

**Power Unit Hydraulic Schematic**




*Page intentionally left blank*

# CLINCHER® RP6016-01

## Continuously Rotating Bucking Unit

(shown with optional accessories)

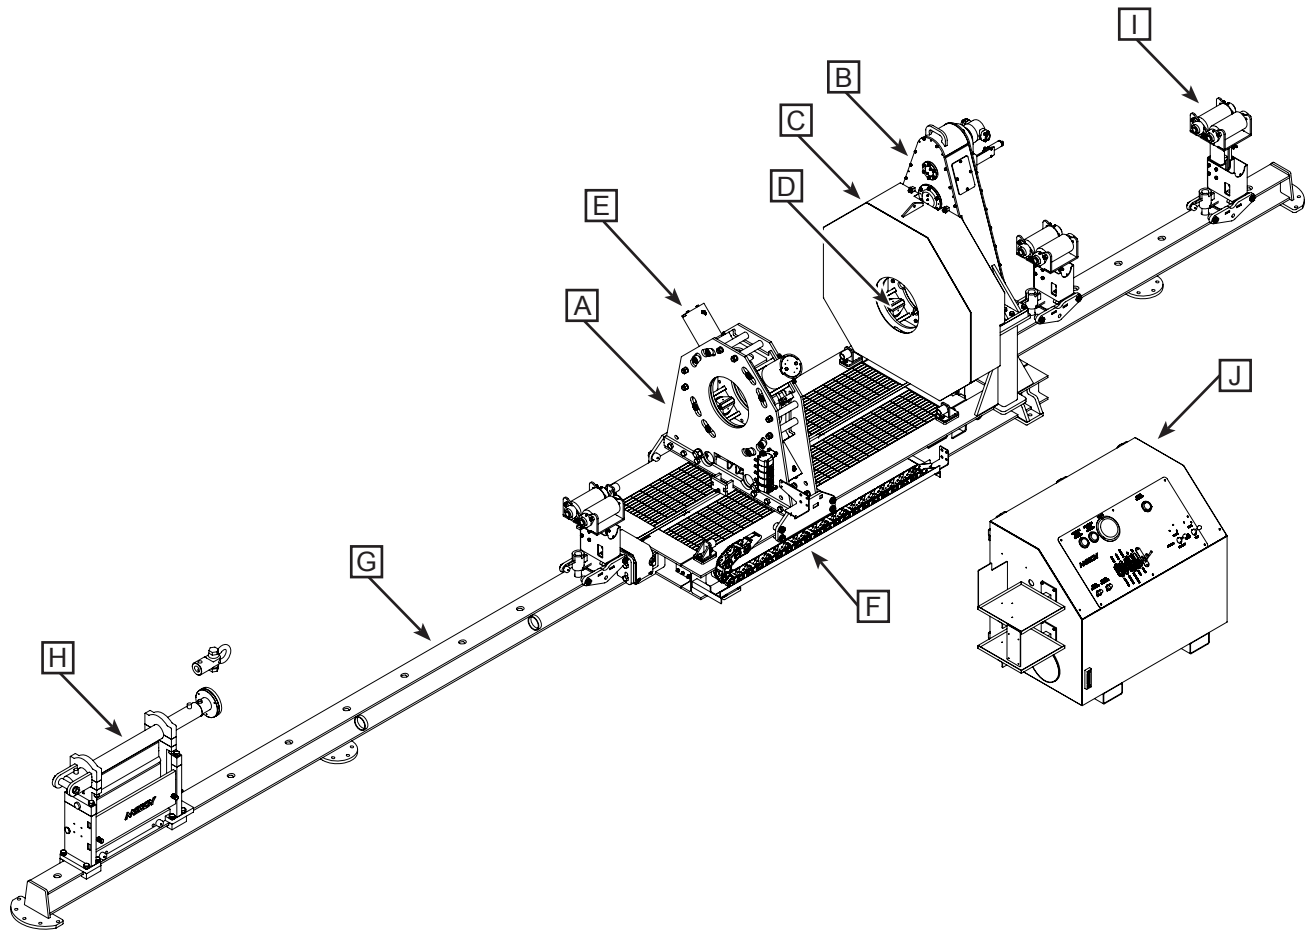


<b>A</b>	Tail Stock Assembly -----	12
<b>B</b>	Headstock Assembly -----	14
	Tong Assembly -----	16
	Pinion Sprocket Assembly -----	20
	Clutch Gear Assembly -----	22
	Shifter Assembly -----	24
	Drive Gear Assembly -----	26
	Shift Cylinder Mount Assembly -----	28
<b>C</b>	Rotating Head Guard Assembly -----	31
<b>D</b>	Head Stock Vise Assembly -----	32
<b>E</b>	Clamp Cylinder Assembly -----	34
<b>F</b>	12 ft. Skid Assembly -----	36
	Idler Sprocket Assembly -----	38
	Drive Sprocket Assembly -----	39
<b>G</b>	Extension Beam Assembly (various styles) -----	40 - 41
<b>H</b>	Push Pull Assembly -----	42
<b>I</b>	Hydraulic Support Jack Assembly -----	44
<b>J</b>	Control Console / Power Unit Assembly -----	45


Notice: All drawings contained in this manual are the property of McCoy Drilling & Completions and are considered confidential. This information may not be used, disclosed, copied, or reproduced in any form, without the express written consent of McCoy Drilling & Completions.

For third party component documentation used within this unit, please contact McCoy Drilling & Completions.

**300-6516**  
**Tail Stock Assembly**

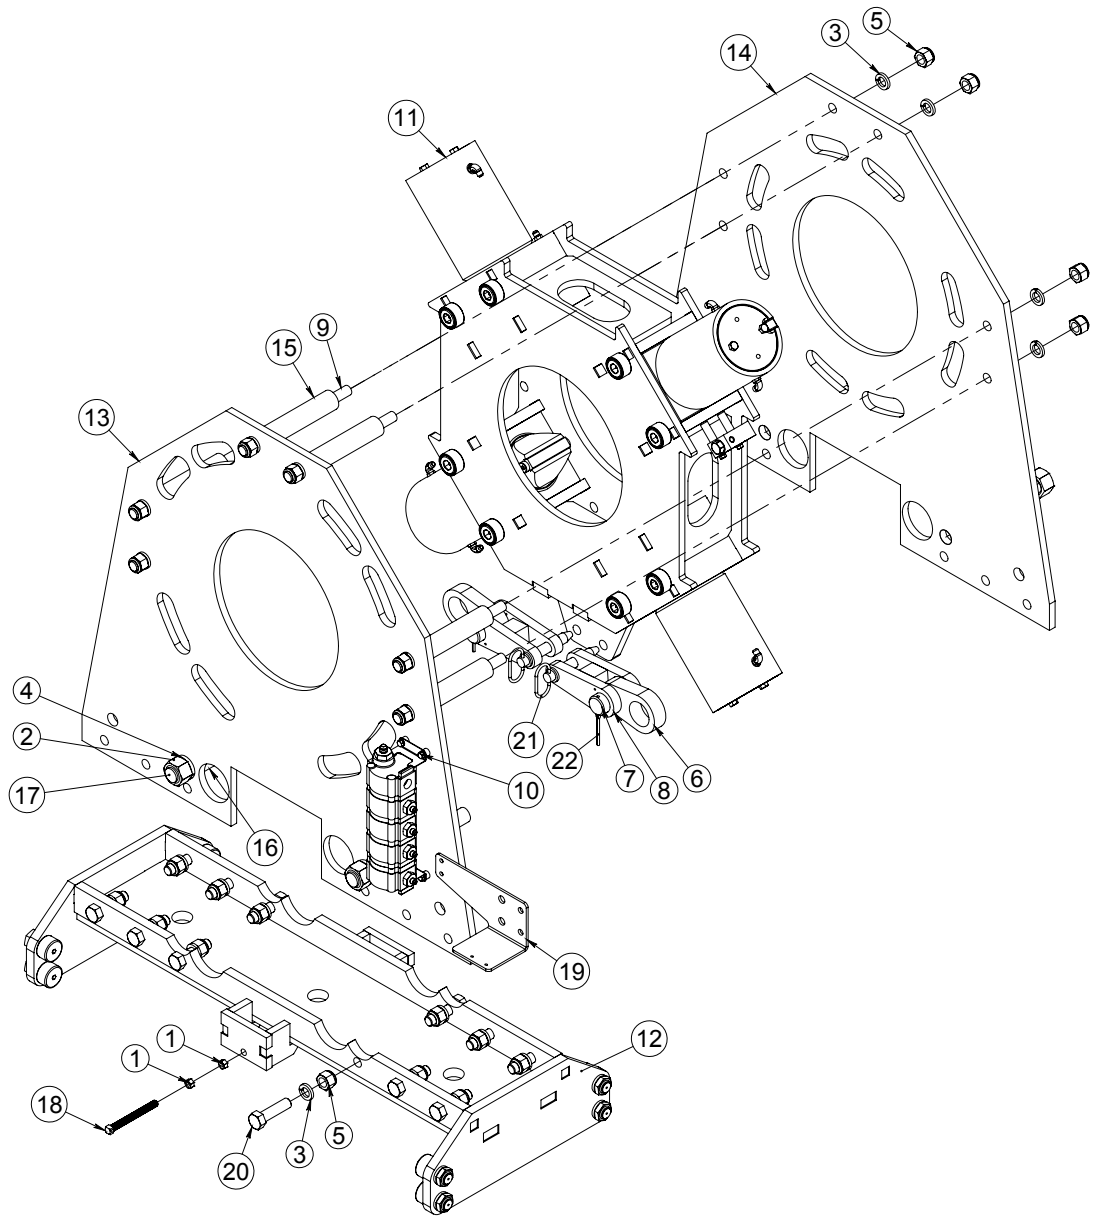


**300-6516**  
**Tail Stock Assembly**

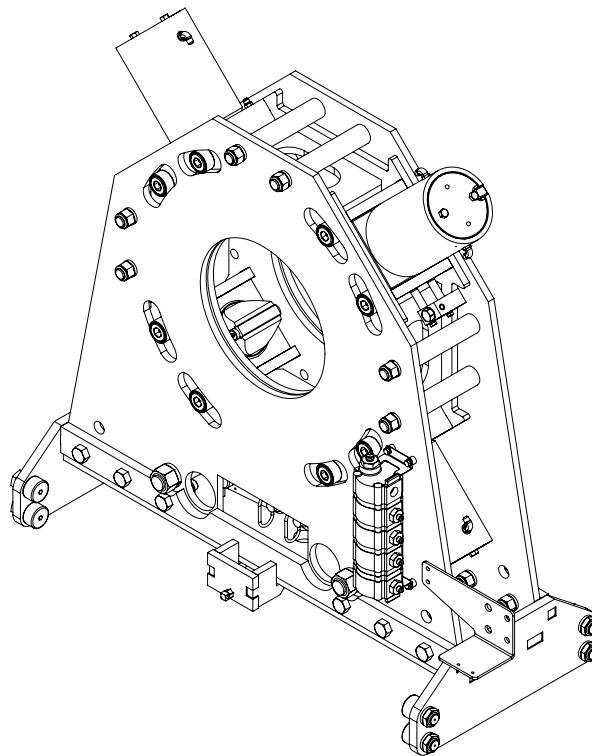


Item #	Qty.	Part Number	Part Name
1	4	1101	NUT, HEX, 1/2-13
2	4	1187	1 1/2-6 HEX NUT
3	24	1218	1" LW
4	4	1223	1 1/2" LOCKWASHER
5	24	1224-B	1"-8 NYLOC NUT
6	2	302-6500	LOAD CELL BRACKET
7	2	303B-6500	LOAD CELL DEAD PIN
8	2	303-6500	LOADCELL BRACKET WELDMENT
9	6	320-6500	TAILSTOCK SPACER BOLTS
10	1	330-6500	DELTA POWER 6 PORT FLOW DIVIDER
11	1	351-6500-1	16 1/2" TAILSTOCK VISE ASSEMBLY
12	1	350-6500-1	CARRIAGE ASSEMBLY
13	1	355A-6500-01	TAILSTOCK SIDE PLATE
14	1	355B-6500-01	OUTER TAILSTOCK SIDE PLATE
15	6	356-6500	TAILSTOCK SPACER TUBE
16	2	359-6500	LOADCELL SPACER ROD
17	2	360-6500	LOADCELL SPACER BOLT
18	2	507A-3000	CHIAN ATTACHMENT
19	1	518-6000-01	BULKHEAD PLATE
20	12	74053	1"-8 X 3 3/4" HHCS
21	2	902B-3000-3	1" X 4 3/4" HITCH PIN
22	2	PH-PIN 3	COTTER PIN 1/4 X 1 1/2

**200-6016-1**  
**Headstock Assembly**

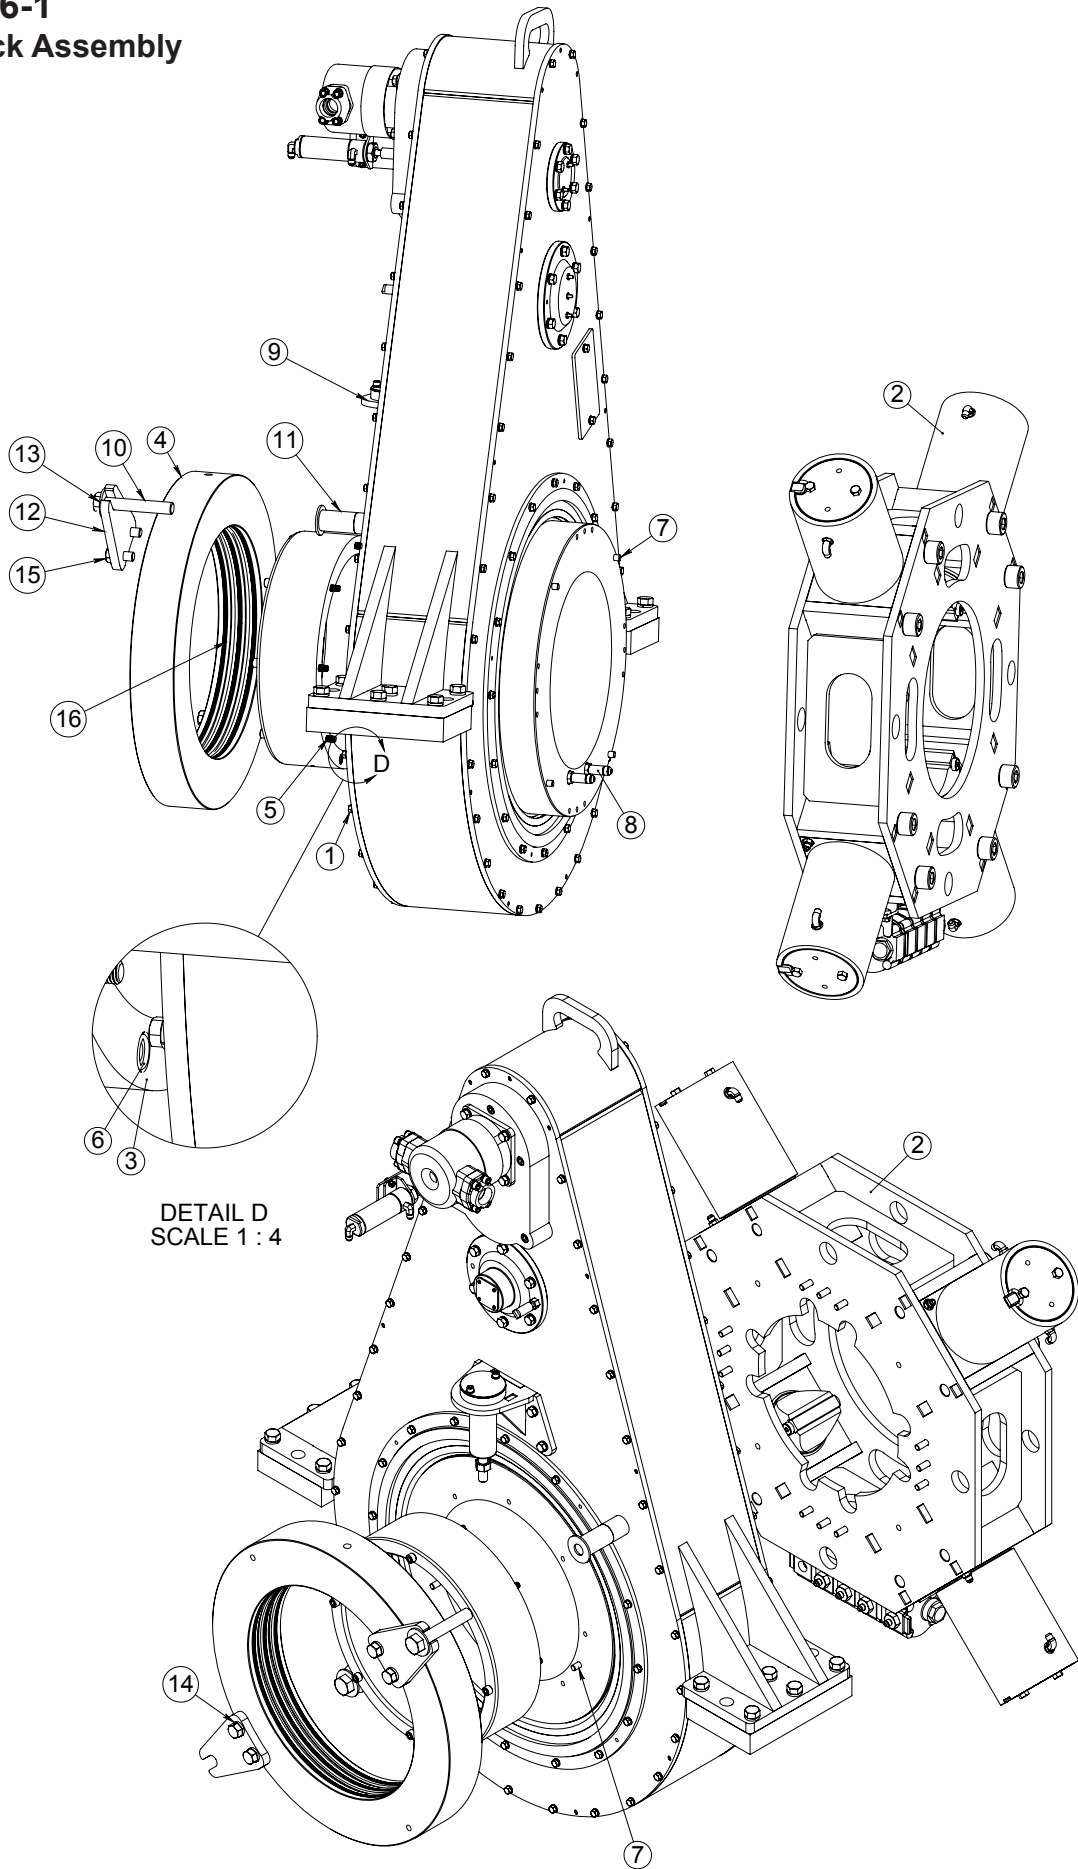




**200-6016-1**  
**Headstock Assembly**


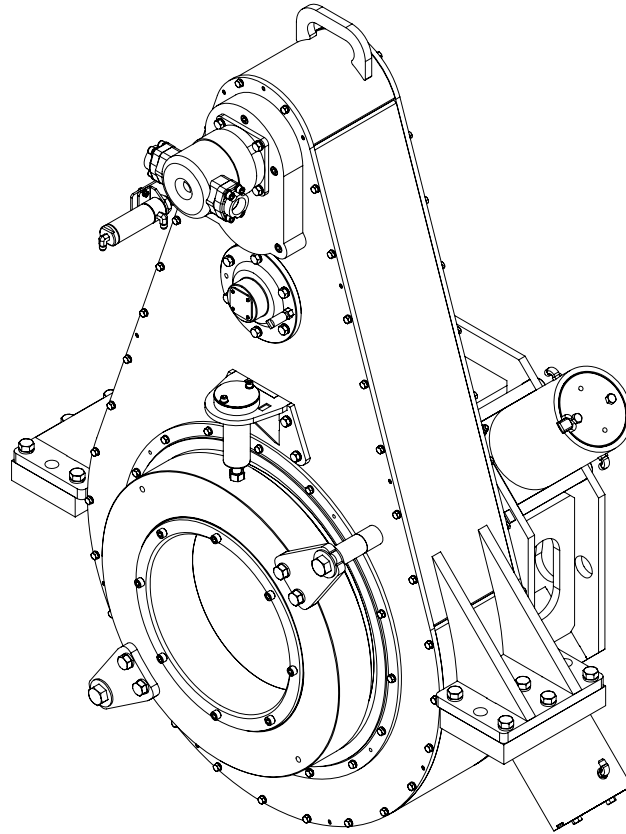


Item #	Qty.	Part Number	Part Name
1	1	200-6016	TONG ASSEMBLY
2	1	250-6500-16	HEADSTOCK VISE ASSEMBLY
3	1	227A-6016	HUB EXTENSION F/ RP6016
4	1	2026-6500-01	HYDRAULIC SWIVEL F/ RP6516
5	8	1815	SHCS 1/2"-13 X 6"
6	2	2025A-6500	FACE O-RING SEAL
7	6	83669	1/2" X 1 1/2" DOWEL PIN
8	2	8 FF50X-S	SAE 8 MALE X 3/8" MJIC LONG STRAIGHT
9	1	2000-7000-02	SWIVEL SUPPORT ASSEMBLY
10	2	74073	1"-8 X 6" HHCS
11	2	2702-7000-01	SWIVEL SPACER TUBE
12	2	2701-7000-02	BOLT-ON SWIVEL KEEPER F/ RP6516
13	4	1249	1" FLAT WASHER
14	4	1171	3/4" LOCKWASHER
15	4	1173	3/4"-10 x 1 3/4" HHCS
16	3	CLEBU1660	ROT GLYD RING


**200-6016**  
**Tong Assembly**

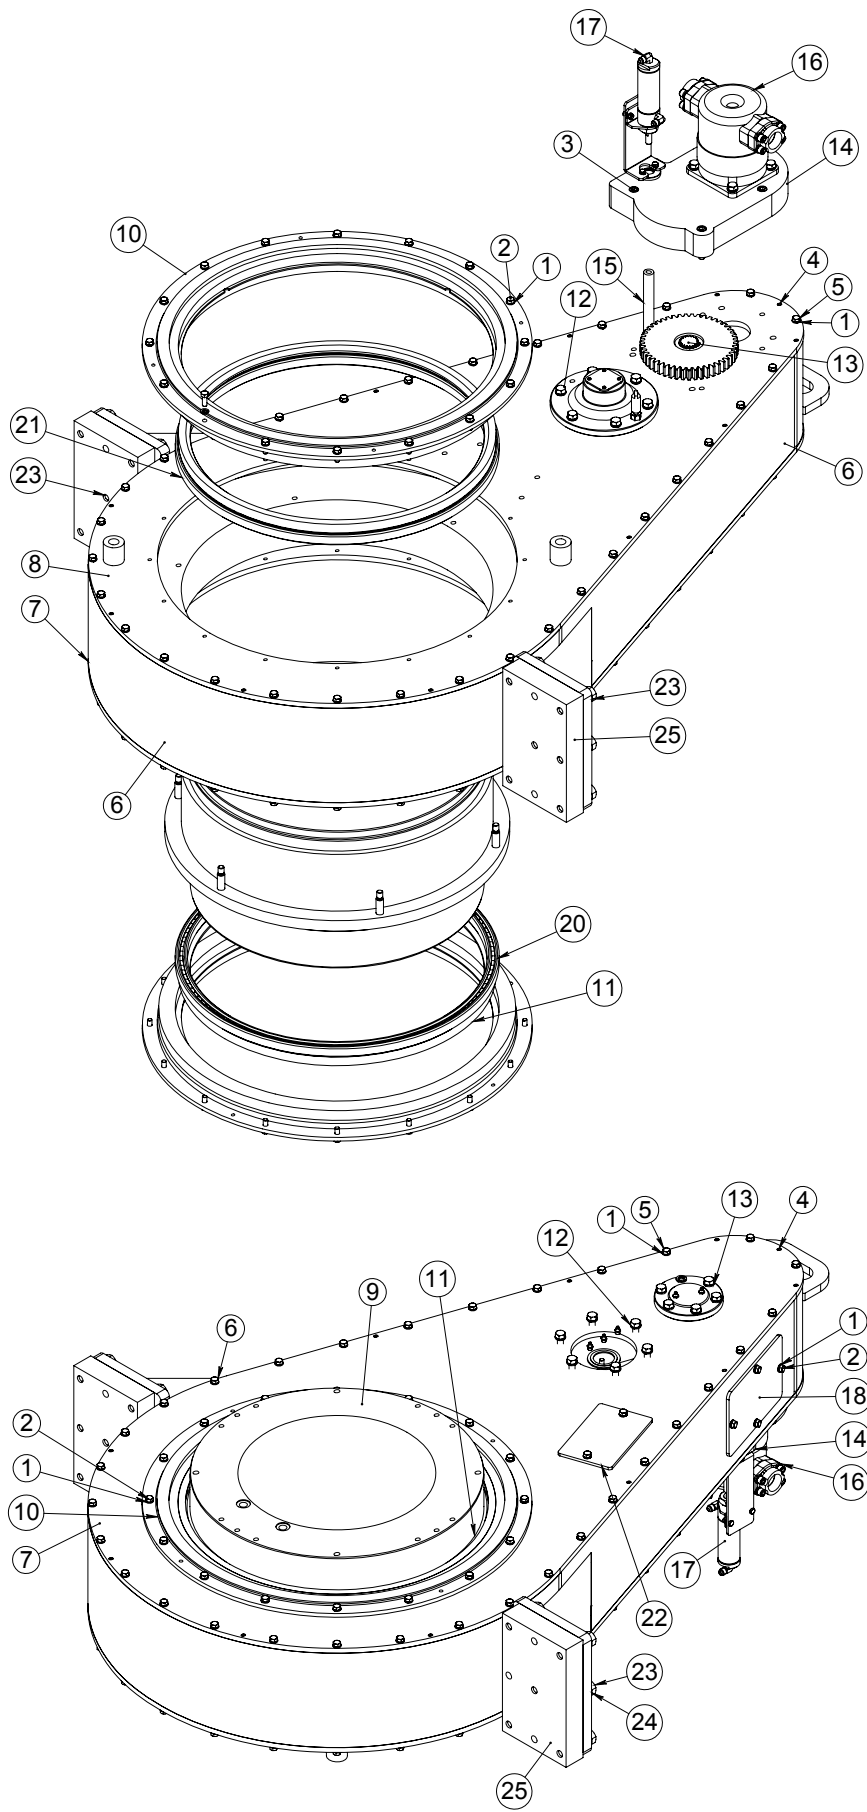



**200-6016  
Tong Assembly**

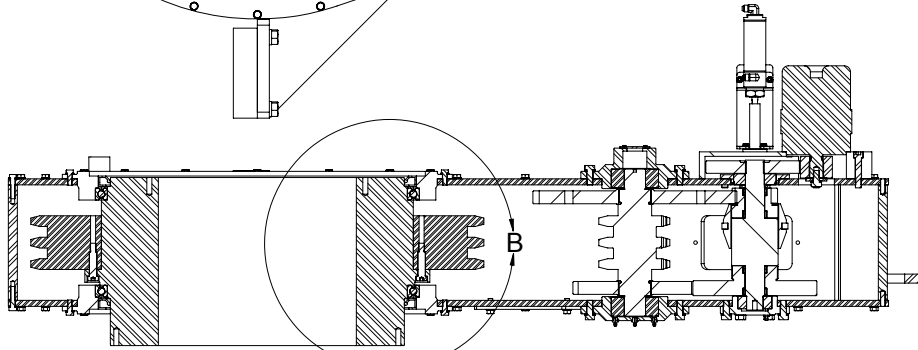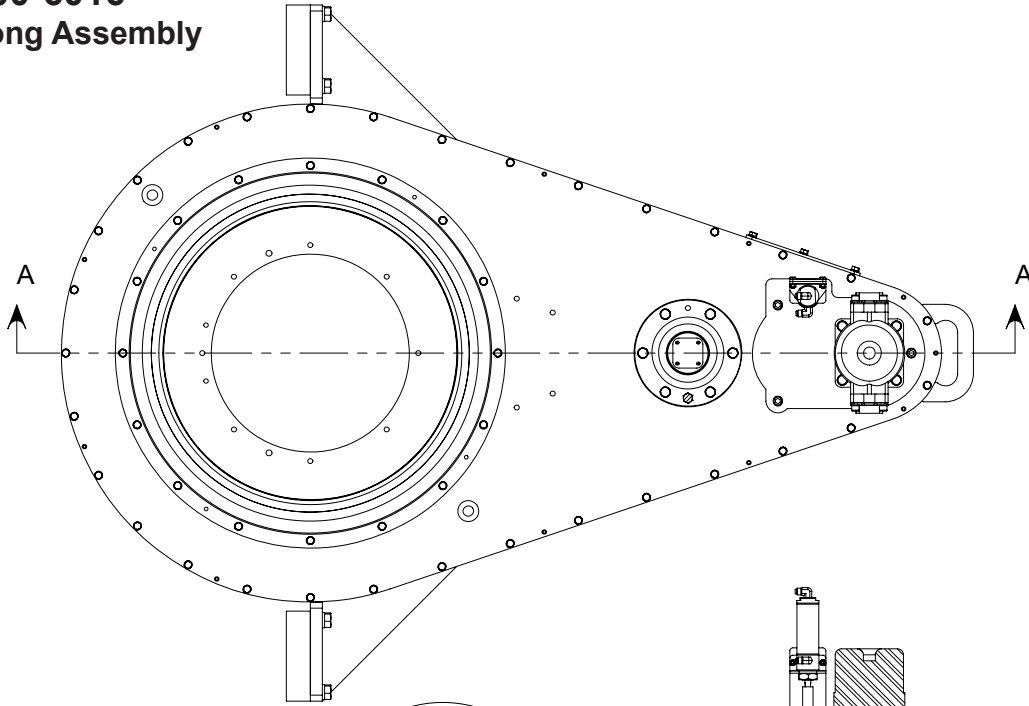


SECTION A-A

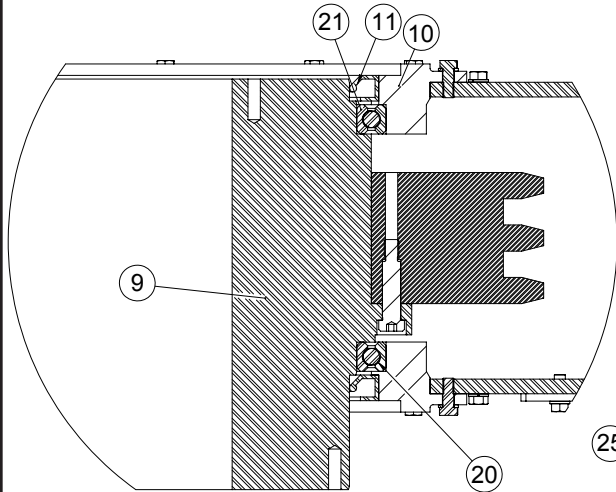

DETAIL B

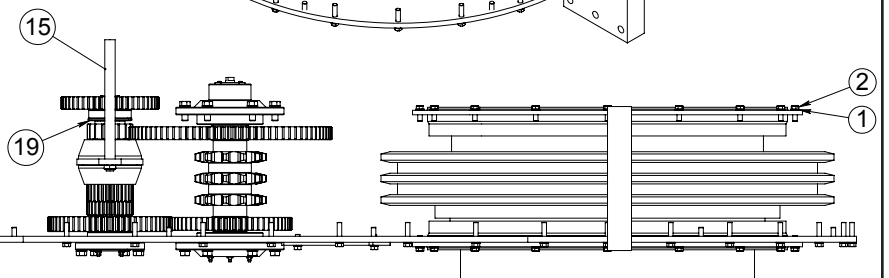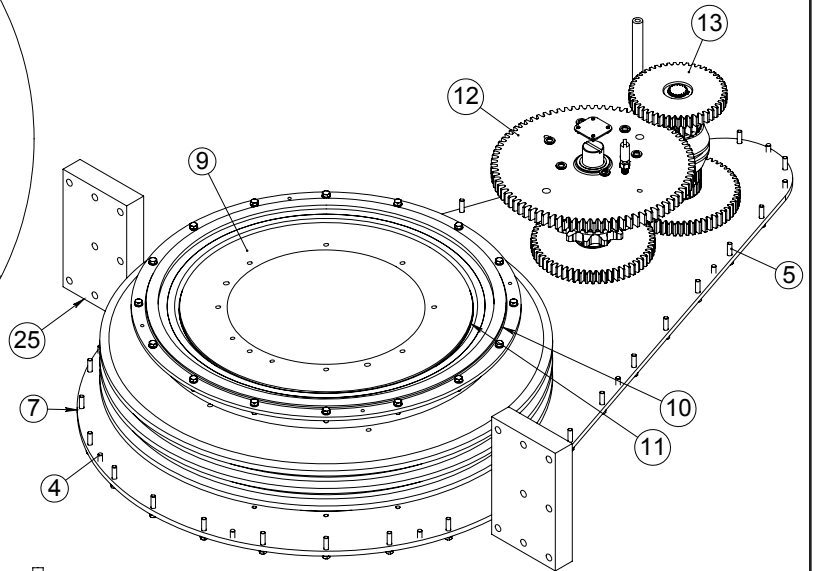

**200-6016**  
**Tong Assembly**


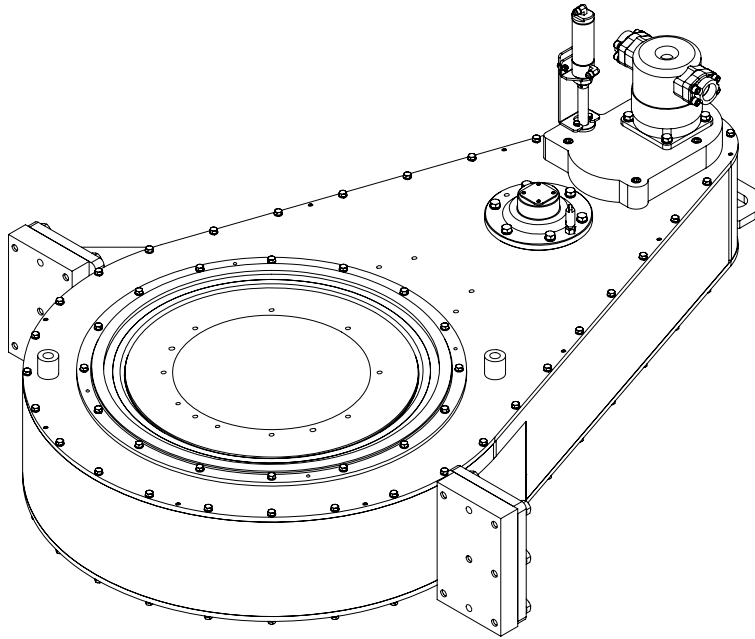


Item #	Qty.	Part Number	Part Name
1	100	1027	WASHER, LOCK 3/8"
2	38	1047	3/8"-16 X 1" HHCS
3	5	1062	SHCS 1/2"-13 x 2-1/4"
4	22	1309	DOWELL PIN 3/8" x 1-1/4"
5	62	141	3/8"-16 X 1 3/4" HHCS
6	1	201-6000	TONG MIDBODY WELDMENT
7	1	201A-6000	BOTTOM TONG PLATE
8	1	203-6000-1	TOP PLATE WELDMENT
9	1	204-6016	SPROCKET ASSEMBLY, LARGE
10	2	204C-6500	FINAL DRIVE BEARING CAP
11	2	204E-6500	GARLOCK OIL SEAL (21238-4305)
12	1	206-6000-1	PINION SPROCKET ASSEMBLY
13	1	213-6000-1	CLUTCH GEAR ASSEMBLY
14	1	216-6000	MOTOR MOUNT
15	1	220-6000-1	SHIFTER ASSEMBLY
16	1	235-6000-1	DRIVE GEAR ASSEMBLY
17	1	239-6000-1	SHIFT CYLINDER MOUNT ASSEMBLY
18	1	283-6000	COVER PLATE
19	1	308-ZZNR	1-1/2" DEEP GROOVE BALL BEARING
20	1	SG250-CPO	25" THRUST THIN SECTION BEARING
21	1	SG250-XPO	25" FOR CONTACT THIN SECTION BEARING
22	1	203-6000-S1	COVER PLATE
23	12	1176	3/4"-10 X 3" HHCS
24	12	1171	3/4" LOCKWASHER
25	2	CB11001-01-S5	WELDMENT #5




*Page intentionally left blank*

**206-6000-1**  
**Pinion Sprocket Assembly**


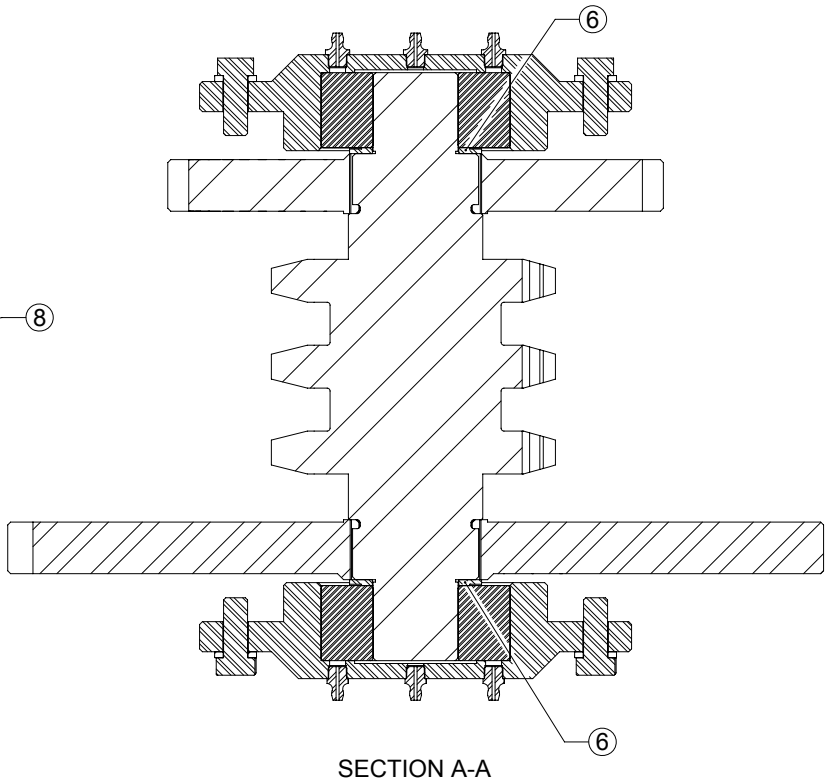
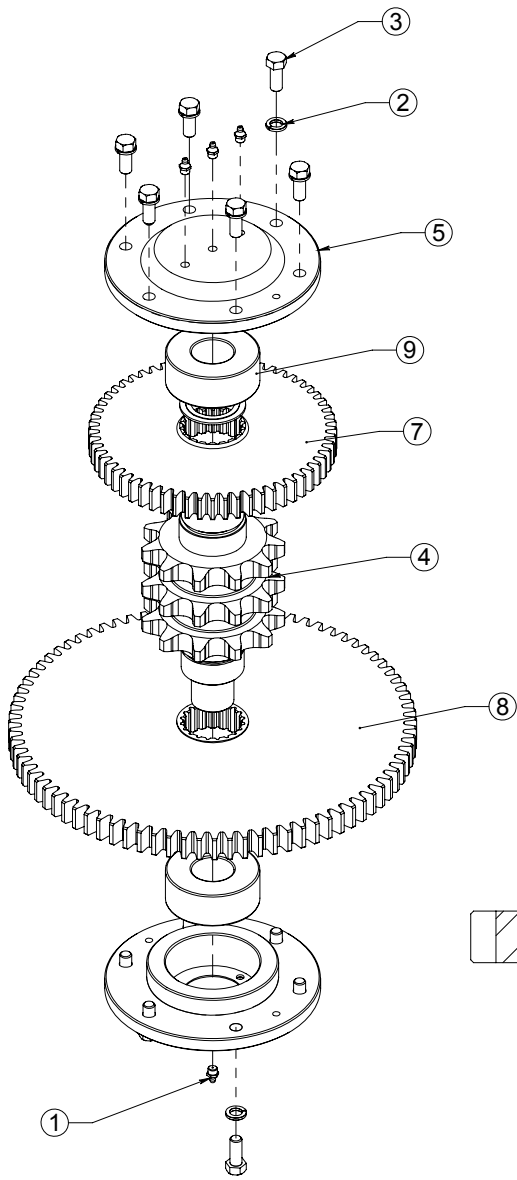


**206-6000-1  
Pinion Sprocket Assembly**

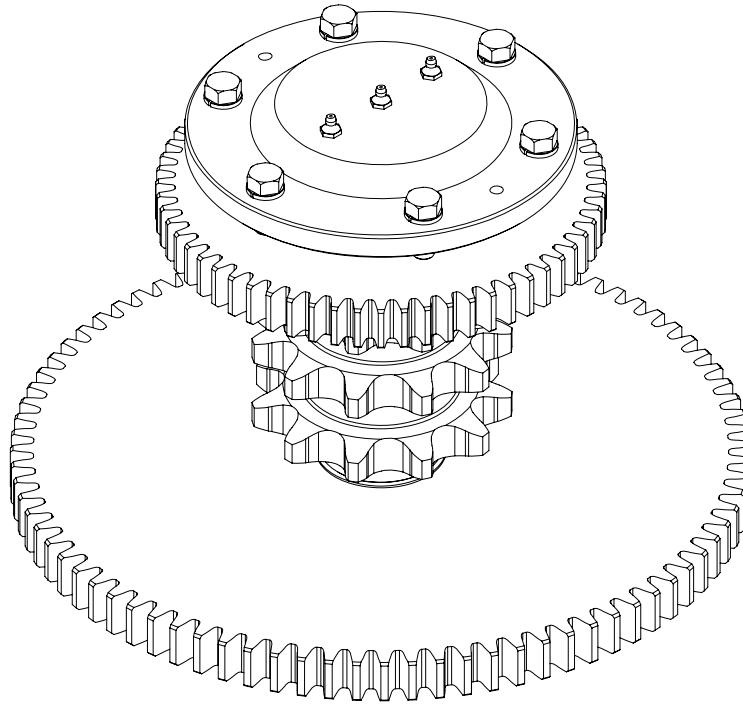

Item #	Qty.	Part Number	Part Name
1	6	1001	1/8 NPT ZERT
2	12	1103	1/2" LOCKWASHER
3	12	1111	1/2"-13 x 1 1/4" HHCS
4	1	206-6000	PINION SPROCKET
5	2	206A-6000	BEARING CAP
6	2	206B-6000	SPROCKET SHAFT SPACER
7	1	207-6000	HIGH PINION GEAR
8	1	208-6000	LOW PINION GEAR
9	2	5309-M	45mm DOBLE ROW ANGULAR CONTACT


**213-6000-1**  
**Clutch Gear Assembly**

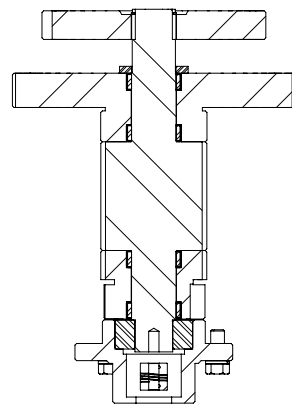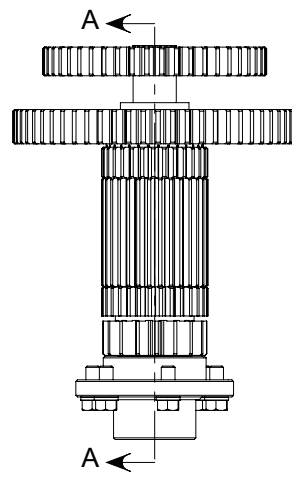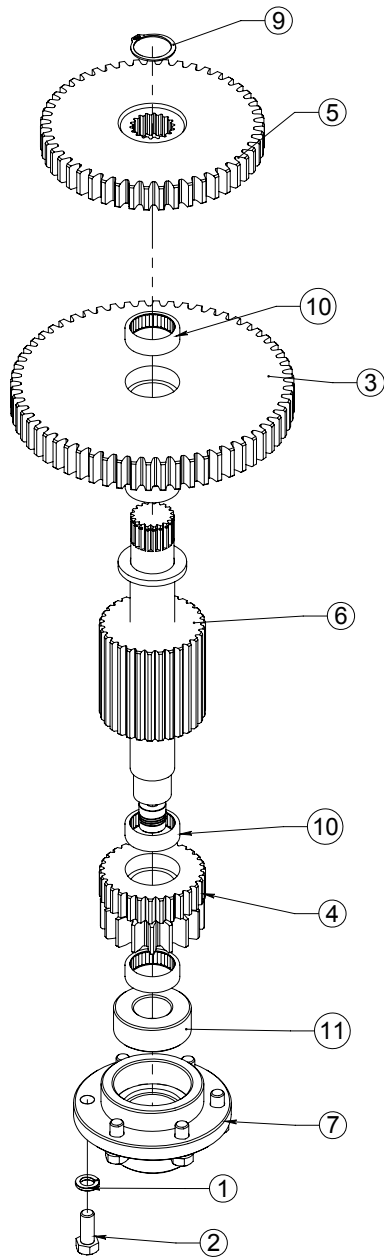

SECTION A-A




**213-6000-1**  
**Clutch Gear Assembly**

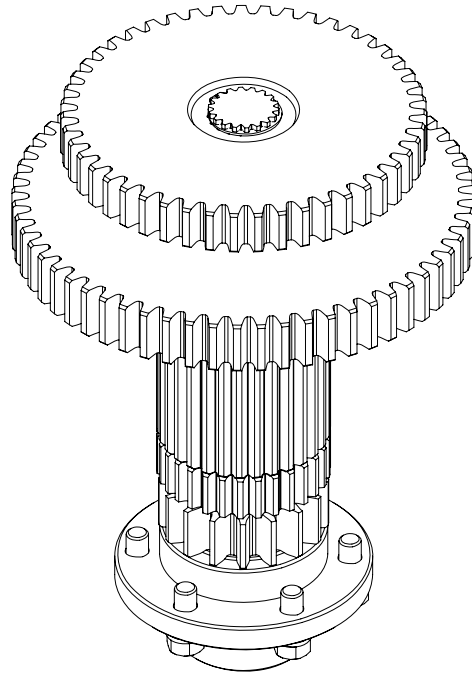


Item #	Qty.	Part Number	Part Name
1	6	1103	1/2" LOCKWASHER
2	6	1111	1/2"-13 x 1 1/4" HHCS
3	1	209-6000	HIGH CLUTCH GEAR
4	1	210-6000	LOW CLUTCH GEAR
5	1	211-6000	CLUTCH DRIVE GEAR
6	1	213-6000	CLUTCH SHAFT
7	1	213A-6000	BOTTOM BEARING CAP
8	1	215-6000	LOWER CLUTCH SPACER
9	1	3100-156	EXTERNAL RETAINING RING
10	4	B-2610	TIMKEN NEEDLE BEARING
11	1	S3507-ZZ	35mm BALL BEARING
12	1	ES100	

**220-6000-1**  
**Shifter Assembly**

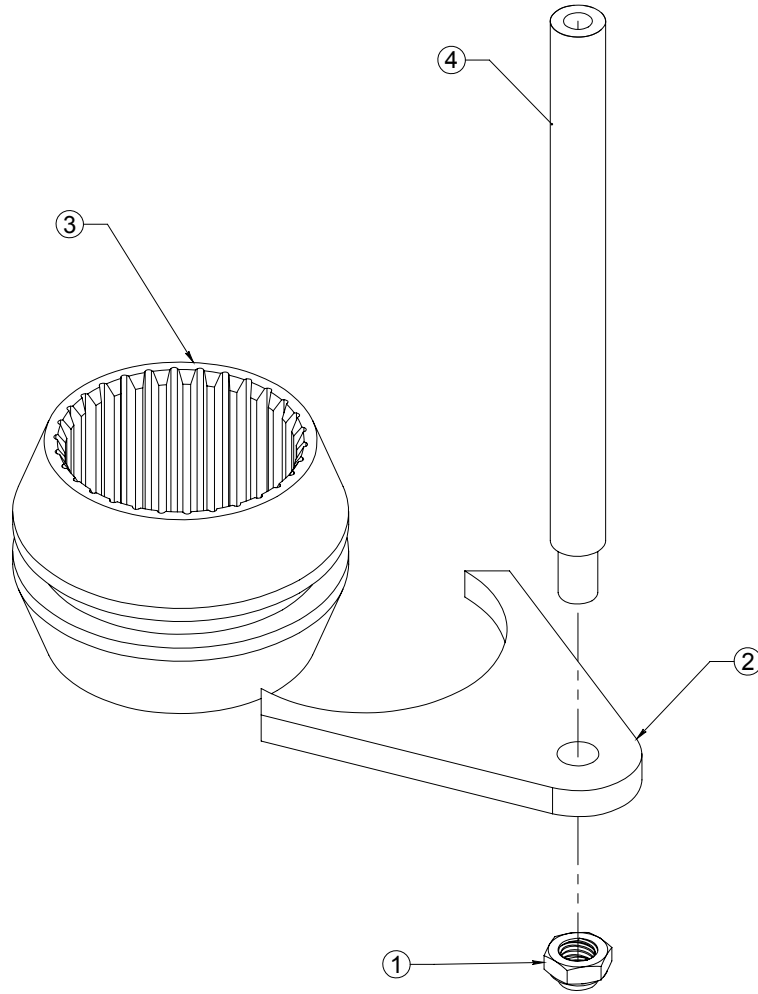


**220-6000-1**  
**Shifter Assembly**

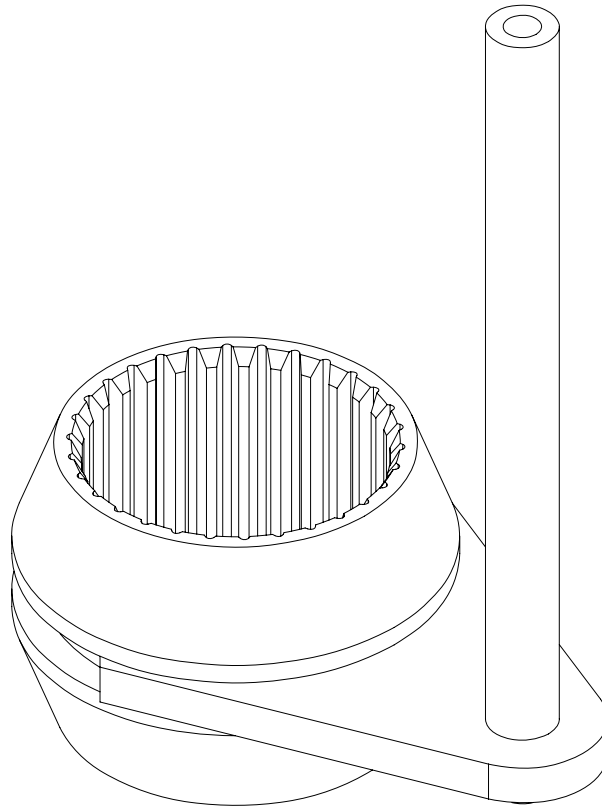


Item #	Qty.	Part Number	Part Name
1	1	91342A	THIN NYLOCK NUT 5/8"-11
2	1	219-6000	SHIFTING YOKE
3	1	220-6000	SHIFTING COLLAR
4	1	221-6000	SHIFTING SHAFT

**235-6000-1**  
**Drive Gear Assembly**

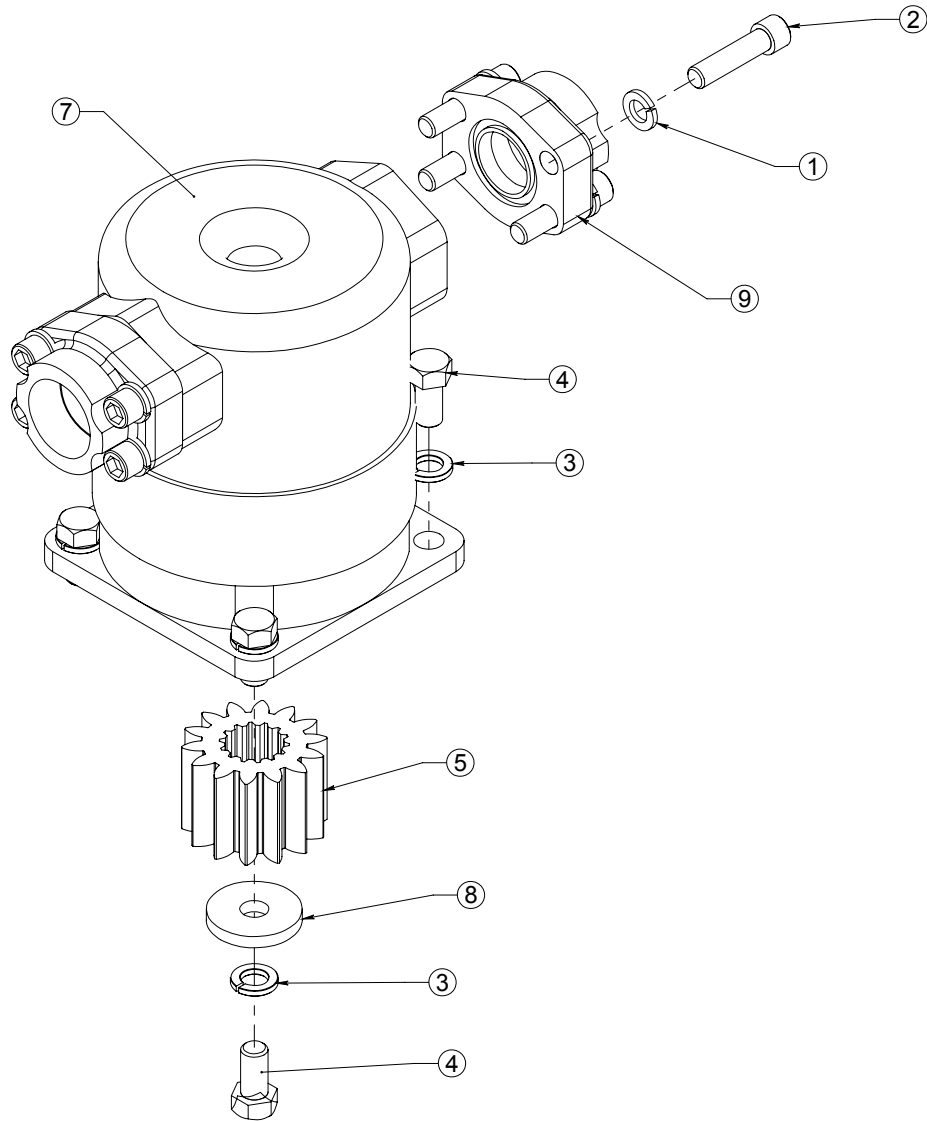


**235-6000-1**  
**Drive Gear Assembly**

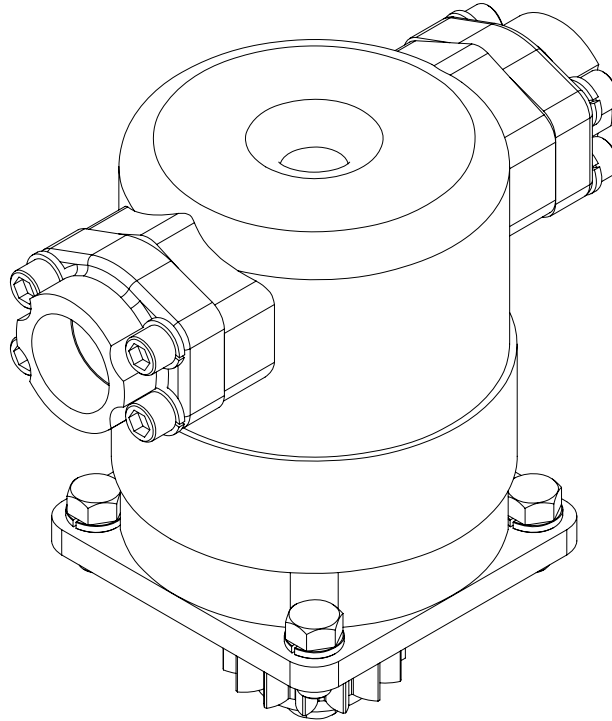


Item #	Qty.	Part Number	Part Name
1	8	1081	7/16" LOCKWASHER
2	8	1084	7/16"-14 x 1 3/4" SHCS
3	5	1103	1/2" LOCKWASHER
4	5	1110	1/2"-13 x 1" HHCS
5	1	212-5000-14T	MOTOR DRIVE GEAR (SPLINED)
6	2	2-222	O-RING
7	1	235-6500	1 SPEED 15 cu.inch MOTOR
8	1	235A-6500	MOTOR DRIVE GEAR RETAINER
9	2	W43-20-20U	1-1/4" FLANGE

**239-6000-1**  
**Shift Cylinder Mount Assembly**

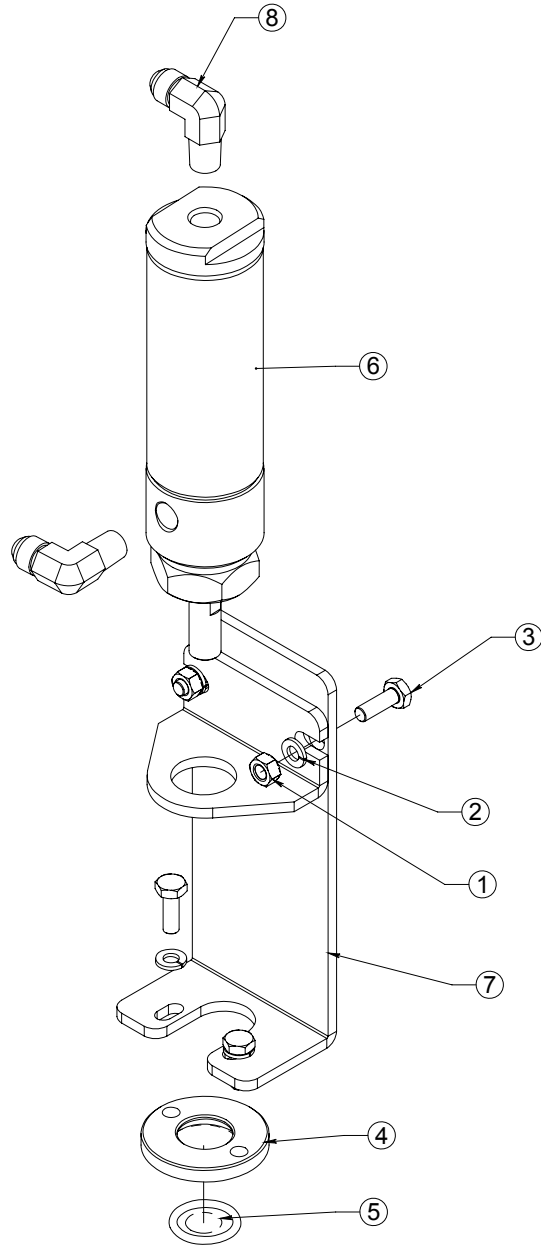

**239-6000-1**  
**Shift Cylinder Mount Assembly**

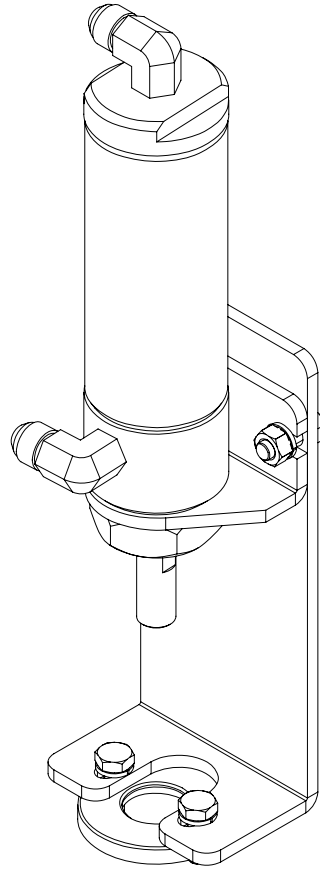


Item #	Qty.	Part Number	Part Name
1	2	100	1/4"-20 HEX NUT GR8
2	4	101	1/4" LOCKWASHER
3	4	104	1/4"-20 X 1 1/4" HHCS GR8
4	1	217-6000	ORING RETAINER
5	1	217A-6000	O-RING
6	1	234-6000	SHIFTING CYLINDER
7	1	239-6000	CYLINDER MOUNT BRACKET
8	2	6 CTX	1/4" MNPT X 3/8" MJIC MALE ELBOW
9	1	M117008	1-3/4" MOUNTING BRACKET



*Page intentionally left blank*




**3000-65000-03**  
**Rotating Head Guard Assembly**

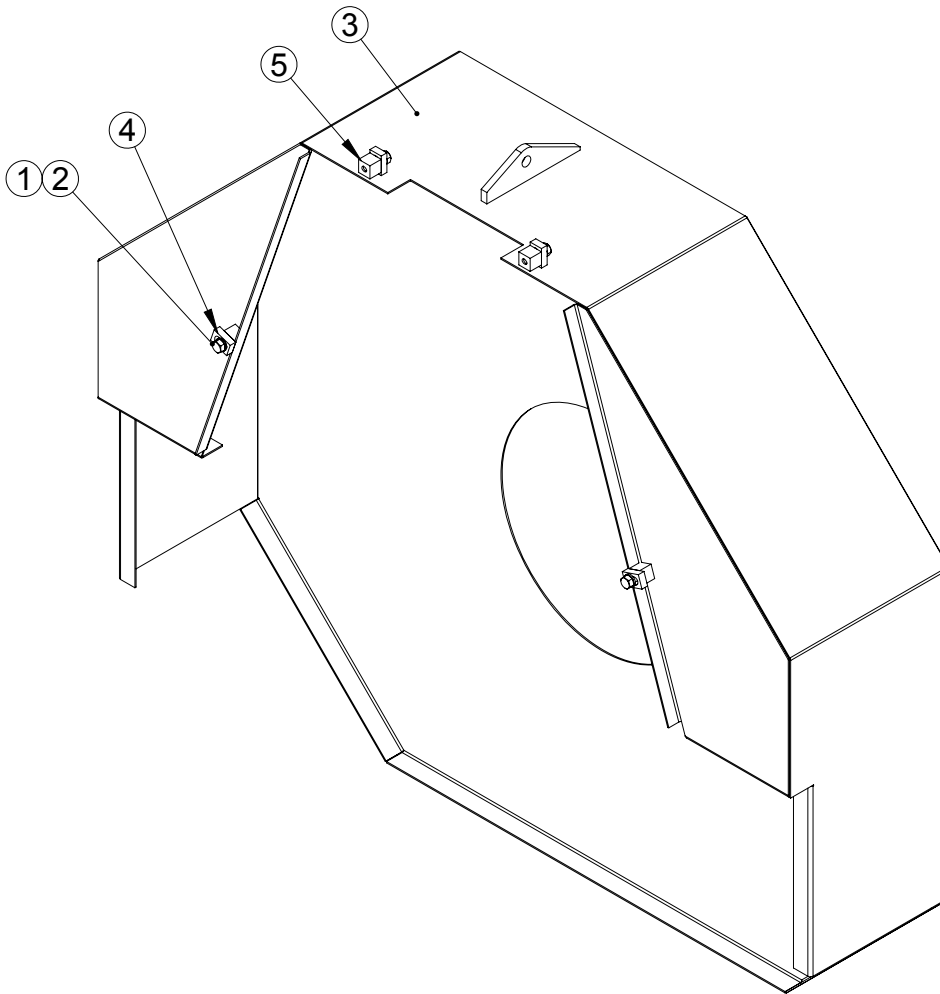


Item #	Qty.	Part Number	Part Name
1	4	1103	1/2" LOCKWASHER
2	4	1112	1/2"-13 x 1 1/2" HHCS
3	1	3100-6500-03	16" ROTATING HEAD GUARD WELDMENT
4	2	3105-6500	1/2" MOUNT TAB
5	2	3105A-6500	1" MOUNT TAB

**250-6500-16**  
**Head Stock Vice Assembly**

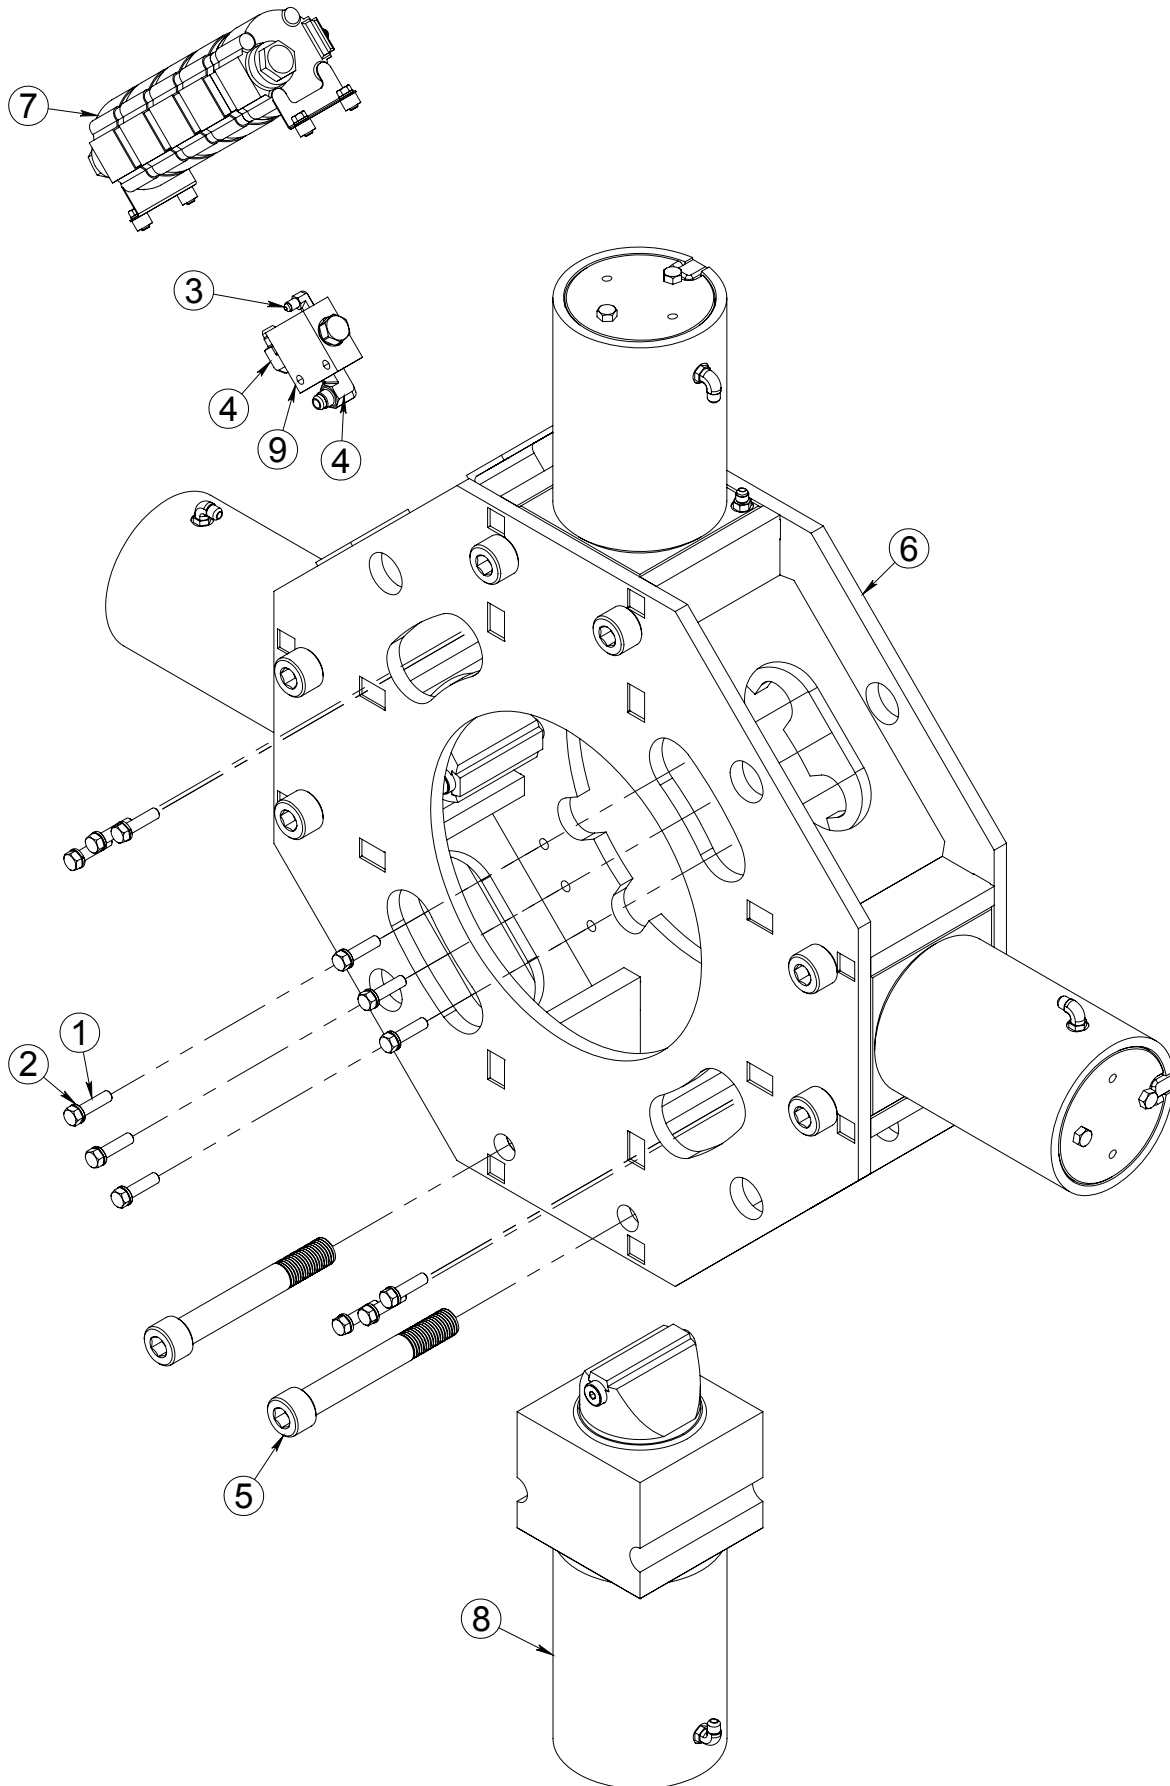


**250-6500-16**  
**Head Stock Vise Assembly**

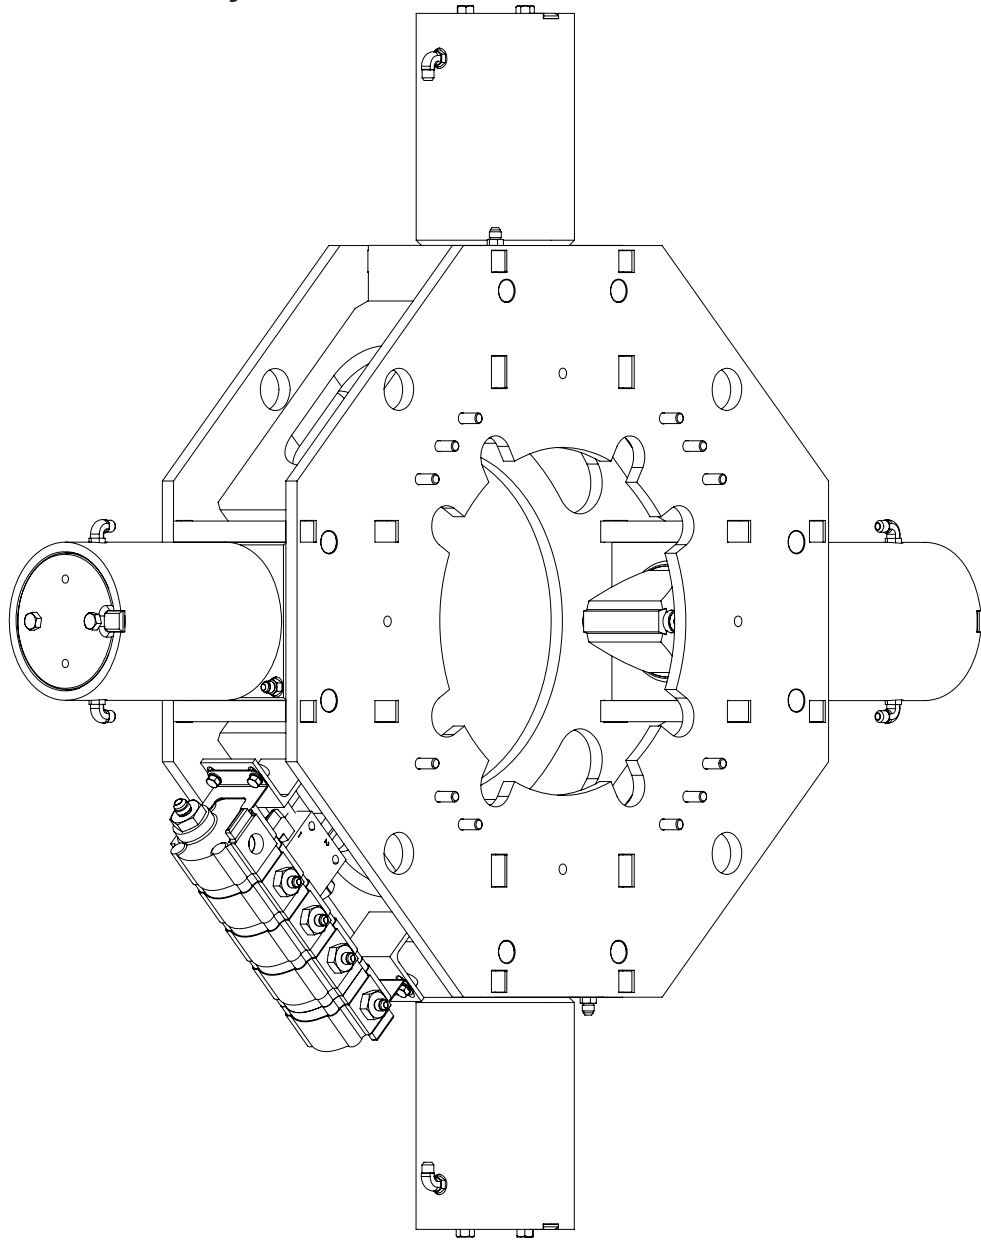


Item #	Qty.	Part Number	Part Name
1	12	1112-A	1/2"-13 x 2" HHCS
2	12	1103	1/2" LOCKWASHER
3	1	1576	90 DEG. 1/4 MNPT X 1/4 MJIC
4	2	1626	90 1/2" MNPT X MJIC/ FG
5	8	1805-A	SHCS 1-1/4"-7 X 9"
6	1	240-6500-16	WISE WELDMENT
7	1	330-6500	DELTA POWER 6 PORT FLOW DIVIDER
8	4	400-3000-1	CLAMP CYLINDER ASSEMBLY
9	1	BUC5524	PILOT OPERATOR CHECK VALVE

**400-3000-1**  
**Clamp Cylinder Assembly**

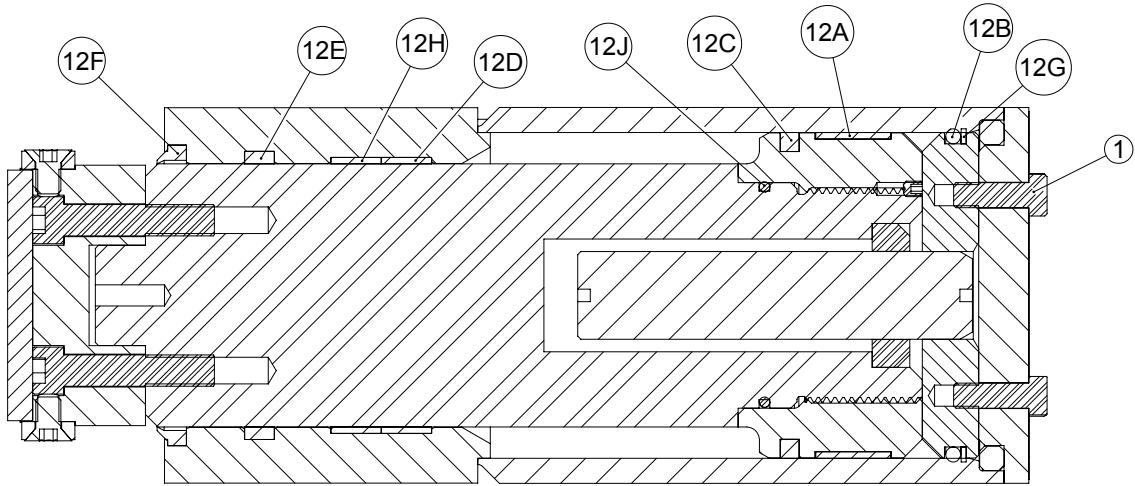


SECTION A-A  
SCALE 1 : 4

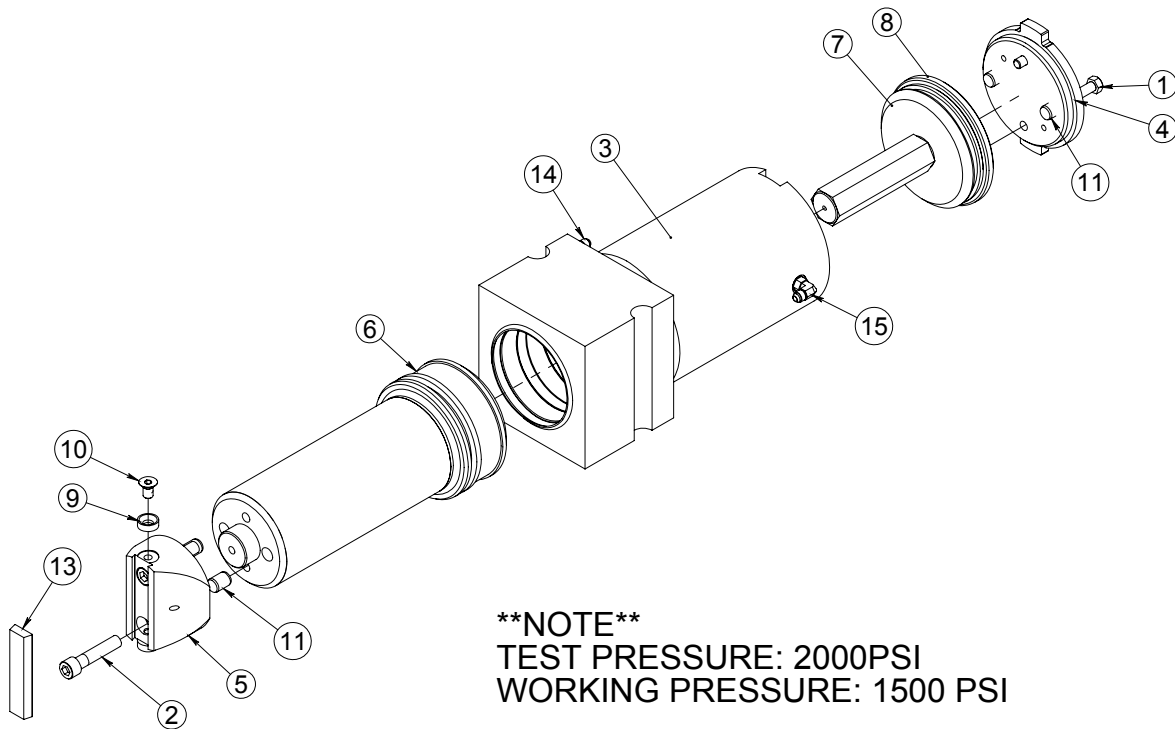

**\*\*NOTE\*\***  
**TEST PRESSURE: 2000PSI**  
**WORKING PRESSURE: 1500 PSI**


**400-3000-1**  
**Clamp Cylinder Assembly**

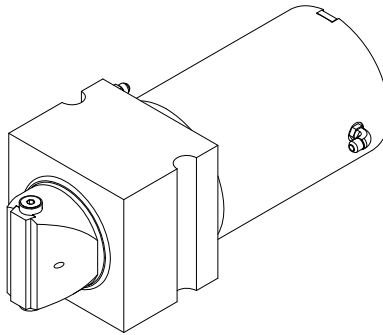


Item #	Qty.	Part Number	Part Name
1	2	1112	1/2"-13 x 1 1/2" HHCS
2	2	260	5/8-11 x 3 SHCS
3	1	400-3000	CYLINDER BLOCK HOUSING WELDMENT
4	1	401-3000-02	END PLATE
5	1	402-3000	STANDARD JAW HOLDER
6	1	403A-3000-2	PISTON ASSEMBLY
7	1	404-3000	SEAL PLATE WELDMENT
8	1	405-3000	SPLIT RING
9	2	408-3000	1/2" WASHER
10	2	91253B	SHCS Flat 1/2"-13 x 7/8"
11	4	400-3001	DOWEL PIN, 3/4" X 1" LG
12	1	400C-3000	SEAL KIT
13	1	DTI1602	1.250W X .500T X 5.000L
14	1	1717	3/8 MJIC X O-RING BOSS ADAPTER STRAIGHT
15	2	1687	3/8" O-RING x 3/8" MJIC ELBOW

SEALS KIT		
12A	W65001500	WEAR BAND
12B	BN70437	O-RING
12C	PS1800-104	PISTON SEAL
12D	W55001000	WEAR BAND
12E	2500-5250-562	ROD SEAL
12F	D-5250	WIPER SEAL
12G	8-436	O-RING BACK UP
12H	W55001000	WEAR BAND
12J	2-346	O-RING

**500-6012-12**  
**12 ft. Skid Assembly**

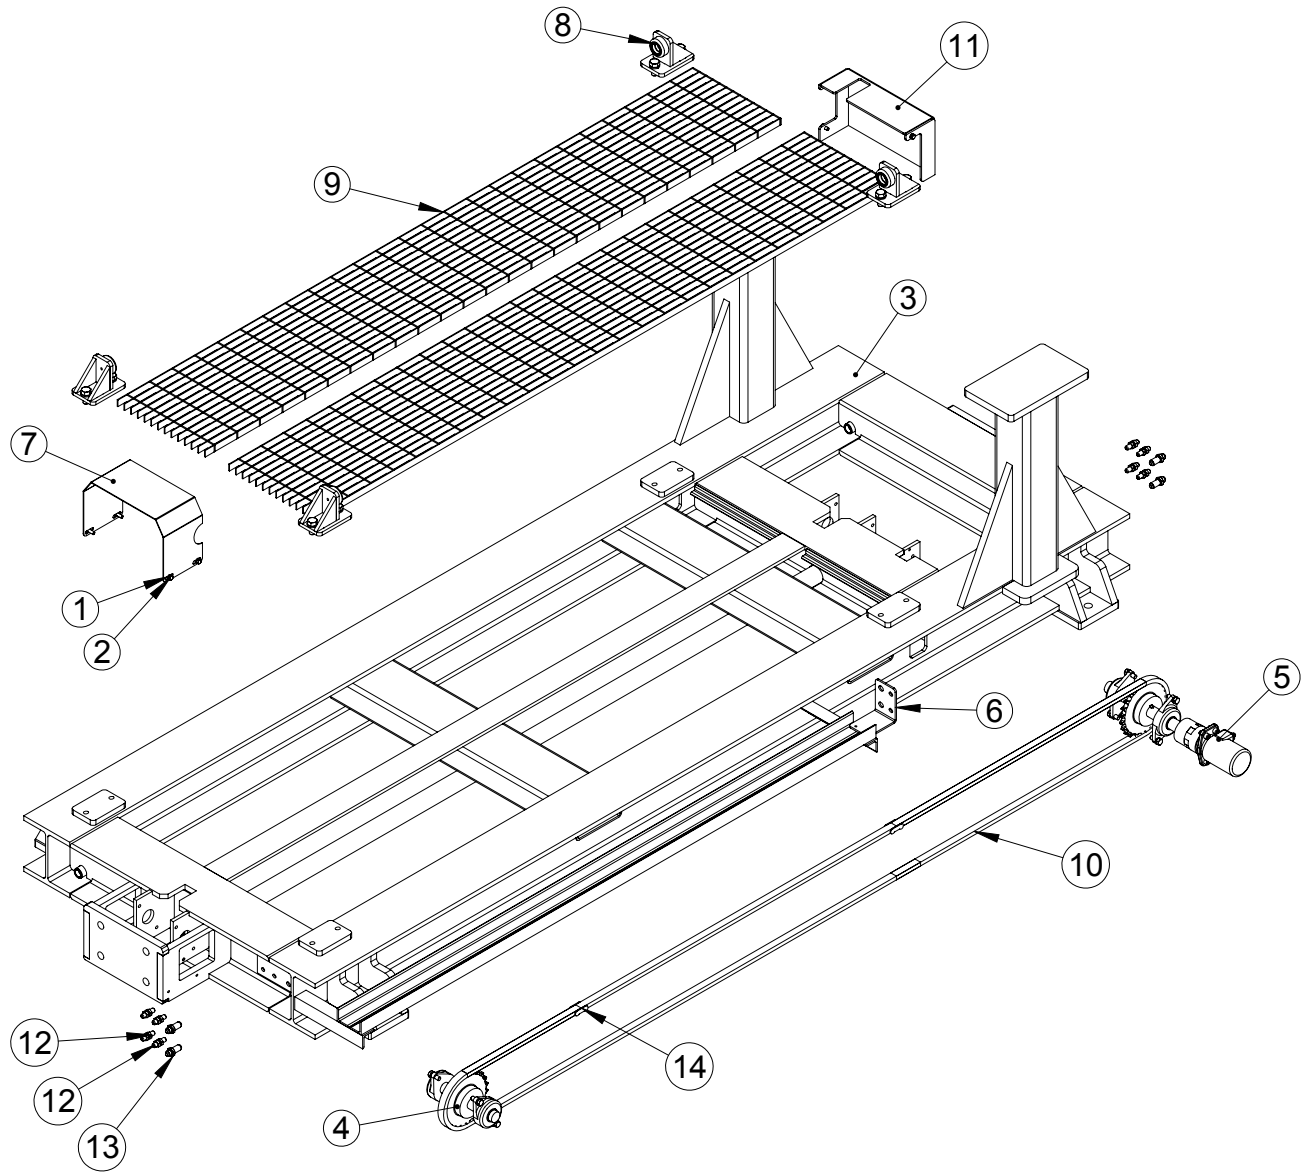


**500-6012-12**  
**12 ft. Skid Assembly**

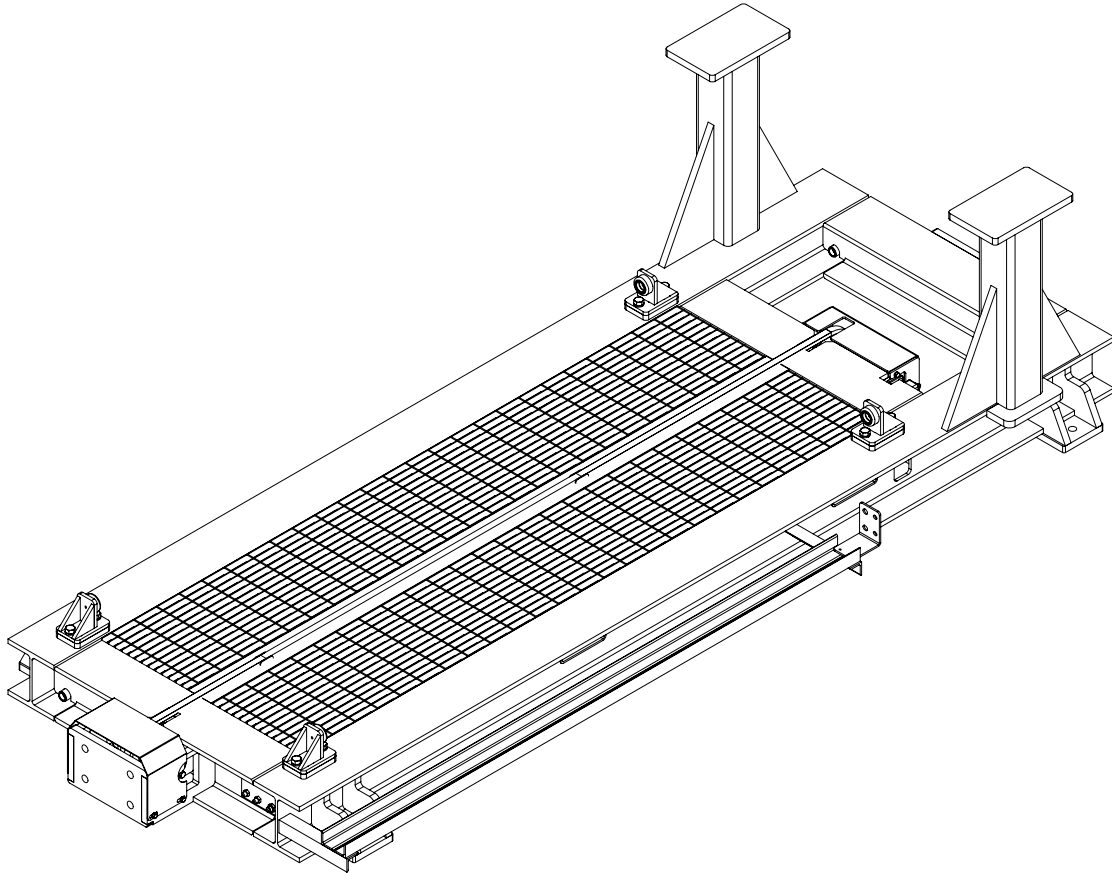

Item #	Qty.	Part Number	Part Name
1	4	1027	WASHER, LOCK 3/8"
2	4	1047	3/8"-16 X 1" HHCS
3	1	500A-6012-12	12 FOOT SKID WELDMENT FOR RP6012
4	1	508-3000-1	IDLER SPROCKET ASSEMBLY
5	1	509-3000-1	DRIVE SPROCKET ASSEMBLY
6	1	522-6000	FIXED BULKHEAD PLATE
7	1	530-3500	SPROCKET COVER
8	4	540-3000	BUMPER STOP ASSEMBLY
9	2	552A-6516-12	LONG GRATING
10	3	556-7000	10' TRAVEL CHAIN
11	1	571-6500-1	SPROCKET COVER ASSEMBLY
12	8	WTX	3/8" MJIC X 3/8" MJIC BULKHEAD CONN
13	4	WTX-S	1/2" MJIC BULKHEAD FITTING
14	2	80CL	MASTERLINK 80C/L


# 508-3000-1 Idler Sprocket Assembly

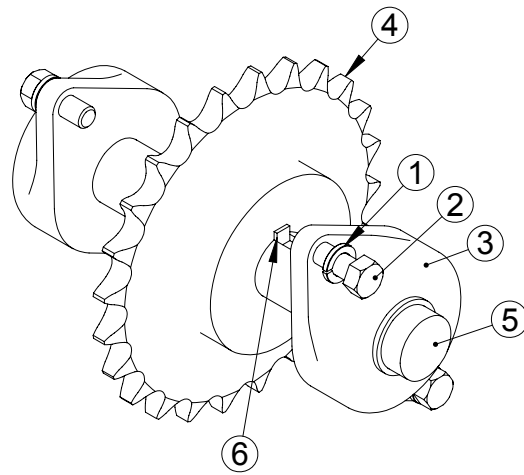

Item #	Qty.	Part Number	Part Name
1	4	1103	1/2" LOCKWASHER
2	4	1111	1/2"-13 x 1 1/4" HHCS
3	2	508-3000	1 1/2" BEARING
4	1	509-3000	TRAVEL SPROCKET
5	1	510B-3000	TRAVEL SPROCKET SHORT SHAFT
6	1	510C-3000	TRAVERSE SPROCKET KEY




# 509-3000-1 Drive Sprocket Assembly

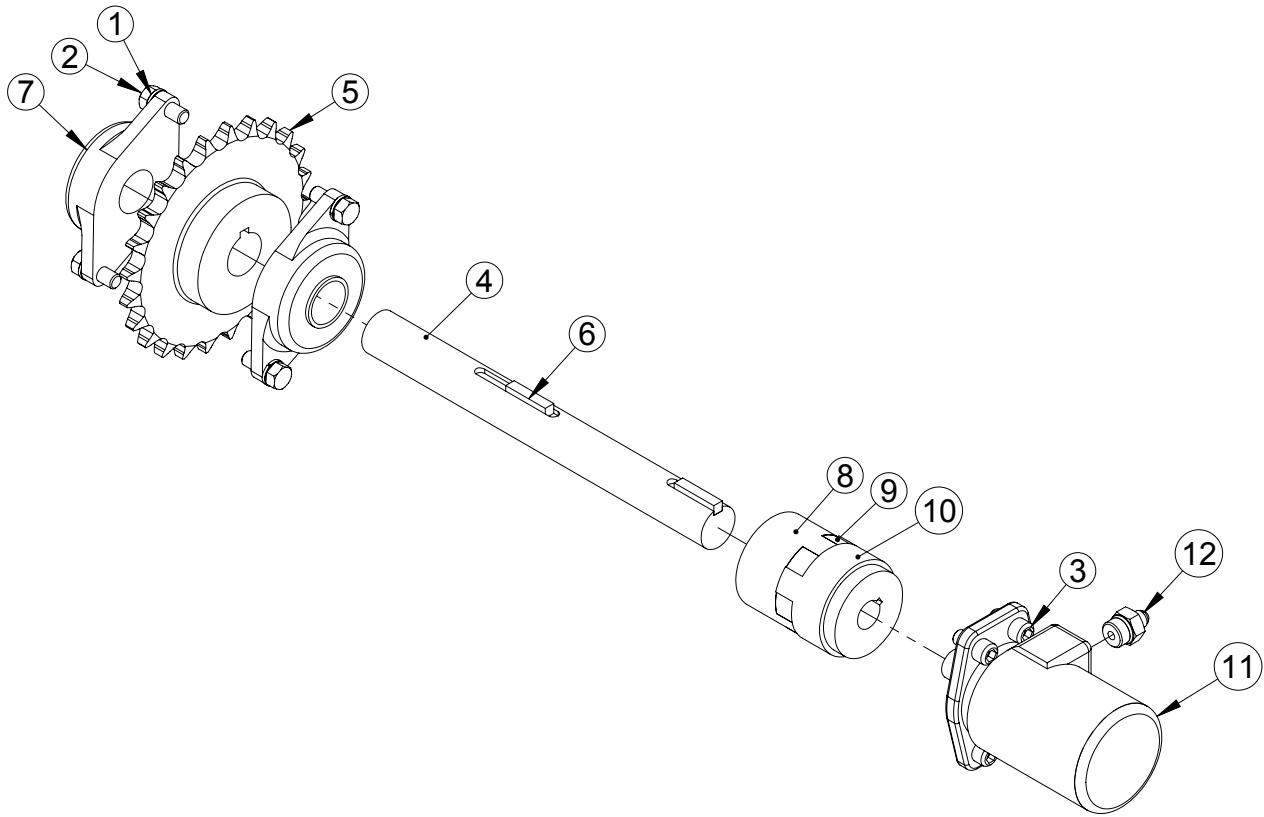


Item #	Qty.	Part Number	Part Name
1	4	1103	1/2" LOCKWASHER
2	4	1111	1/2"-13 x 1 1/4" HHCS
3	4	246	1/2-13 x 1 SHCS
4	1	502B-6500	TRAVEL SPROCKET SHAFT
5	1	509-3000	TRAVEL SPROCKET
6	2	510C-3000	TRAVERSE SPROCKET KEY
7	2	508-3000	1 1/2" BEARING
8	1	515A-3000	1 1/2" L-COUPLING
9	1	515C-3000	L110 SPIDER
10	1	515B-3000	MODIFIED 1" L- COPLING
11	1	511-6500	TRAVEL MOTOR
12	2	6-10_f5ox-s	5/8" ORING X 3/8" MJIC

**1750-3000-1**  
**10' Head Stock Extension Beam Assembly**

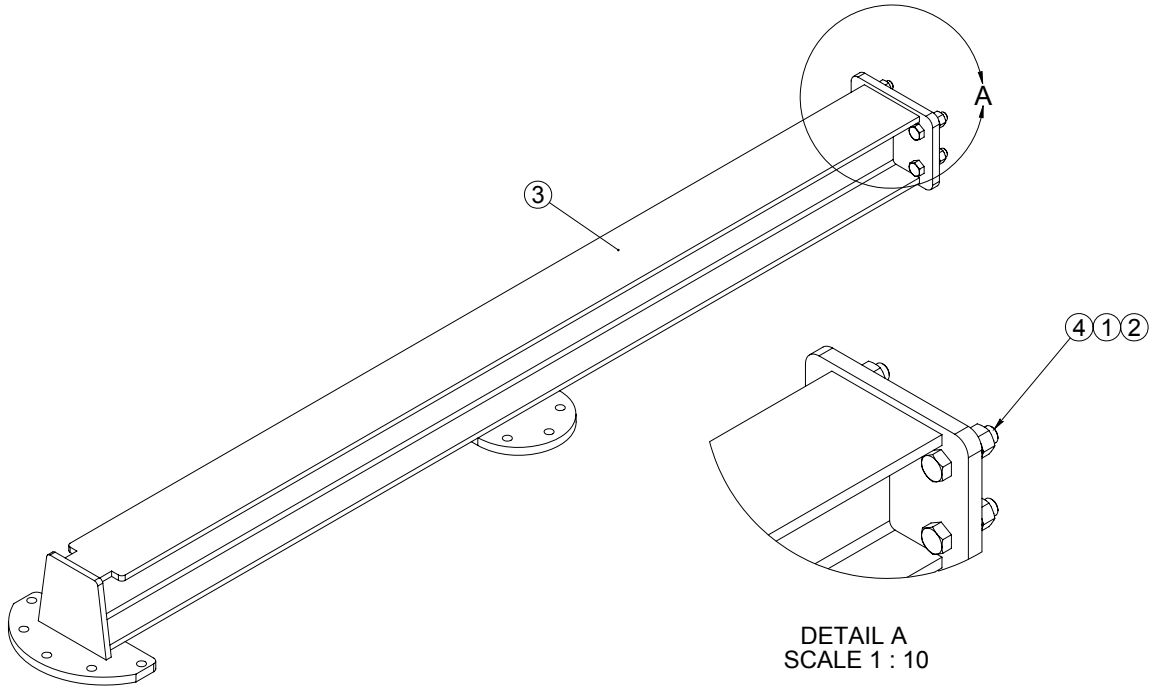


Item #	Qty.	Part Number	Part Name
1	4	1210	1"-8 NUT GR. 8
2	4	1218	1" LW
3	1	1750-3000	10' HEADSTOCK EXTENSION BEAM WELDMENT
4	4	74053	1"-8 X 3 3/4" HHCS

**1150-3000-1**  
**20' Tail Stock Extension Beam Assembly**

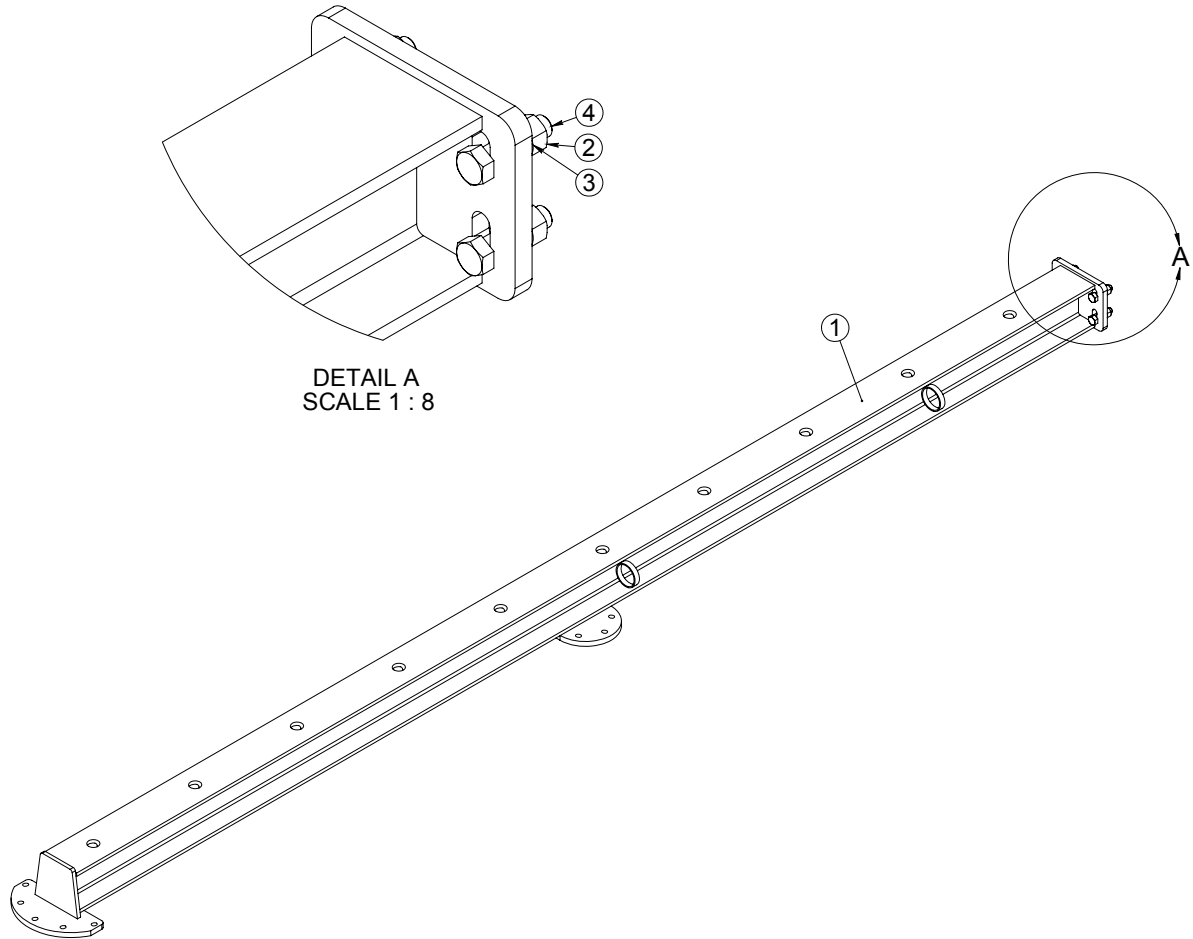


Item #	Qty.	Part Number	Part Name
1	1	1150-3000	20 FEET EXTENSION BEAM WELDMENT
2	4	1210	1"-8 NUT GR. 8
3	4	1218	1" LW
4	4	74053	1"-8 X 3 3/4" HHCS

# 9000-6000 Push Pull Assembly

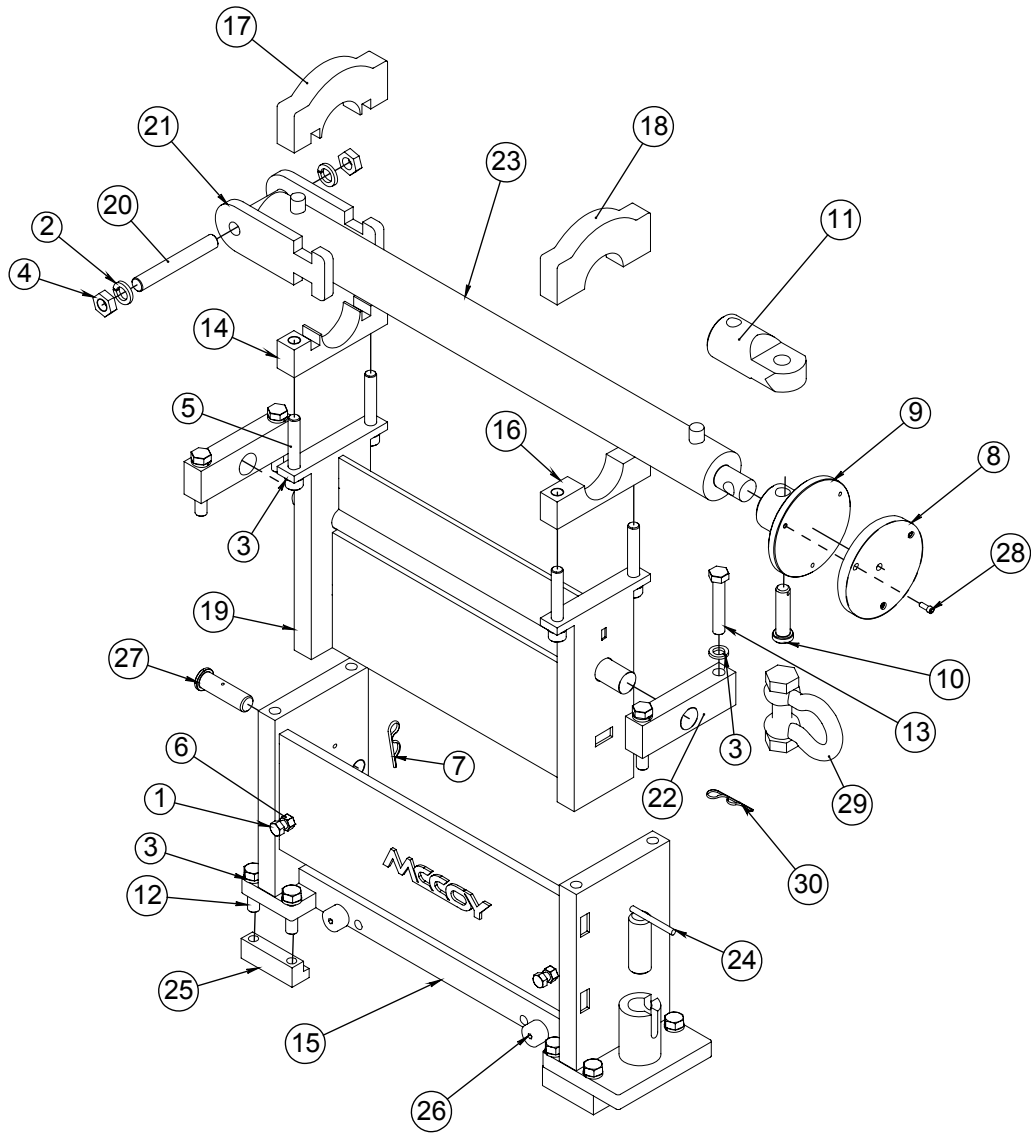


**9000-6000**  
**Push Pull Assembly**

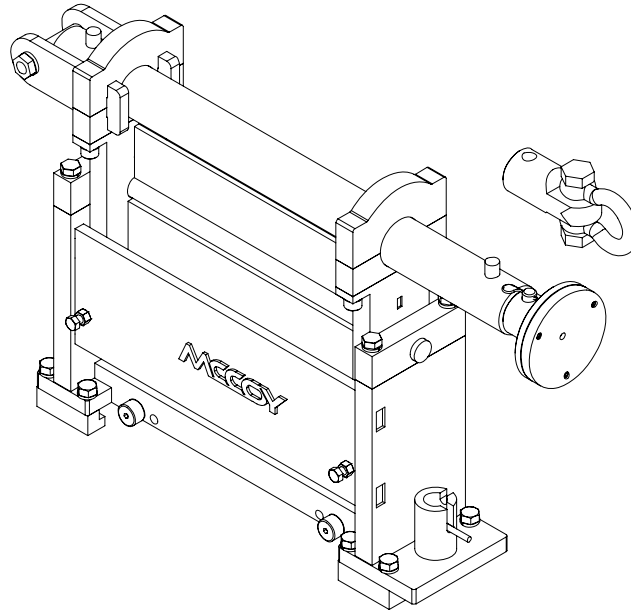

ITEM	QTY	P/N	DESCRIPTION
1	2	1176	HHCS 3/4"-10 X 3" GR8
2	2	1216	LOCKWASHER 1 1/4" ** GRADE 5 ONLY **
3	16	1218	LOCKWASHER 1" GR8
4	2	1268	1 1/4-7 HEX NUT
5	4	12006	1"-8 X 6" SHCS
6	2	1176-A	3/4"-10 HEX NUT
7	1	6009	PIN, HAIRPIN COTTER 0.243" F/ 1 1/8" - 1 1/2" ROUND
8	1	606-7000	COVER TORQUE MACH
9	1	607-7000	PUSH PULL COVER WELDMENT
10	1	607A-6500	PUSH PULL COVER PIN
11	1	608-7000-01	PULL RING
12	8	74072	1"-8 X 3 1/2" HHCS
13	4	73127	HHCS 1"-8 X 5 1/2" GR8 BAIL PIVOT BOLT
14	1	9001-6000	CYLINDER LOWER CLAMP (PUZZLED)
15	1	9001-7000-02	BASE WELDMENT
16	1	9001A-6000	CYLINDER LOWER CLAMP
17	1	9002-4000	CYLINDER UPPER CLAMP (PUZZLED)
18	1	9002A-4000	CYLINDER UPPER CLAMP
19	1	9002-7000	TOP SECTION WELDMENT
20	1	9003-4000	1.25"-7 THREADED ROD
21	2	9004-4000	FISHEYE CYLINDER CLEVIS
22	2	9041-7001	PLATE PIVOT
23	1	9071-7000	4" BORE HYDRAULIC CYLINDER
24	1	9112-7000	LOCKING PIN WELDMENT
25	4	9121-7000	PUSH PULL FEET
26	4	9171-7000-01	2"
27	1	9181-7000	TILT PIN
28	3	1041	3/8-16x1 1/4 SHCS
29	1	1250SHACKLE	1 1/4" 12 TON BOLT TYPE SHACKLE
30	1	6012	HAIRPIN COTTER PIN


**900-3000-2  
Hydraulic Support  
Jack Assembly**

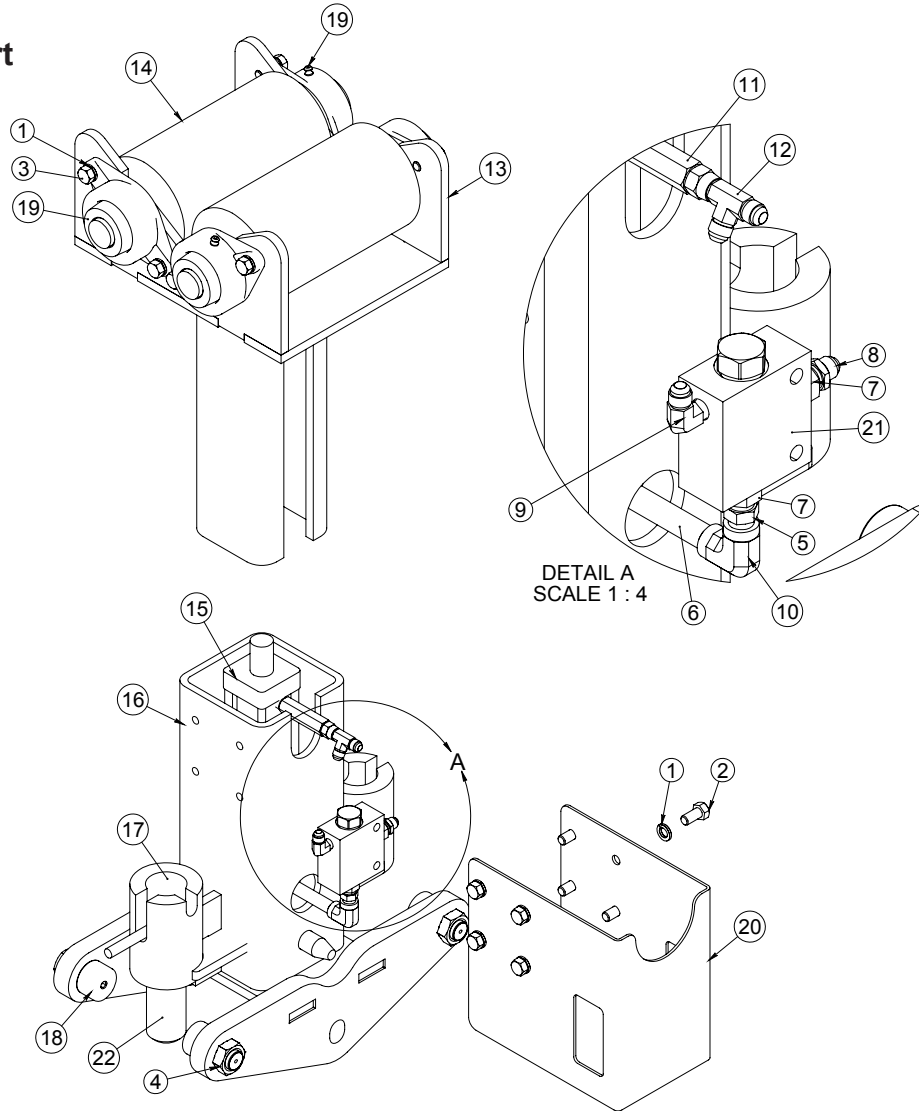

Item #	Qty.	Part Number	Part Name
1	16	1103	1/2" LOCKWASHER
2	8	1110	1/2"-13 x 1" HHCS
3	8	1111	1/2"-13 x 1 1/4" HHCS
4	4	1323	1-14 NYLOCK JAM NUT (1323)
5	1	1457	3/8" HEX NIPPLE
6	1	1488	3/8" X 4-1/2" PIPE NIPPLE
7	2	1491	REDUCER BUSHING 1/2" X 3/8"
8	1	1570	3/8" MNPT X 3/8" MJIC STRAIGHT
9	1	1576-A	1/4" MNPT x 3/8" MJIC ELBOW
10	1	1580	90 3/8" F X F NPT
11	1	2404-LL-06-06	3/8" MJIC X 3/8" MNPT ST. EXTRA LONG
12	1	6 R6X-S	3/8" FJIC X 3/8" MJIC RUN TEE
13	1	901-3000	TOP SUPPORT WELDMENT
14	2	901A-3000-1	RED ROLLER
15	1	901D-3000-2	2" BORE CYLINDER WITH 8" STROKE
16	1	902-3000	BOTTOM SUPPORT WELDMENT
17	1	902B-3000-1	1" X 7 3/4" HITCH PIN
18	4	902D-3000-1	1 3/4" CAM FOLLOWER W/ 1" STUD
19	4	508-3000	1 1/2" SUPPORT STAND BEARING
20	1	905-3000	SUPPORT STAND VALVE COVER
21	1	BUC5524	PILOT OPERATOR CHECK VALVE
22	1	9112-7000-01	LOCKING PIN WELDMENT

# RP5047

## Control Console / Power Unit Assembly

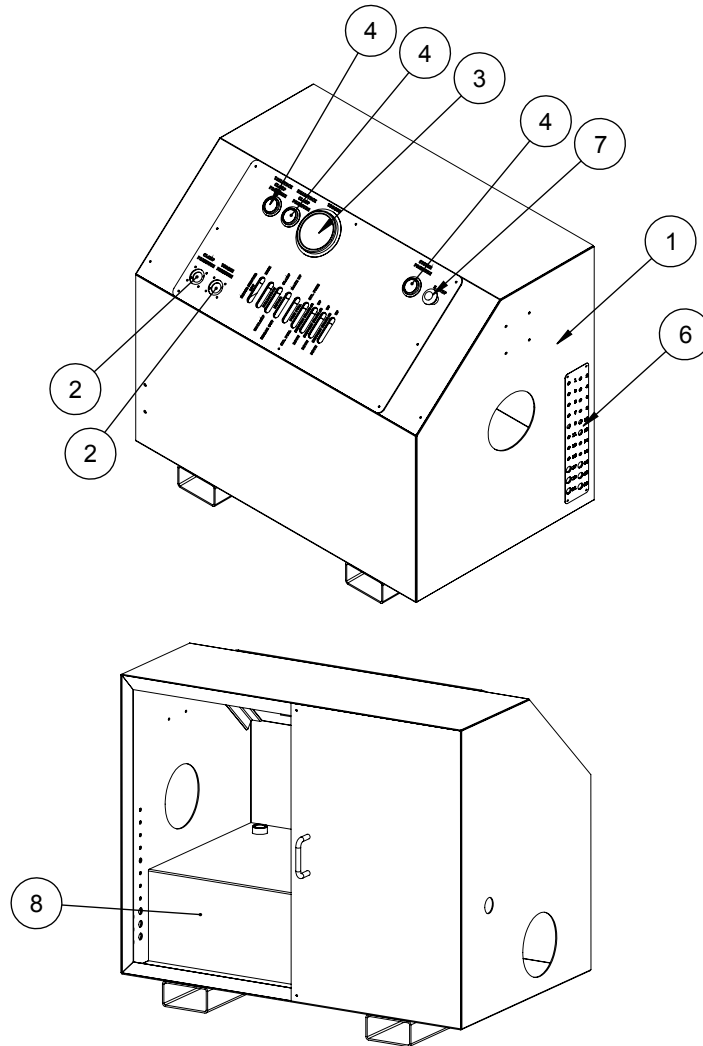

Item #	Qty.	Part Number	Part Name
1	1	100-6500	CONSOLE WELDMENT
2	2	130-6500	PRESSURE CONTROL VALVE
3	1	132-6500	0-1000 PSI GAUGE
4	3	133-6500	0-3000 PSI GAUGE
5	1	150-7000-16	TOP COVER PLATE
6	1	152-6500	BULKHEAD COVER
7	1		STOP BUTTON
8	1		ELECTRIC POWER UNIT



*Page intentionally left blank*



# TROUBLE SHOOTING

## HYDRAULIC SYSTEM

### Hydraulic Pump Making Excessive Noise:

<u>Problem</u>	<u>Solution</u>
A) Restricted or clogged intake line	Clean line, check for contamination.
B) Contaminated fluid	Flush system change fluid.
C) Restricted vent	Clean or replace air vent.
D) Air in fluid	Check for leaks and be certain fluid suction in tank is well below hydraulic fluid in reservoir.
E) Damaged or worn parts	Repair or replace damaged parts, check fluid for contamination.
F) Excessive RPM (I/C engines only)	Check PTO, gears and recommended speed to assure proper pump is in-stalled for operation.
G) Increased friction	Make sure pump has been assembled using correct torque valves.
H) Damaged or worn relief valve	Replace relief valve.
I) Damaged or worn check valve	Replace check valve.
J) Restricted discharge	Check to make sure relief valve is set to proper pressure.
K) Valve system restricted	Inspect and repair or replace defective parts, check system for contamination.
L) High operating temp	Check for low hydraulic oil level, inspect and replace dirty oil filters, check for restrictions to return circuit

### Excessive Wear to Hydraulic Components:

<u>Problem</u>	<u>Solution</u>
A) Fluid contamination	Flush fluid system, replace with new fluid.
B) Components misaligned	Inspect and realign
C) High operating pressures	Gauge and set to proper pressure.
D) Exhausted fluid (depletion of additives)	Flush fluid system, replace with new fluid.
E) Air in fluid	Check for leaks, and be certain fluid suction in tank is well below hydraulic fluid in reservoir.

# TROUBLE SHOOTING

## HYDRAULIC TONG SECTION

### Problem

- A) Shortened bearing life

### Solution

Check alignment, insure proper lubrication to non-sealed bearings.

## Slow Tong Speed:

### Problem

- A) Restricted supply line
- B) Low fluid level
- C) Air leak
- D) Pump speed insufficient
- E) Damaged or worn equipment
- F) Pump not primed
- G) Low or no flow from supply line

### Solution

Verify proper hi/low speed setting. Clear supply line and check intake on reservoir.

Add fluid to proper volume.

Locate and repair leak.

Assure proper pump speed for application.

Isolate pump and check pressure to determine whether motor or pump is defective. Repair or replace defective part.

Check fluid viscosity and restrictions of intake line. Replace fluid if inadequate for operating temperature.

Check to assure couplings are securely fastened.

## Insufficient Torque:

### Problem

- A) Relief valve malfunctioning
- B) Damaged or worn pump parts
- C) Slow pump speed
- D) Improper system fluid
- E) Directional control valve set improperly
- F) Damage to motor
- G) Restriction of supply line, excessive back pressure
- H) Defective gauge or load cell

### Solution

Relief set too low, broken valve spring, contamination or defective seals.

Inspect, repair or replace.

Assure proper pump speed for application.

Check fluid viscosity and replace fluid if inadequate for operating temperature.

Check relief and directional control valve. Neutral should return slightly to reservoir.

Inspect, repair or replace.

Check to assure couplings are securely fastened.

Inspect, repair or replace. Assure unit has been calibrated to proper arm length. NOTE: When using **CLINCHER®** integral backup system, it is the length of backup arm, NOT the tong arm length.

# TROUBLE SHOOTING

## Failure to Grip Tubulars:

<u>Problem</u>	<u>Solution</u>
A) Jaws move out from neutral, but fail to penetrate	Inspect size of both the die holder and dies. Verify range at console and replace with dies compatible with tubular range.
B) Jaws fail to move out of neutral	Inspect and replace defective cylinders for debris or damage. Remove rust and debris from jaws, and jaw pockets. Repair, replace and lubricate as needed.
C) Tong will not release from tubular	Confirm system pressure is adequate to unlock valve. Inspect Directional Control Valves.
D) Motor runs but Tong does not rotate	Inspect and replace defective chain, sprocket or gear reducer.
E) Tong binds under light load	Inspect and replace defective parts. Damaged hub or bearings.
F) Tong rotates while control lever is in neutral	Replace control valve.
G) Hydraulic fluid leaking from motor	Repair or replace motor. Verify case drain is open to reservoir.
H) Clamping cylinders are not synchronized	Resync by fully retracting and extending through several cycles. Inspect damaged lines & fittings, check for other restrictions. Individually check each cylinder for fluid leakage. Replace flow divider.

## HYDRAULIC BACKUP SYSTEM

### Backup Fails to Hold Tubular:

<u>Problem</u>	<u>Solution</u>
A) Incorrect die for size tubular	Check pipe O.D. and match die size to pipe O.D.
B) Dies have material compacted in tooth area	Clean dies with wire brush and inspect for worn teeth. Replace with new dies if necessary.
C) Power unit pressure set incorrectly	Inspect relief valve on power unit to make sure enough system pressure is being delivered to backup.
D) Counter balance valve not holding pressure	Remove side plates on backup. Bench test and replace the counter balance valve defective.
E) Internal leakage in backup cylinder	Disconnect lines and bench test cylinder. Repair or replace as necessary.
F) Jaws will not retract	Counter balance valve is stuck. Replace counter balance valve.
G) External leakage of cylinder	Repair or replace cylinder.
H) Control valve set to neutral, but jaws extend	Inspect control valve for damage and/or incorrect spool. Repair or replace as necessary.

# TROUBLESHOOTING

## Problem

## Solution

I) Excessive hydraulic leaks

The presence of some hydraulic oil on hydraulic cylinder rods and swivels is expected and required to lubricate rod seals. Continuous dripping or stream indicates a failure. If failure is suspected, replace all cylinder seals.

J) Die insert slippage and breakage

Ensure clamping pressure is adequate. Ensure holder and dies are appropriate for pipe size. Ensure dies are aligned with pipe centerline. Ensure dies are not gripping on tooljoint hardbanding.

